

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kohler](#) /

› [KOHLER 1261404-VS Faucet Spray Head Instruction Manual](#)

## Kohler 1261404-VS

# KOHLER 1261404-VS Faucet Spray Head Instruction Manual

Genuine Replacement Part for KOHLER Kitchen Faucets

## INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of your KOHLER 1261404-VS Faucet Spray Head. This genuine KOHLER part is designed to ensure optimal performance and longevity of your KOHLER kitchen faucet.

## PRODUCT OVERVIEW

The KOHLER 1261404-VS is a genuine replacement spray head for compatible KOHLER kitchen faucets. It features a vibrant stainless steel finish and is engineered for durability and seamless integration.

## Key Features

- Genuine KOHLER part, ensuring compatibility and performance.
- Vibrant Stainless Steel finish for aesthetic appeal.
- Designed for easy installation.
- Constructed with premium materials for enhanced durability.



Image showing the KOHLER 1261404-VS Faucet Spray Head in Vibrant Stainless finish, viewed from an angled perspective, highlighting its sleek design and spray nozzle.



Side view of the KOHLER 1261404-VS Faucet Spray Head, illustrating the ergonomic lever for spray mode selection.



Rear view of the KOHLER 1261404-VS Faucet Spray Head, showing the connection point for the faucet hose.



Close-up view of the nozzle of the KOHLER 1261404-VS Faucet Spray Head, detailing the spray holes and aerator screen.

## SETUP AND INSTALLATION

This section provides general guidance for replacing your KOHLER faucet spray head. For detailed instructions specific to your faucet model, please refer to your original faucet manual or consult a qualified plumber.

### Tools Required

- Adjustable wrench or pliers
- Towel or cloth

### Installation Steps

1. **Turn off water supply:** Locate the hot and cold water supply valves under your sink and turn them off completely.
2. **Disconnect old spray head:** Place a towel under the faucet to catch any drips. Unscrew the old spray head from the pull-down hose. This usually involves twisting counter-clockwise.
3. **Prepare new spray head:** Ensure the new KOHLER 1261404-VS spray head is clean and free of debris.
4. **Attach new spray head:** Carefully screw the new spray head onto the pull-down hose by turning clockwise. Hand-tighten first, then use an adjustable wrench or pliers for a final snug turn, being careful not to overtighten.
5. **Check for leaks:** Turn the water supply back on slowly. Check all connections for any leaks. If leaks occur, tighten the connection slightly more.
6. **Test operation:** Turn on the faucet and test both the stream and spray functions of the new spray head.

Your browser does not support the video tag.

Video demonstrating the features and functionality of the KOHLER Faucet Spray Head, including switching between stream and spray modes. This video is provided by Amazon Product Imaging.

## OPERATING INSTRUCTIONS

The KOHLER 1261404-VS Faucet Spray Head offers two primary water flow functions:

### Stream Mode

To activate the steady stream of water, ensure the toggle button on the spray head is in the default position (usually flush with the body).

### Spray Mode

To switch to the wide spray pattern, press the toggle button located on the side of the spray head. Press the button again to return to stream mode.

## MAINTENANCE

Regular cleaning and maintenance will help prolong the life and performance of your spray head.

## Cleaning the Spray Head

- To remove mineral buildup or debris from the spray nozzles, gently rub the rubber nozzles with your finger or a soft brush.
- For general cleaning, wipe the spray head with a soft, damp cloth and a mild soap solution. Avoid abrasive cleaners, scouring pads, or chemicals that could damage the finish.

## Preventing Clogging

- Periodically remove the spray head and flush it with water to clear any internal debris.
- If water flow is significantly reduced, the aerator screen (if present) may need cleaning or replacement.

## TROUBLESHOOTING

### Reduced Water Flow

- **Check for clogs:** Inspect the spray nozzles and aerator for mineral buildup or debris. Clean as described in the Maintenance section.
- **Verify water supply:** Ensure both hot and cold water supply valves are fully open.

### Leaks at Connection Point

- **Tighten connection:** Gently tighten the connection between the spray head and the hose. Do not overtighten.
- **Check washer/gasket:** Ensure the rubber washer or gasket is properly seated and not damaged. Replace if necessary.

### Difficulty Switching Spray Modes

- **Clean toggle button:** Ensure the toggle button is free of debris or mineral buildup that might impede its movement.
- **Internal issue:** If cleaning does not resolve the issue, the internal mechanism may be worn. Consider replacing the spray head.

## SPECIFICATIONS

Feature	Detail
Brand	Kohler
Model Number	1261404-VS

Feature	Detail
Material	Stainless Steel
Finish Type	Polished
Color	Vibrant Stainless
Item Weight	3.52 ounces
Product Dimensions	2.5 x 5.05 x 3.05 inches
Thread Size	55/64-27

## WARRANTY AND SUPPORT

As a genuine KOHLER part, this product is covered by KOHLER's standard warranty. For specific warranty details, please refer to the warranty information provided with your original KOHLER faucet or visit the official KOHLER website.

For technical assistance or further support, please contact KOHLER customer service.

[Visit the KOHLER Store on Amazon](#)

This manual is intended for informational purposes only. Always exercise caution when performing maintenance or installation.