

[Manuals.plus](#) /

> [Oypla](#) /

> Oypla 3m x 3m Garden Gazebo Instruction Manual

Oypla 3m x 3m Gazebo

Oypla 3m x 3m Garden Gazebo Instruction Manual

Model: 3m x 3m Gazebo

INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your Oypla 3m x 3m Garden Gazebo. Please read all instructions carefully before beginning assembly and retain this manual for future reference. This gazebo is designed for temporary outdoor use, such as garden parties, BBQs, and events, providing shelter from sun and light rain.

IMPORTANT SAFETY INFORMATION

- **Assembly Requirement:** A minimum of 4 people are required for safe and efficient assembly. Attempting to assemble with fewer individuals may result in injury or damage to the product.
- **Weather Conditions:** This gazebo is designed for temporary use in calm weather conditions. Do not use in strong winds, heavy rain, snow, or thunderstorms. Disassemble and store the gazebo during adverse weather to prevent damage and ensure safety.
- **Anchoring:** Always secure the gazebo using the provided ground stakes and guy ropes. For additional stability, especially on uneven ground or in areas prone to gusts, consider using additional weights or anchors (not included).
- **Location:** Choose a flat, level surface for assembly. Ensure there are no overhead obstructions like power lines or tree branches. Keep away from open flames, heaters, and other heat sources.
- **Children and Pets:** Keep children and pets away from the assembly area. Do not allow children to play unsupervised around or inside the gazebo.
- **Maintenance:** Regularly inspect all components for wear or damage. Do not use if any parts are broken or missing.
- **Disassembly:** Follow disassembly instructions carefully. Ensure all components are clean and dry before storage to prevent mold and corrosion.

PARTS LIST

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, do not

proceed with assembly. Contact customer support for assistance.

- Steel Frame Tubes (various lengths and connectors)
- 100g PE Waterproof Cover (Roof)
- Zipped Door Panel
- Windowed Side Panels (x2)
- Solid Side Panels (quantity may vary based on configuration)
- Ground Stakes (x4)
- Guy Ropes (x4)



Image: Illustration of the steel frame components before assembly.



Image: Interior view showing the assembled roof frame structure.

SETUP INSTRUCTIONS

Note: This assembly requires a minimum of 4 people.

1. **Prepare the Area:** Choose a flat, clear, and level outdoor space. Remove any sharp objects or debris.
2. **Unpack Components:** Carefully unpack all parts and lay them out on the ground, verifying against the parts list.
3. **Assemble the Frame:** Connect the steel tubes according to the diagram (refer to product packaging or online resources for detailed frame diagrams if available). Start by assembling the roof frame, then attach the leg poles. Ensure all connections are secure.
4. **Attach the Roof Cover:** With the help of at least four people, carefully lift the frame. Drape the 100g PE waterproof cover over the assembled roof frame. Ensure the cover is centered and evenly distributed. Secure the cover to the frame using any integrated ties or Velcro straps.
5. **Install Side Panels:** Attach the zipped door panel and the two windowed side panels to the frame using the Velcro attachments. You can choose the placement of these panels as desired. Solid side panels can be installed similarly.
6. **Secure the Gazebo:** Insert the 4 ground stakes through the feet of the gazebo and firmly into the ground. Attach the 4 guy ropes to the corners of the roof frame and stake them into the ground at an angle, ensuring they are taut to provide stability.



Image: The Oypla gazebo fully assembled with two windowed side panels.



Image: The Oypla gazebo fully assembled, showing one windowed side and an open front.



Image: The Oypla gazebo fully assembled, configured with one windowed side and one solid side panel.



Image: A single solid side panel, which can be attached to the gazebo frame.

OPERATING INSTRUCTIONS

Your Oypla gazebo is designed to provide temporary shelter. Follow these guidelines for optimal use:

- **Entry and Exit:** Use the zipped door panel for easy entry and exit. Ensure the zipper is operated smoothly to prevent damage.
- **Ventilation:** The windowed side panels can be rolled up or removed to provide ventilation. Adjust as needed based on weather conditions.
- **Weather Monitoring:** Continuously monitor weather conditions. If strong winds, heavy rain, or other severe weather is forecast, disassemble the gazebo immediately.
- **Stability Check:** Periodically check that ground stakes and guy ropes remain secure and taut. Re-tension if necessary.

MAINTENANCE

- **Cleaning the Cover:** Clean the PE cover with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners, as these can damage the material. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** Wipe down the steel frame with a damp cloth to remove dirt and debris. Ensure the frame is dry before storage to prevent rust.
- **Storage:** When not in use, disassemble the gazebo and store all components in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure the cover is completely dry to prevent mold and mildew.
- **Inspection:** Before each use, inspect all frame components for bends, cracks, or corrosion. Check the cover for tears, holes, or weakened seams. Replace any damaged parts immediately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Gazebo is unstable or wobbly.	Insufficient anchoring; uneven ground; loose frame connections.	Ensure all ground stakes and guy ropes are securely fastened and taut. Move to a level surface. Check all frame connections are fully engaged. Consider additional weights.
Water pooling on the roof.	Cover not taut enough; improper assembly of roof frame.	Re-adjust the roof cover to ensure it is stretched tightly over the frame. Verify that all roof frame poles are correctly assembled and seated.
Difficulty assembling the frame.	Attempting assembly with too few people; incorrect part orientation.	Ensure at least 4 people are assisting with assembly. Refer to the assembly diagram to confirm correct orientation of poles and connectors.
Side panels do not fit correctly.	Panels are not aligned properly; Velcro attachments are not fully engaged.	Ensure the gazebo frame is fully extended and square. Re-align panels and firmly press Velcro attachments into place.

SPECIFICATIONS

- **Dimensions:** 3m x 3m (Length x Width)
- **Cover Material:** 100g PE (Polyethylene)
- **Frame Material:** Steel Tubes (24 x 18 x 18mm)
- **Water Resistance:** Waterproof
- **Color:** White
- **Assembly Required:** Yes
- **Approximate Item Weight:** 8.35 Kilograms

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to your purchase documentation or contact the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.

Oypla 3m x 3m Garden Gazebo Instruction Manual © 2026. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07CQQV51C>

More documents and user manuals: <https://manuals.plus/>