

Seneca River Trading 1610043

Instruction Manual

BISSELL PROHEAT REVOLUTION 2X CLEAN TANK WITH CAP

Model: 1610043 | Brand: Seneca River Trading

- Product Overview
- Compatibility
- Setup & Installation
- Operation
- Maintenance
- Troubleshooting
- Specifications
- Support

1. Product Overview

This document provides instructions for the Bissell ProHeat Revolution 2X Clean Tank with Cap, Model 1610043. This component is a replacement clean water tank designed for specific Bissell carpet cleaning machines. It is constructed from durable plastic and includes a cap for secure sealing and easy refilling of cleaning solution.



Figure 1: Bissell ProHeat Revolution 2X Clean Tank with Cap. This image displays the transparent clean water tank with its gray top and yellow cap, designed for Bissell ProHeat Revolution 2X carpet cleaners.

2. Compatibility

The Clean Tank with Cap (Model 1610043) is specifically designed for use with the following models:

- Bissell ProHeat Revolution 2X series carpet cleaners.

Ensure your machine is a Bissell ProHeat Revolution 2X model to guarantee proper fit and functionality.

3. Setup & Installation

Follow these steps to install the clean tank onto your Bissell ProHeat Revolution 2X carpet cleaner:

1. **Preparation:** Ensure the carpet cleaner is unplugged from the power outlet before beginning installation.
2. **Remove Old Tank (if applicable):** If replacing an existing tank, press the tank release button (if present) and lift the old tank straight up and away from the machine.
3. **Position New Tank:** Align the bottom of the new clean tank with the corresponding slot on the carpet cleaner's base.
4. **Secure Tank:** Gently push the tank down until it clicks securely into place. Verify that the tank is firmly seated and does not wobble.
5. **Fill Tank:** Refer to the "Operating Instructions" section for proper filling procedures.

4. Operating Instructions

This section details how to fill and prepare the clean tank for use.

4.1. Filling the Clean Tank

1. **Remove Tank:** Press the tank release button (if present) and lift the clean tank from the machine.
2. **Unscrew Cap:** Twist the yellow cap counter-clockwise to remove it from the tank.
3. **Add Water:** Fill the tank with hot tap water (not boiling) up to the indicated "Water Fill Line."
4. **Add Cleaning Solution:** Pour the recommended amount of Bissell cleaning formula into the tank, up to the "Formula Fill Line." Refer to your carpet cleaner's main manual for specific solution ratios.
5. **Secure Cap:** Replace the yellow cap and twist it clockwise until it is tightly sealed.
6. **Reinstall Tank:** Place the filled clean tank back onto the machine, ensuring it clicks into place.

Important: Always use genuine Bissell cleaning solutions for optimal performance and to avoid damage to your machine.

5. Maintenance

Proper maintenance ensures the longevity and effective operation of your clean tank.

5.1. Cleaning the Tank

- After each use, empty any remaining solution from the clean tank.
- Rinse the tank thoroughly with warm water to remove any residue.
- Clean the cap and its seal to prevent buildup.
- Allow the tank and cap to air dry completely before storing to prevent odors or mildew.

5.2. Storage

Store the clean tank in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure the tank is empty and clean before storage.

6. Troubleshooting

This section addresses common issues related to the clean tank.

Problem	Possible Cause	Solution
Tank leaks during use.	Cap not securely tightened or seal is damaged. Tank not seated correctly.	Ensure the cap is twisted tightly. Check the rubber seal on the cap for damage; replace if necessary. Reinstall the tank, ensuring it clicks firmly into place.
No solution dispensed.	Tank is empty. Tank not seated correctly.	Refill the clean tank with water and solution. Ensure the tank is fully seated and locked into position on the machine.
Tank is difficult to remove or install.	Misalignment or debris.	Ensure no debris is obstructing the tank's seating area. Align the tank carefully with the machine's slot and apply gentle, even pressure. Do not force.

If issues persist, please contact customer support.

7. Specifications

- **Model Number:** 1610043
- **OEM Part Number:** 1610043
- **Material:** Durable Plastic
- **Item Weight:** Approximately 1.26 pounds (0.57 kg)
- **Package Dimensions:** Approximately 13.15 x 10.12 x 7.28 inches (33.4 x 25.7 x 18.5 cm)
- **Compatibility:** Bissell ProHeat Revolution 2X series carpet cleaners
- **Manufacturer:** Seneca River Trading

8. Support

For further assistance, questions, or to inquire about replacement parts not covered in this manual, please refer to the main instruction manual for your Bissell ProHeat Revolution 2X carpet cleaner or contact the manufacturer of your carpet cleaner directly.

For inquiries regarding this specific replacement part (Model 1610043), you may contact Seneca River Trading customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question