

[Manuals.plus](#) /

› [Spin Master](#) /

› Spin Master Paw Patrol Action Figure 6022626 Instruction Manual

Spin Master 6022626

Spin Master Paw Patrol Action Figure Instruction Manual

Model: 6022626

INTRODUCTION

Thank you for purchasing the Spin Master Paw Patrol Action Figure, Model 6022626. This manual provides important information regarding the safe and proper use, maintenance, and care of your new toy. Please read these instructions carefully before use and retain them for future reference. This product is suitable for children aged 3 years and up.

IMPORTANT SAFETY INFORMATION

- **WARNING: CHOKING HAZARD** – Small parts. Not for children under 3 years.
- Adult supervision is recommended during play.
- Inspect the toy regularly for damage. Discontinue use if any parts are broken or detached.
- Keep packaging materials away from children to avoid suffocation hazards.

PACKAGE CONTENTS

Please ensure all items listed below are present in your package:

- 1 x Paw Patrol Action Figure (Model 6022626)
- 1 x Rescue Badge

SETUP

1. Carefully remove the action figure and rescue badge from the packaging.
2. No assembly is required for this product. It is ready for play directly out of the box.
3. No batteries are required for operation.

OPERATING INSTRUCTIONS

Your Paw Patrol Action Figure features a special transforming backpack mechanism, just like in the show!

1. **Transforming Backpack:** To activate the transforming backpack feature, locate the locket on the front of the action figure. Gently press the locket. The backpack will then transform, revealing its tools or gadgets, similar to the character's abilities in the Paw Patrol series.
2. **Resetting the Backpack:** To reset the backpack to its original position, manually fold the components back into place until they click securely.
3. **Rescue Badge:** The included rescue badge can be worn by the child to role-play as a member of the Paw Patrol team.



Image: Spin Master Paw Patrol Action Figure (Model 6022626). This image shows the action figure in its standard pose, highlighting the locket on its chest which activates the transforming backpack feature.

MAINTENANCE

- **Cleaning:** To clean the action figure, wipe it gently with a soft, damp cloth. Do not use harsh chemicals, abrasive cleaners, or immerse the toy in water, as this may damage the product.
- **Storage:** Store the toy in a clean, dry place away from direct sunlight and extreme temperatures to prevent discoloration or damage to the plastic material.

TROUBLESHOOTING

Problem	Solution
Backpack not transforming smoothly.	Ensure the locket is pressed firmly. Check for any obstructions or debris in the mechanism. Gently try to reset the backpack manually.
Figure appears damaged.	Discontinue use immediately. Contact Spin Master customer support for assistance.

SPECIFICATIONS

Model Number: 6022626

Brand: Spin Master

Material: Plastic

Product Dimensions: 18.5 x 5 x 18.5 cm

Item Weight: 100 g

Number of Pieces: 1

Assembly Required: No

Batteries Required: No

Manufacturer Recommended Age: 3 years and up

Special Features: Transforming Backpack

WARRANTY INFORMATION

Spin Master products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty information provided on the product packaging or visit the official Spin Master website. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your Spin Master Paw Patrol Action Figure, please

contact Spin Master Customer Service. Contact information can typically be found on the product packaging or on the official Spin Master website.

Website: www.spinmaster.com