

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Superior Electronics](#) /

› [Superior Electronics SUPTRB007 Universal LG Replacement Remote Control User Manual](#)

Superior Electronics SUPTRB007

Superior Electronics SUPTRB007 Universal LG Replacement Remote Control User Manual

INTRODUCTION

This manual provides instructions for the Superior Electronics SUPTRB007 Universal LG Replacement Remote Control. This remote is designed to be compatible with all LG TVs and Smart TVs manufactured from the year 2000 onwards. It offers a straightforward, ready-to-use solution without requiring any programming.

Key Features:

- Universal compatibility with LG and Smart LG TVs.
- No programming required; simply insert batteries.
- Supports all essential Smart TV and 3D main functions.
- Ergonomic design for comfortable use.

Image: Superior Electronics SUPTRB007 remote control highlighting key features like LG compatibility and ready-to-use functionality.

SETUP

Inserting Batteries

The Superior Electronics SUPTRB007 remote control is designed for immediate use upon battery insertion. No complex programming or code entry is required.

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert two AAA batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Your remote control is now ready to operate your LG TV.



Image: Back view of the remote control, indicating the battery compartment location.

OPERATING INSTRUCTIONS

This remote control replicates the primary functions of an original LG TV remote. Familiarize yourself with the button layout for optimal use.

Basic Functions:

- **Power Button:** Turns the TV on or off.
- **Volume Up/Down:** Adjusts the TV's volume level.
- **Channel Up/Down:** Changes TV channels.
- **Number Buttons (0-9):** Direct channel selection.
- **Mute Button:** Mutes or unmutes the TV sound.

- **Input Button:** Selects input sources (HDMI, AV, etc.).
- **Home Button:** Accesses the Smart TV home screen or main menu.
- **Navigation Pad (Up/Down/Left/Right) and OK Button:** Used for menu navigation and selection.
- **Back/Exit Buttons:** Returns to the previous screen or exits a menu.
- **App Buttons (e.g., Netflix, Prime Video):** Provides quick access to popular streaming applications (if present on your specific remote model and supported by your TV).



Image: Front view of the remote control, illustrating the button layout for various functions.

MAINTENANCE

Proper care will extend the life of your remote control.

Battery Replacement:

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries or different battery types.

Cleaning:

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

Storage:

Store the remote in a dry place, away from direct sunlight, high humidity, and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common solutions:

Remote Not Responding:

- **Check Batteries:** Ensure batteries are inserted correctly with the proper polarity. Replace old batteries with new ones.
- **Line of Sight:** Make sure there is a clear line of sight between the remote control's infrared emitter and the TV's infrared sensor. Obstructions can block the signal.
- **TV Sensor:** Ensure the TV's remote sensor is not blocked or dirty.
- **TV Power:** Confirm that the TV is powered on and not in standby mode.

Limited Range:

- **Battery Level:** Weak batteries can significantly reduce the remote's effective range. Replace them if necessary.
- **Interference:** Other electronic devices, strong light sources (like direct sunlight or fluorescent lights), or certain types of glass might interfere with the infrared signal. Try using the remote in a different environment or adjusting your position.

Specific Functions Not Working:

- While this remote is highly compatible, some highly specialized functions of original LG "Magic Remotes" (e.g., pointer, voice control, specific gesture controls) may not be supported. The remote is designed for essential and common functions.
- Ensure your TV's firmware is up to date, as this can sometimes affect remote compatibility and functionality.

If problems persist after trying these steps, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Superior Electronics
Model Number	SUPTRB007
Compatible Devices	LG, Smart LG TVs (from year 2000)
Connectivity Technology	Infrared
Max Number of Supported Devices	1
Number of Buttons	46
Maximum Range	10 Meters
Product Dimensions	5 x 1.5 x 19 cm
Item Weight	67 g
Special Features	Ergonomic, No Programming Required



Image: Side view of the remote control, illustrating its physical dimensions.

WARRANTY INFORMATION

Specific warranty details are not explicitly provided in the product information available. Please refer to the product packaging for detailed warranty terms and conditions, or contact Superior Electronics customer support directly for this information.

SUPPORT INFORMATION

For further assistance, technical support, or inquiries regarding your Superior Electronics SUPTRB007 Universal LG Replacement Remote Control, please refer to the contact information provided on the product packaging or visit the official Superior Electronics website. When contacting support, please ensure you have your product model number (SUPTRB007) ready to facilitate a quicker resolution.