

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Craftmade](#) /

› [Craftmade END52WW5P Enduro 52-inch Outdoor Ceiling Fan Instruction Manual](#)

Craftmade END52WW5P

Craftmade END52WW5P Enduro 52-inch Outdoor Ceiling Fan Instruction Manual

Model: END52WW5P | Brand: Craftmade

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Craftmade END52WW5P Enduro 52-inch Outdoor Ceiling Fan. Please read all instructions carefully before beginning installation and retain this manual for future reference.

The Craftmade Enduro ceiling fan is designed for outdoor use in wet locations, making it suitable for porches and patios. Its durable construction ensures reliable performance in various weather conditions.

Safety Warning: Always disconnect power at the circuit breaker before installing, cleaning, or servicing the fan.



Image: The Craftmade Enduro 52-inch Outdoor Ceiling Fan installed on an outdoor patio, providing air circulation above a dining area.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Fan Motor Assembly
- 5 ABS Fan Blades
- Mounting Hardware (including 4-inch downrod and vaulted canopy)
- Pull Chain Switch
- Installation Guide

SETUP AND INSTALLATION

Professional installation is recommended. Ensure the installation location is structurally sound and can support the fan's weight (approximately 16.58 lbs).

Pre-Installation Checks:

1. Ensure power is OFF at the circuit breaker.
2. Confirm the electrical box is securely mounted and rated for ceiling fan support.
3. Verify all parts are present and undamaged.

Mounting the Fan:

- The fan can be installed on flat ceilings or sloped ceilings up to 23 degrees using the included vaulted canopy.
- Attach the mounting bracket to the electrical box using the provided hardware.
- Secure the downrod to the fan motor assembly, feeding electrical wires through the downrod.
- Hang the fan assembly onto the mounting bracket.

Electrical Wiring:

- Connect the fan's electrical wires to the household wiring according to local electrical codes and the included wiring diagram.
- Ensure all connections are secure and insulated with wire nuts.
- This fan is UL approved for WET locations, ensuring safety for outdoor covered areas.

Attaching Blades:

- Carefully attach the 5 ABS blades to the blade arms, then secure the blade arms to the motor housing.
- Ensure all screws are tightened securely to prevent wobbling.

OPERATING INSTRUCTIONS

The Craftmade Enduro fan is operated using a pull chain for speed control and a reversing function.

Fan Speed Control:

- The fan features 3 speeds. Pull the chain once for high speed, twice for medium, three times for low, and a fourth time to turn the fan off.
- Adjust the speed to achieve desired airflow and comfort.

Reversing Function:

- A separate switch on the fan motor housing controls the blade direction (forward/reverse).
- For cooling effect (downward airflow), set the switch to the position that pushes air down. This is typically used in warmer weather.

- For circulating warm air (upward airflow), set the switch to the opposite position. This helps distribute heat in cooler weather.
- Always ensure the fan is completely stopped before changing the direction of rotation.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your ceiling fan.

- **Cleaning:** Periodically clean the fan blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Tightening:** Check all screws and fasteners annually to ensure they are secure. Loose connections can cause noise or wobbling.
- **Blade Inspection:** Inspect the ABS blades for any signs of damage or warping, especially after prolonged exposure to harsh weather.
- **Lubrication:** The fan motor is permanently lubricated and does not require additional oiling.
- **Outdoor Use:** While designed for wet locations, regular cleaning will prevent buildup from outdoor elements.

TROUBLESHOOTING

If you experience issues with your fan, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|--------------------|--|--|
| Fan does not start | No power to the fan; Loose wire connections; Faulty pull chain switch. | Check circuit breaker and wall switch. Ensure all wiring connections are secure. Contact customer support if switch is faulty. |
| Fan wobbles | Loose blade screws; Unbalanced blades; Loose mounting bracket. | Tighten all blade screws. Ensure blades are installed correctly. Check mounting bracket for secure attachment. |
| Noisy operation | Loose screws; Motor housing rubbing; Incorrect blade installation. | Check and tighten all screws. Ensure no parts are rubbing. Re-install blades if necessary. |
| Airflow is weak | Fan running in reverse; Incorrect speed setting. | Check the reversing switch position. Adjust to a higher speed setting using the pull chain. |

SPECIFICATIONS

| Feature | Detail |
|----------------------------|------------------------------------|
| Model Number | END52WW5P |
| Brand | Craftmade |
| Fan Diameter | 52 inches |
| Height (Ceiling to Bottom) | 13.38 inches (with 4-inch downrod) |
| Weight | 15.84 pounds |

| Feature | Detail |
|----------------------|--|
| Number of Blades | 5 |
| Blade Material | ABS Plastic |
| Blade Pitch | 12 degrees |
| Airflow Capacity | 5284.1 Cubic Feet Per Minute (CFM) |
| Control Method | 3-Speed Pull Chain with Reversing Function |
| Power Source | AC |
| Voltage | 120 Volts |
| Wattage | 61 Watts |
| Indoor/Outdoor Usage | Outdoor (Wet Location UL Approved) |
| Installation Type | Versatile (Flat & Sloped Ceilings up to 23°) |
| Finish | White Finish |

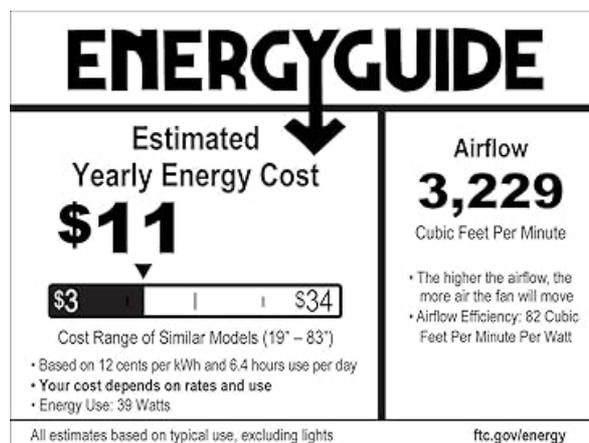


Image: EnergyGuide label for the ceiling fan, indicating an estimated yearly energy cost of \$11 and an airflow of 3,229 Cubic Feet Per Minute.

WARRANTY AND SUPPORT

Warranty Information:

All products purchased have a 30-day replacement parts policy to ensure a fully working item. All products are covered under a 1-Year warranty when purchased on Amazon. The warranty period begins on the day the product is originally shipped. The warranty covers all items and conditions identified in the original manufacturer's warranty. Items specifically not covered by the warranty include loss and theft, water damage, customer abuse, and finish deterioration due to UV or coastal exposure.

Customer Support:

For technical assistance, warranty claims, or replacement parts, please contact Craftmade Customer Support:

- **Phone:** (800) 486-4892
- **Online:** Visit the official Craftmade website for additional resources and contact options.

