

[manuals.plus](#) /› [BRUNO](#) /› [BRUNO Compact Hot Plate Multi-Function Cooker BOE021 Instruction Manual](#)**BRUNO BOE021**

BRUNO Compact Hot Plate Multi-Function Cooker BOE021 Instruction Manual

Model: BOE021 | Brand: BRUNO

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the BRUNO Compact Hot Plate Multi-Function Cooker. Retain this manual for future reference.

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not immerse the main unit (heating element) in water or any other liquid.
- Keep out of reach of children.
- Use only the provided power cord and ensure it is securely connected.
- Do not touch hot surfaces. Use oven mitts or handles.
- Unplug the appliance when not in use and before cleaning.
- Do not operate the appliance if it has a damaged cord or plug, or if it malfunctions.

2. PRODUCT OVERVIEW AND COMPONENTS

The BRUNO Compact Hot Plate Multi-Function Cooker BOE021 comes with several interchangeable plates and a ceramic pot to enhance your cooking experience.

付属品



Figure 1: All included components of the BRUNO Compact Hot Plate Multi-Function Cooker. This set includes the main hot plate unit, a lid, a flat plate, a takoyaki plate, a grill plate, a multi plate, a ceramic coat pot, a power cord, and a wooden spatula.

Included Components:

- Main Hot Plate Unit
- Lid
- Flat Plate
- Takoyaki Plate
- Grill Plate
- Multi Plate
- Ceramic Coat Pot
- Power Cord
- Wooden Spatula

3. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all components from the packaging. Remove any protective films or packaging materials.
2. **Cleaning:** Before first use, wash all removable plates and the ceramic pot with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the main hot plate unit on a flat, stable, and heat-resistant surface, away from walls or other appliances to ensure proper ventilation.
4. **Plate Installation:** Select the desired cooking plate or ceramic pot and place it securely onto the heating element of the main unit. Ensure it sits flat and is properly aligned.
5. **Power Connection:** Connect the magnetic power cord to the designated port on the side of the main unit. Then, plug the other end into a standard 100V electrical outlet.



安全面

本体に繋げるコンセントはマグネット式なので、万が一引っかかっても簡単に外れるので安心です。

Figure 2: The magnetic power cord ensures a secure connection and detaches easily if accidentally pulled, enhancing safety.

4. OPERATING INSTRUCTIONS

Temperature Control:

The appliance features a simple slide-type thermostat control with four settings: OFF, WARM, LOW, MED, and HI. The indicator lamp will illuminate when the unit is heating.



サーモスイッチ付き

保温から最大 250 度までの無段階設定が可能です。
またサーモスイッチ付きなので温度の上がりすぎを防いでくれます。使用時はランプが点灯します。

Figure 3: Adjust the temperature using the slide control. The power indicator light will show when the unit is active.

Using the Plates and Pot:

- **Flat Plate:** Ideal for general cooking such as stir-frying, pancakes, paella, or roasting meats.



Figure 4: The flat plate is versatile for various dishes, from barbecue to pancakes.

- **Takoyaki Plate:** Designed for making takoyaki (octopus balls) or other small, spherical foods. It can cook 24 pieces simultaneously.



Figure 5: The takoyaki plate allows for cooking 24 pieces at once, perfect for parties or snacks.

- **Grill Plate:** Features ridges for grilling meats and vegetables, allowing excess fat to drain for healthier cooking.



Figure 6: The grill plate is suitable for BBQ and grilled dishes, designed to drain excess fat.

- **Multi Plate:** Features six circular depressions, suitable for making fried eggs, small pancakes, mini pizzas, or tofu hamburgers.



Figure 7: The multi plate offers six individual cooking sections for diverse recipes.

- **Ceramic Coat Pot:** A deep pot with a ceramic coating, ideal for stews, hot pots, or soups. The ceramic coating helps prevent scratches and burning, making it easy to clean.



Figure 8: The ceramic coat pot is perfect for simmering stews and hot pots, featuring a non-stick surface.

Official Product Video:

Your browser does not support the video tag.

Video 1: This official seller video demonstrates the versatility of the Joydeem 3-in-1 Electric Hot Pot, showcasing its use for stir-frying, hot pot, slow cooking, indoor barbecue, and steaming fish or vegetables.

5. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your BRUNO Compact Hot Plate.

- Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- Remove Plates/Pot:** Carefully remove the cooking plate or ceramic pot from the main unit.
- Washing:** Wash the removable plates and ceramic pot with warm, soapy water using a soft sponge or cloth. For stubborn food residue, soak the item in warm water for a few minutes before scrubbing. The non-stick coating on the plates and ceramic pot makes cleaning easy.
- Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
- Drying:** Ensure all components are thoroughly dry before reassembling or storing.

6. TROUBLESHOOTING

If you encounter any issues with your BRUNO Compact Hot Plate, refer to the following common problems and solutions:

- Appliance does not turn on:**

- Ensure the power cord is securely connected to both the appliance and the electrical outlet.

- Check if the outlet is functioning by plugging in another appliance.
- Verify the temperature control dial is not set to "OFF".

- **Food is sticking to the plate/pot:**

- Ensure you are using a small amount of cooking oil or butter, even with non-stick surfaces.
- Avoid using metal utensils that can damage the non-stick coating. Use the provided wooden spatula or other non-abrasive utensils.
- Ensure the plate/pot is clean and free of old residue before cooking.

- **Uneven heating:**

- Ensure the cooking plate or pot is properly seated on the heating element.
- Allow the appliance to preheat fully before adding food.

7. SPECIFICATIONS

Feature	Detail
Brand	BRUNO
Model Number	BOE021
Special Feature	Non Stick Coating
Material	Ceramic
Wattage	1200 watts
Voltage	100 Volts
Item Weight	2.2 Kilograms (4.84 pounds)
Product Dimensions	9.25 x 14.76 x 5.31 inches
Number of Settings	4 (OFF, WARM, LOW, MED, HI)
Included Components	Griddle Plate, Hot Plate, Multi Plate, Ceramic Coat Pot

8. WARRANTY AND SUPPORT

This BRUNO Compact Hot Plate Multi-Function Cooker comes with **alimited warranty**.

For warranty claims, technical support, or any inquiries, please contact BRUNO customer service through their official website or the retailer where the product was purchased.

Please have your model number (BOE021) and proof of purchase ready when contacting support.