

Microsoft Xbox One X (2017 Model)

Microsoft Xbox One X 1TB 4K Ultra HD Gaming Console (2017 Model) Instruction Manual

Model: Xbox One X (2017 Model) | ASIN: B07CSLG8ST

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Microsoft Xbox One X 1TB 4K Ultra HD Gaming Console. The Xbox One X is designed to deliver an immersive gaming and entertainment experience with advanced graphical capabilities and a 4K Blu-ray player. It is compatible with all Xbox One games and accessories, offering smooth gameplay and fast loading times, even on 1080p displays.



Image: The Microsoft Xbox One X console in black with its matching wireless controller.

WHAT'S IN THE BOX

Upon unboxing your Microsoft Xbox One X, please ensure all the following components are present:

- Xbox One X Game Console (Black)

- Wireless Controller
- Power Supply Unit
- HDMI Cable

SETUP

Follow these steps to set up your Xbox One X console:

1. **Placement:** Position your console on a stable, flat surface with adequate ventilation. Ensure no vents are blocked to prevent overheating.
2. **Connect Power:** Plug the power supply unit into the console's power port, then connect the power cable to an electrical outlet.
3. **Connect to TV:** Use the included HDMI cable to connect the console's HDMI OUT port to an HDMI input on your television.
4. **Connect to Internet (Optional):** For online gaming and updates, connect an Ethernet cable to the console's network port or configure Wi-Fi during initial setup.
5. **Connect Controller:** Insert batteries into your wireless controller. Press and hold the Xbox button on the controller to turn it on. Press and release the Pair button on the console (small circular button on the front) and then on the controller to sync them.
6. **Power On:** Press the Xbox button on the console or controller to turn on the system. Follow the on-screen instructions for initial setup, including language, region, and network configuration.

OPERATING

Your Xbox One X offers a variety of functions for gaming and entertainment:

- **Playing Games:** Insert a game disc into the disc drive or select a digital game from your library on the dashboard. The console supports 4K Ultra HD gaming for compatible titles.
- **Streaming Media:** Access popular streaming services like Netflix, Hulu, and more through dedicated apps available on the Xbox Store.
- **Blu-ray Playback:** The integrated 4K Blu-ray player allows you to watch Ultra HD Blu-ray movies.
- **Dashboard Navigation:** Use your controller to navigate the intuitive Xbox dashboard, access games, apps, settings, and the Xbox Store.
- **Multiplayer Gaming:** Connect with friends and the global gaming community through Xbox Live, Microsoft's advanced multiplayer network.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your console:

- **Cleaning:** Regularly wipe the console's exterior with a soft, dry, lint-free cloth. Avoid using harsh chemicals or abrasive materials. Ensure ventilation grilles are free from dust accumulation.
- **Ventilation:** Always ensure your console has ample space around it for proper airflow. Do not place it in enclosed cabinets or on soft surfaces that can block vents.
- **Software Updates:** Keep your console's system software updated. Updates often include performance improvements, new features, and security enhancements. The console typically downloads updates automatically when connected to the internet.
- **Storage:** When not in use for extended periods, store the console in a cool, dry place, protected from dust

and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Xbox One X, try these common troubleshooting steps:

- **No Power:** Ensure the power cable is securely connected to both the console and the electrical outlet. Try a different outlet if necessary.
- **No Video/Audio:** Check that the HDMI cable is firmly connected to both the console and the TV. Verify your TV is set to the correct HDMI input.
- **Controller Disconnection:** Re-sync your controller by pressing the Pair buttons on both the console and the controller. Ensure controller batteries are charged.
- **Disc Read Errors:** Clean the game disc with a soft cloth, wiping from the center outwards. Ensure the disc is inserted correctly.
- **System Lag/Freezing:** Perform a full power cycle by holding the Xbox button on the console for 10 seconds until it turns off, then restart it. Ensure adequate ventilation.
- **Network Issues:** Check your internet connection. Restart your router and modem. Test the network connection through the console's settings menu.

For persistent issues, visit the official Microsoft Xbox support website for detailed guides and contact options.

SPECIFICATIONS

Feature	Detail
Brand	Microsoft
Model	Xbox One X (2017 Model)
Storage	1TB
Graphical Power	6 Teraflops
Optical Drive	4K Blu-ray Player
Color	Black
Product Dimensions	12 x 5 x 16.5 inches
Item Weight	10 pounds
Release Date	January 14, 2019
Manufacturer	Microsoft

WARRANTY AND SUPPORT

As a renewed product, your Microsoft Xbox One X may come with a specific warranty provided by the seller or refurbisher. Please refer to your purchase documentation for details regarding warranty coverage and duration. For technical support, software updates, and additional resources, please visit the official Microsoft Xbox support website or contact their customer service directly.

For further assistance, you may also refer to the Amazon Renewed Store for information on their certified refurbished products and associated guarantees.

