

Baorun Y1

Baorun Professional Pet Grooming Clipper Model Y1 User Manual

Your guide to safe and effective pet grooming.

1. INTRODUCTION

Thank you for choosing the Baorun Professional Pet Grooming Clipper Model Y1. This manual provides essential information for the safe and effective use, maintenance, and care of your new pet grooming kit. Please read these instructions thoroughly before first use and retain them for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the clipper is switched off before cleaning, attaching/detaching accessories, or when not in use.
- Keep the clipper and all accessories out of reach of children and pets.
- Do not immerse the clipper in water or use it near water.
- Inspect the clipper and power cord for any damage before each use. Do not use if damaged.
- Use only the charger supplied with the device.
- Avoid using the clipper on wet animals. Ensure your pet's coat is clean and dry before grooming.
- Be cautious when grooming sensitive areas of your pet.

3. PACKAGE CONTENTS

Your Baorun Professional Pet Grooming Kit includes the following items:



Image: Overview of the Baorun Pet Grooming Kit, showing the main clipper unit, grooming scissors, a metal comb, a small bottle of lubricating oil, a cleaning brush, and four different sized guide combs, all packaged in a retail box.

- Baorun Pet Hair Clipper (Model Y1)
- Grooming Scissors
- Stainless Steel Comb
- Lubricating Oil
- Cleaning Brush
- Charger
- 4 Guide Combs (3mm, 6mm, 10mm, 13mm)

4. PRODUCT FEATURES

The Baorun Professional Pet Grooming Clipper Model Y1 is designed for efficient and comfortable pet grooming. Key features include:



Image: Close-up view of the Baorun clipper highlighting its main components: self-sharpening high carbon steel blades, a heavy-duty power drive motor, an adjustable taper lever for blending, and the power switch.

- **High Carbon Steel Blades:** Self-sharpening precision blades designed for snag-free cutting through various hair types.
- **Powerful Motor:** Heavy-duty motor delivers consistent power for efficient grooming, even on thick coats.
- **Low Noise Operation:** Engineered to minimize noise and vibration, providing a stress-free grooming experience for most pets.
- **Cordless Design:** Offers flexibility and ease of use without the restriction of a cord.
- **Large Capacity Battery:** Equipped with a 2000mAh lithium battery, providing up to 4 hours of usage on a single charge. The battery has no memory function, allowing for flexible charging.
- **Adjustable Taper Lever:** Allows for customized cutting lengths and blending without changing guide combs.

5. SPECIFICATIONS



Image: An exploded diagram of the Baorun clipper, illustrating its internal structure including the high carbon steel blade, silver palladium alloy motor, fuselage shell, and the 2000mA lithium battery.

Feature	Specification
Blade Material	High-carbon steel
Blade Width	45.5 mm
Motor Power	3.7V
Rated Power	8W
Rotating Speed	5500 rpm
Battery Type	2000mAh Lithium-ion
Full Charge Time	4 hours
Usage Time	Up to 4 hours
Included Guide Combs	3mm, 6mm, 10mm, 13mm
Manufacturer	Ningbo Iclipper Electric Appliance Co., Ltd

6. GETTING STARTED

6.1 Charging the Clipper

1. Ensure the clipper is switched off.
2. Connect the charger to the charging port on the clipper.
3. Plug the charger into a standard electrical outlet.
4. The charging indicator light will illuminate. A full charge takes approximately 4 hours.
5. Once fully charged, disconnect the charger. The clipper can be charged at any time without affecting battery life due to its no-memory battery.

6.2 Attaching and Detaching Guide Combs



Image: The Baorun pet clipper displayed alongside its accessories, including the power adapter, lubricating oil, cleaning brush, and a set of four guide combs (3mm, 6mm, 10mm, 13mm) for different hair lengths.

- **To Attach:** With the clipper switched off, align the desired guide comb with the clipper blade and slide it on until it clicks securely into place.
- **To Detach:** Gently push the guide comb upwards from the back and slide it off the blade.

6.3 Adjusting the Taper Lever

The taper lever, located on the side of the clipper, allows for fine adjustment of cutting length

without changing guide combs. Move the lever up for a shorter cut and down for a longer cut. This is useful for blending and achieving precise lengths.

7. OPERATING INSTRUCTIONS



Image: A Baorun pet clipper in use on a Labrador Retriever, demonstrating its application for pet grooming. Smaller inset images show a rabbit, cat, and Pomeranian, indicating the clipper's suitability for various small to large pets.

7.1 Preparing Your Pet

- **Bathe and Dry:** Ensure your pet is clean and completely dry before grooming. Matted or dirty fur can dull blades and cause discomfort.
- **Brush:** Thoroughly brush your pet's coat to remove any tangles or loose hair.
- **Familiarize:** Allow your pet to get used to the sound and feel of the clipper before turning it on.

7.2 Grooming Techniques

1. Turn on the clipper using the power switch.

2. Hold the clipper firmly and always cut in the direction of hair growth.
3. Use short, even strokes. Do not press the clipper too hard against the skin.
4. Regularly check the blade temperature to ensure it does not overheat, which could cause discomfort to your pet.
5. For longer coats, consider using the grooming scissors to trim excess length before using the clipper.

8. MAINTENANCE

8.1 Cleaning the Blades

- After each use, switch off the clipper and remove the guide comb.
- Use the provided cleaning brush to remove any trapped hair from the blades.
- For a more thorough clean, the blade set can be carefully detached (refer to specific instructions if available for your model, generally by pushing the blade forward). Rinse the blade set under running water, ensuring the clipper body remains dry. Dry thoroughly before reattaching.

8.2 Oiling the Blades

- After cleaning and before each use, apply 1-2 drops of the lubricating oil to the teeth of the blades.
- Turn the clipper on for a few seconds to allow the oil to distribute evenly. This helps maintain blade sharpness and smooth operation.

8.3 Storage

Store the clipper and all accessories in a dry, cool place, away from direct sunlight and moisture. Keep the blades protected when not in use.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is discharged.	Charge the clipper for 4 hours.
Clipper pulls hair or cuts poorly.	Blades are dull, dirty, or not oiled.	Clean and oil the blades. If still dull, consider blade replacement.
Clipper becomes hot during use.	Extended use or lack of lubrication.	Turn off the clipper and allow it to cool. Apply lubricating oil to the blades.
Excessive vibration or noise.	Hair caught in blades or loose blade.	Clean blades thoroughly. Ensure blades are securely attached.

10. WARRANTY AND SUPPORT

The Baorun Professional Pet Grooming Clipper Model Y1 comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

If you encounter any issues with your pet grooming kit, please contact our customer support for assistance. Please have your purchase details ready when contacting support.

Note: The warranty does not cover damage caused by misuse, neglect, unauthorized repairs, or normal wear and tear.