

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Zerone](#) /

› [Zerone BN59-00611A Replacement Remote Control User Manual for Smart TVs](#)

### Zerone BN59-00611A

# Zerone BN59-00611A Replacement Remote Control User Manual

Model: BN59-00611A | Brand: Zerone

## 1. INTRODUCTION

This manual provides instructions for the Zerone BN59-00611A replacement remote control. This remote is designed to function as a direct replacement for original remote controls BN59-00603A and BN59-00516A, offering full functionality for compatible Smart TVs. Please read this manual carefully before use to ensure proper operation and longevity of your device.

## 2. PRODUCT OVERVIEW

The Zerone BN59-00611A remote control is a dedicated replacement unit, crafted from durable ABS material for comfortable handling. It provides a stable infrared signal transmission up to 8 meters, ensuring reliable control of your television.



**Image 2.1:** Front view of the Zerone BN59-00611A replacement remote control, displaying all buttons including power, number pad, volume, channel, and navigation controls.



**Image 2.2:** Close-up of the top section of the remote control, showing the TV, DVD, STB, Cable, VCR, Power, Source, and number buttons.



**Image 2.3:** Close-up of the bottom section of the remote control, highlighting the Return, Info, Caption, P.Mode, S.Mode, Still, P.Size, and colored function buttons.

### 3. SETUP

#### 3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.

**Note:** Batteries are not included with the remote control. Always use new batteries for optimal performance.



Image 3.1: Rear view of the remote control, showing the open battery compartment ready for AAA battery insertion.

### 3.2 Initial Use

This replacement remote control requires no programming or complex setup. Once batteries are installed, it is ready for immediate use with compatible Smart TVs.

## 4. OPERATING INSTRUCTIONS

Point the remote control directly at your television's infrared receiver. Ensure there are no obstructions between the remote and the TV.

- **Power Button:** Press the red 'Power' button to turn the TV on or off.
- **Number Buttons (0-9):** Use these buttons to directly enter channel numbers.

- **Volume Control (VOL +/-):** Press '+' to increase volume, '-' to decrease volume.
- **Channel Control (CH +/-):** Press '+' to go to the next channel, '-' to go to the previous channel.
- **Mute Button:** Press to mute or unmute the TV audio.
- **Navigation Pad (Up/Down/Left/Right/Enter):** Use these buttons to navigate through menus and confirm selections. The 'Enter' button is located in the center of the navigation pad.
- **Menu Button:** Access the TV's main menu.
- **Exit Button:** Exit current menus or on-screen displays.
- **Source Button:** Cycle through available input sources (e.g., HDMI, AV).
- **Playback Controls (REW, STOP, PLAY/PAUSE, FF):** Control media playback functions.
- **Colored Function Buttons (Red, Green, Yellow, Blue):** These buttons perform specific functions depending on the TV model or current on-screen content.



Image 4.1: A hand demonstrating how to hold and operate the remote control, with focus on the upper button area.

## 5. MAINTENANCE

### 5.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

### 5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

### 5.3 Storage

When not in use for extended periods, remove the batteries to prevent leakage, which can damage the remote control. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

## 6. TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote control and the TV's infrared sensor.
- Make sure you are within the effective operating range (up to 8 meters).

- **Limited range or intermittent response:**

- Replace batteries.
- Ensure the remote is pointed directly at the TV.
- Check for strong light sources (like direct sunlight or bright fluorescent lights) that might interfere with the infrared signal.

## 7. SPECIFICATIONS

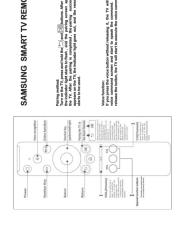
Feature	Specification
Model	BN59-00611A
Compatibility	BN59-00603A, BN59-00516A Smart TVs
Power Source	2 x AAA Batteries (not included)
Connectivity Technology	Infrared
Transmission Distance	Up to 8 meters
Material	ABS
Color	Black
Product Dimensions	23.5 cm x 4.8 cm x 3 cm (Length x Width x Thickness)



Image 7.1: The remote control displayed with its approximate length (23.5 cm), width (4.8 cm), and thickness (3 cm) indicated.

## 8. WARRANTY AND SUPPORT

Zerone products are backed by a 100% satisfaction guarantee. If you are not satisfied with your purchase for any reason, please do not hesitate to contact us. Our customer support team is available to assist you with any questions or concerns regarding your remote control.

	<p><a href="#"><b>Samsung BN59-00516A Replacement Remote Control Guide</b></a></p> <p>This guide provides button mapping details for the Samsung BN59-00516A replacement remote control, covering TV, DVD, STB, and CABLE-VCR functions. Compare original remote buttons to their replacements.</p>
	<p><a href="#"><b>Samsung Remote Control User Guide and Compatibility</b></a></p> <p>Comprehensive guide to Samsung remote control functions, installation steps, and compatibility with various Samsung TV models. Includes model numbers for easy reference.</p>
	<p><a href="#"><b>Samsung Universal Remote Control BN59-01315A User Guide</b></a></p> <p>Comprehensive user guide for the Samsung BN59-01315A universal remote control. Learn about its features, compatibility with Samsung smart TVs, setup, and programming instructions for seamless TV and cable/satellite box operation.</p>
	<p><a href="#"><b>Samsung Smart-TV Remote Control Function Guide: TM1850A BN59-01259B &amp; Replacement Models</b></a></p> <p>Detailed comparison of original and replacement remote control buttons for Samsung Smart TVs, including models TM1850A BN59-01259B, BN59-01301A, and BN59-01350B. Find button function mapping from Mandis shop.</p>
	<p><a href="#"><b>Samsung Smart Remote: Connecting and Troubleshooting Guide</b></a></p> <p>A guide on how to connect the Samsung Smart Remote to your TV, control external devices, and troubleshoot common remote control issues. Includes FCC compliance information.</p>
	<p><a href="#"><b>Samsung Smart TV Remote Control Guide</b></a></p> <p>A comprehensive guide to using the Samsung Smart TV Remote Control, including pairing instructions, button functions, and voice command usage.</p>