

[Manuals.plus](#) /

> [INTEMPO](#) /

> INTEMPO LED Light Tower Speaker EE2928BLKSTK User Manual

INTEMPO EE2928BLKSTK

INTEMPO LED Light Tower Speaker EE2928BLKSTK User Manual

Model: EE2928BLKSTK

1. INTRODUCTION AND PRODUCT OVERVIEW

Thank you for purchasing the INTEMPO LED Light Tower Speaker. This manual provides essential information for the safe and efficient operation of your new device. Please read it thoroughly before use and retain it for future reference.

The Intempo LED Light Tower Speaker is designed to bring your music to life with its high-quality 3W audio output and rhythm-sensitive LED lights. It offers versatile connectivity options, including Bluetooth for wireless streaming and an auxiliary input for wired connections. Its compact design makes it suitable for various indoor and outdoor settings.





Figure 1: Front view of the INTEMPO LED Light Tower Speaker with its vibrant LED lights active.

Key Features:

- Integrated rhythm-sensitive LED lights for dynamic visual effects.
- Bluetooth technology for seamless wireless connection to smartphones, tablets, and MP3 players.
- Auxiliary (AUX) input for wired audio devices.
- 3W audio output for clear and perfect sound.
- Portable design with up to 4 hours of wireless playback on a single charge.

2. PACKAGE CONTENTS

Please check the box for the following items:

- 1 x INTEMPO LED Light Tower Speaker (Model: EE2928BLKSTK)
- 1 x USB Charging Cable
- 1 x Auxiliary (AUX) Cable
- 1 x User Manual (this document)

If any items are missing or damaged, please contact your retailer or INTEMPO customer support.

3. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not expose the speaker to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not attempt to disassemble, repair, or modify the speaker yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from heat sources such as radiators, stoves, or other heat-producing appliances.
- Use only the provided or recommended charging cables.
- Clean the speaker with a soft, dry cloth. Do not use liquid cleaners or aerosols.
- Ensure proper ventilation around the speaker during use.

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the speaker. The speaker has a built-in rechargeable battery providing up to 4 hours of playback.

1. Locate the charging port on the speaker (usually at the back or bottom).
2. Connect the small end of the USB charging cable to the speaker's charging port.
3. Connect the larger end of the USB cable to a USB power adapter (not included) or a computer's USB port.
4. The LED indicator will typically show red while charging and turn off or change color when fully charged.

4.2 Powering On/Off

To power on the speaker, press and hold the Power button (often combined with Play/Pause) for a few seconds until you hear an audible prompt or see the LED lights activate. To power off, repeat the process.

5. OPERATING INSTRUCTIONS



Figure 2: Top control panel with Play/Pause/LED, Mode, Previous, and Next buttons.

5.1 Bluetooth Pairing

The speaker features wireless pairing for quick and convenient connectivity.

1. Ensure the speaker is powered on and in Bluetooth pairing mode. (It usually enters this mode automatically when powered on for the first time or if no device is connected). A blinking blue LED typically indicates pairing mode.
2. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings.
3. Search for available devices. You should see "INTEMPO EE2928BLKSTK" or a similar name appear in the list.
4. Select the speaker from the list to pair. Once successfully paired, you will hear a confirmation tone, and the LED indicator will turn solid blue.
5. You can now play audio from your device through the speaker.

Note: The speaker will automatically attempt to reconnect to the last paired device when powered on.

5.2 Auxiliary (AUX) Input

For devices without Bluetooth, use the auxiliary input:

1. Connect one end of a 3.5mm audio cable (AUX cable) to the AUX input port on the speaker.
2. Connect the other end of the AUX cable to the headphone jack or audio output port of your audio device (e.g., MP3 player, computer).
3. The speaker should automatically switch to AUX mode, or you may need to press the 'M' (Mode) button on the speaker's control panel to select AUX mode.
4. Play audio from your connected device.





Figure 3: Speaker shown with a smartphone, demonstrating connectivity options.

5.3 Control Buttons

The speaker features intuitive controls on its top panel:

- **Play/Pause/LED Button:**
 - Press once to Play/Pause audio.
 - Press and hold to Power On/Off the speaker.
 - Press twice (or short press, depending on model) to cycle through LED light modes or turn them off.
- **M (Mode) Button:** Press to switch between Bluetooth and AUX input modes.
- **Previous Track Button (◀◀):** Press once to go to the previous track. Press and hold to decrease volume.
- **Next Track Button (▶▶):** Press once to go to the next track. Press and hold to increase volume.

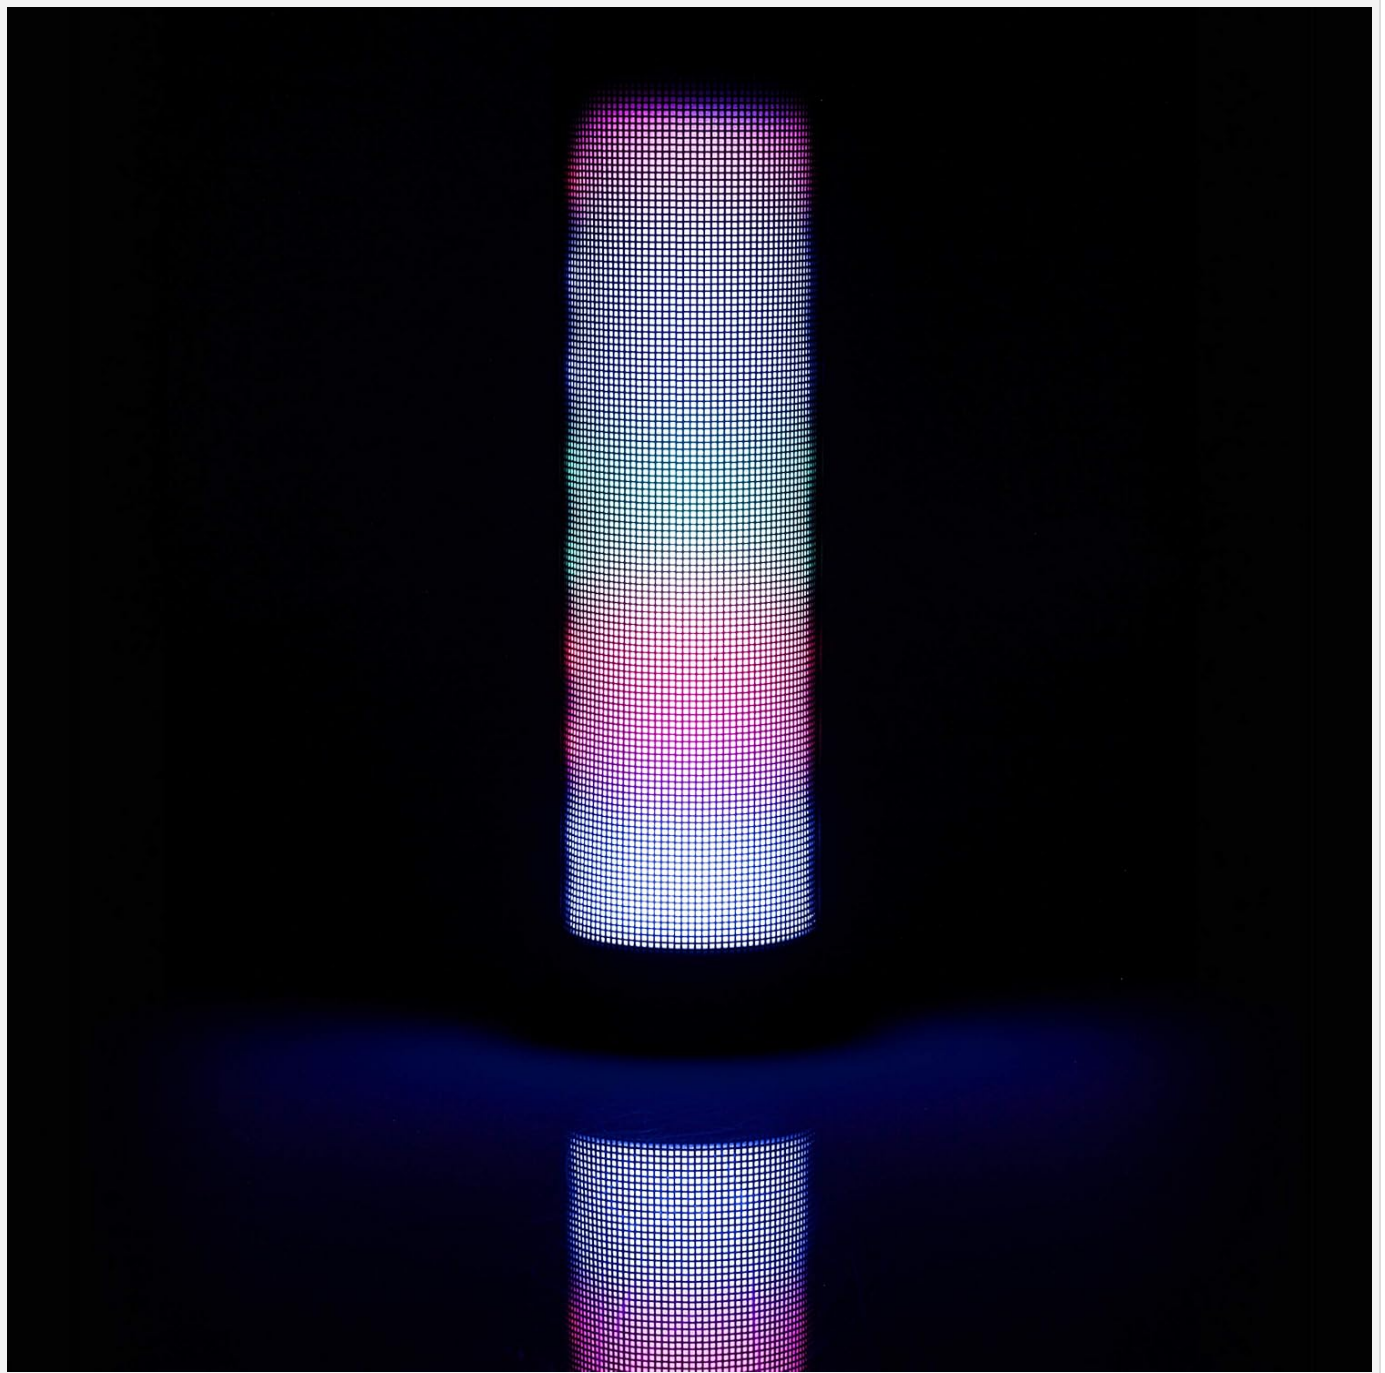


Figure 4: The speaker's LED lights creating an ambient glow in a low-light environment.

6. MAINTENANCE

6.1 Cleaning

To maintain the appearance and functionality of your speaker:

- Always power off the speaker and disconnect it from any power source before cleaning.
- Use a soft, dry, lint-free cloth to wipe down the exterior surfaces.
- For stubborn marks, slightly dampen the cloth with water, but ensure no liquid enters the speaker's openings.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish or internal components.

6.2 Storage

When not in use for extended periods:

- Store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- Avoid storing in dusty environments.
- If storing for several months, it is recommended to charge the battery to about 50% every 3-6 months to prolong its lifespan.

7. TROUBLESHOOTING

If you encounter issues with your speaker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker fully using the provided USB cable.
No sound from speaker.	Volume is too low on speaker or connected device. Incorrect input mode selected. Device not properly connected (Bluetooth/AUX).	Increase volume on both speaker and connected device. Press the 'M' button to cycle through modes. Re-pair Bluetooth device or re-connect AUX cable securely.
Bluetooth device cannot pair.	Speaker is not in pairing mode. Device is too far from speaker. Bluetooth list on device is full.	Ensure speaker is powered on and LED is blinking (pairing mode). Move device closer to the speaker (within 10 meters). Clear old Bluetooth connections from your device's list and try again.
LED lights are not working.	LED function is turned off.	Press the Play/Pause/LED button to cycle through LED modes or turn them on.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Model Number:	EE2928BLKSTK
Brand:	INTEMPO
Color:	Black
Dimensions (L x W x H):	8 x 8 x 27.5 cm
Weight:	300 g
Power Output:	3 Watts
Connectivity Technology:	Bluetooth, Auxiliary (AUX), USB (for charging)
Wireless Playback Time:	Up to 4 hours
Special Features:	Bluetooth, Wireless, LED Light
Compatible Devices:	Smartphone, Tablet, MP3 Player

9. WARRANTY AND SUPPORT

INTEMPO products are designed and manufactured to the highest standards. For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included with your purchase or visit the official INTEMPO website.

Please retain your proof of purchase as it may be required for warranty claims.

For further assistance, you may contact your local retailer or the INTEMPO customer service department.