

[Manuals.plus](#) /

> [Walfront](#) /

> Walfront LED Electronic Watch User Manual

## Walfront LED Electronic Watch

# Walfront LED Electronic Watch User Manual

Model: LED Electronic Watch

## INTRODUCTION

Welcome to your new Walfront LED Electronic Watch. This manual provides detailed instructions for setting up, operating, and maintaining your watch to ensure optimal performance and longevity. This watch features a durable silicone strap and a clear digital display, offering convenience and functionality for daily use.

## PRODUCT OVERVIEW

The Walfront LED Electronic Watch is designed for simplicity and ease of use. It displays time and date digitally and includes additional functions such as an alarm and night light.

### Key Features:

- Digital LED display for clear time and date viewing.
- Durable and adjustable silicone strap for comfortable wear.
- Electronic movement for precise timekeeping.
- Functions include time, date, alarm, and night light.
- Lightweight design (approximately 30g).

### Watch Components:

The watch consists of a main display unit integrated into a silicone strap. There is typically a single button for operation, usually located on the watch face or side.



Image: A black Walfront LED Electronic Watch, with a collage of other available colors (blue, pink, green, yellow, white, red, purple, orange) in the background, illustrating the design and color options.

## SETUP

---

### Initial Power On:

Upon receiving your watch, it may be in a power-saving mode. Press the single button on the watch face to activate the display and check the current time.

### Adjusting the Strap:

The silicone strap is adjustable to fit various wrist sizes. Locate the buckle and adjust the pin to the desired hole for a comfortable and secure fit.



Image: A woman wearing a Walfront LED Electronic Watch on her left wrist, demonstrating the watch in active use during a run. The watch is white with a red LED display.

## OPERATING INSTRUCTIONS

The Walfront LED Electronic Watch typically operates with a single button for all functions.

### Viewing Time and Date:

1. **Press the button once:** The LED display will show the current time (hours and minutes).
2. **Press the button a second time (short press):** The display will show the current date (month and day).
3. **Press the button a third time (short press):** The display will show seconds.

### Setting Time and Date:

1. **Enter Setting Mode:** Press and hold the button for approximately 3-5 seconds until the hour digits begin to flash.
2. **Set Hours:** While the hour digits are flashing, short press the button repeatedly to advance the hour. Once the correct hour is displayed, press and hold the button again for 3-5 seconds to confirm and move to minute setting.
3. **Set Minutes:** While the minute digits are flashing, short press the button repeatedly to advance the minute. Press and hold the button for 3-5 seconds to confirm and move to month setting.
4. **Set Month:** While the month digits are flashing, short press the button repeatedly to advance the month. Press and hold the button for 3-5 seconds to confirm and move to day setting.
5. **Set Day:** While the day digits are flashing, short press the button repeatedly to advance the day. Press and hold the button for 3-5 seconds to confirm and exit setting mode.

*Note:* If no button is pressed for a few seconds during setting, the watch may exit setting mode automatically. You will need to re-enter the setting mode from step 1.

### Using the Night Light:

The LED display itself acts as the night light. When the display is activated by pressing the button, it will illuminate

for a few seconds, providing visibility in low-light conditions.

## MAINTENANCE

---

### Cleaning:

Wipe the watch face and silicone strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the watch's finish or material.

### Storage:

Store your watch in a cool, dry place away from direct sunlight and extreme temperatures when not in use. This helps preserve the battery life and material integrity.

### Battery Replacement:

The watch uses a standard button cell battery. When the display becomes dim or stops functioning, the battery may need replacement. It is recommended to have battery replacement performed by a qualified technician to avoid damaging the watch's internal components or water resistance seal.

*Note:* This watch is generally designed for light use and may not be fully waterproof. Avoid submerging it in water.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery or power-saving mode.	Press the button to activate the display. If still dim, replace the battery.
Time/Date is incorrect.	Time/Date not set correctly or reset due to battery change.	Follow the "Setting Time and Date" instructions to adjust.
Button is unresponsive.	Stuck button, internal fault, or extremely low battery.	Ensure the button is not physically stuck. Try replacing the battery. If the issue persists, contact customer support.

## SPECIFICATIONS

---

- **Brand:** Walfront
- **Model:** LED Electronic Watch
- **Display Type:** Digital LED
- **Movement:** Electronic
- **Case Material:** Rhodium
- **Strap Material:** Silicone
- **Weight:** Approximately 30g
- **Functions:** Time, Date, Alarm, Night Light
- **Color:** Black (other colors may vary)

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the retailer's policy or contact Walfront customer service through their official channels. Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the Walfront brand page on Amazon: [Walfront Store](#)

