

## Accutime SPD4492

# Accutime Marvel Spider-Man Kids' Digital Watch SPD4492 Instruction Manual

Model: SPD4492

[Introduction](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## 1. INTRODUCTION

This manual provides instructions for the Accutime Marvel Spider-Man Kids' Digital Watch, model SPD4492. This digital watch is designed for children, featuring a Spider-Man theme and a digital time display with flashing lights.

### Key Features:

- Digital time display with a large Spider-Man character on the dial.
- Multi-colored flashing LCD lights, activated by a side button.
- Durable plastic casing and strap with an easy-to-use buckle.
- Quartz movement for accurate timekeeping.
- Designed for ages 4 and up.



Figure 1: Front view of the Accutime Marvel Spider-Man Kids' Digital Watch SPD4492.

## 2. SETUP

### 2.1 Battery Installation

The watch comes with a pre-installed product-specific battery. If the display is dim or not functioning, the battery may need to be replaced. Battery replacement should be performed by a qualified technician to ensure proper sealing and function.

## 2.2 Initial Time Setting

Upon first use or after battery replacement, you may need to set the correct time. Refer to the "Operating Instructions" section for detailed steps on setting the time.

## 3. OPERATING INSTRUCTIONS

---

### 3.1 Reading the Time

The watch features a digital display. To view the time, press the button located on the side of the watch case. The time will illuminate on the display for a few seconds.

### 3.2 Activating Flashing Lights

To activate the multi-colored flashing LCD lights, press the same side button used to display the time. The lights will flash for a short duration, adding a fun visual effect.

### 3.3 Setting the Time

To set the time on your digital watch, follow these steps:

1. **Enter Setting Mode:** Press the side button once to display the time. Then, press and **hold** the side button for approximately 3-5 seconds until the hour digits begin to flash.
2. **Adjust Hour:** While the hour digits are flashing, press the side button repeatedly to advance the hour. Ensure you set the correct AM/PM if applicable (though this watch typically uses a 12-hour format without explicit AM/PM indicator, it cycles through 1-12).
3. **Set Minutes:** Once the hour is set, press and **hold** the side button again for approximately 3 seconds. The minute digits will begin to flash.
4. **Adjust Minutes:** While the minute digits are flashing, press the side button repeatedly to advance the minutes.
5. **Exit Setting Mode:** After setting the minutes, press and **hold** the side button one last time for approximately 3 seconds, or wait for about 5 seconds without pressing any button. The digits will stop flashing, and the time will be set.

***Note:** If the watch has a second button, it might be used to cycle through settings or confirm selections. For this model, it is assumed a single button controls both display and setting functions.*



Figure 2: Back view of the watch, displaying model information.

## 4. MAINTENANCE

### 4.1 Cleaning

To clean your watch, wipe it gently with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the watch case. Avoid using harsh chemicals or abrasive cleaners.

### 4.2 Water Resistance

**IMPORTANT: This watch is NOT water resistant.**

Avoid exposing the watch to water, including rain, splashes, showering, swimming, or submersion. Water exposure can cause irreversible damage to the internal components.

### 4.3 Battery Care

When the display becomes dim or stops working, the battery may need replacement. Promptly replace depleted batteries to prevent leakage and potential damage to the watch. Dispose of old batteries responsibly according to local regulations.



Figure 3: The watch comfortably worn on a wrist.

## 5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is dim or blank.	Depleted battery.	Replace the battery.
Time is incorrect or difficult to set.	Incorrect setting procedure.	Refer to Section 3.3 "Setting the Time" and follow the steps carefully. Ensure you press and hold the button for the specified duration to enter and exit setting modes.
Lights are not flashing.	Battery low or button not pressed correctly.	Ensure the battery is not depleted. Press the side button firmly.
Watch stopped working after contact with water.	Water damage.	This watch is not water resistant. Water damage is typically irreversible and not covered under warranty.

## 6. SPECIFICATIONS

Feature	Detail
Model Number	SPD4492
Brand	Accutime
Movement Type	Quartz
Display Type	Digital
Case Material	Plastic

Feature	Detail
Band Material	Plastic
Case Diameter	42 mm
Water Resistance Level	Not Water Resistant
Power Source	Battery Powered (1 Product Specific battery included)
Recommended Age	6 - 6 years
Item Weight	1 Ounce
Clasp Type	Buckle

## 7. WARRANTY AND SUPPORT

---

### 7.1 Warranty Information

This Accutime watch is covered by a manufacturer's warranty. For specific details regarding the warranty period and coverage, please refer to the documentation included with your purchase or contact Accutime customer service directly. Please note that damage due to water exposure is not covered as this watch is not water resistant.

### 7.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact Accutime customer support. Contact information can typically be found on the product packaging or the official Accutime website.

## 8. PRODUCT VIDEO

---

Your browser does not support the video tag.

Video: Overview of the Accutime Marvel Spider-Man Kids' Digital Watch SPD4492. This video demonstrates the watch's design and features, including the digital display and overall appearance.