



Manuals.plus /

› KUPPET /

› KUPPET 21lbs Compact Twin Tub Portable Washing Machine Instruction Manual (Model KP1040600T)

KUPPET KP1040600T

KUPPET 21lbs Compact Twin Tub Portable Washing Machine Instruction Manual

Model: KP1040600T

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance to ensure safe and efficient operation. Keep this manual for future reference.

- **Electrical Safety:** Ensure the power supply matches the voltage specified on the appliance. Do not operate the machine with a damaged power cord or plug. Avoid touching the power plug with wet hands.
- **Water Safety:** Do not immerse the electrical parts of the machine in water. Ensure all water connections are secure to prevent leaks. Do not use hot water above 122°F (50°C).
- **Moving Parts:** Keep hands, hair, and clothing away from moving parts during operation, especially the pulsator and spin tub. Always ensure the lids are closed during washing and spinning.
- **Placement:** Place the machine on a stable, level surface to prevent vibration and noise. Ensure adequate ventilation around the machine.
- **Children and Pets:** Keep children and pets away from the appliance during operation and when unattended.
- **Overloading:** Do not overload the wash or spin tubs beyond their specified capacity to prevent damage and ensure proper cleaning.

PRODUCT OVERVIEW

The KUPPET Compact Twin Tub Portable Washing Machine is designed for small living spaces, offering both washing and spin-drying functions. Its dual-motor design provides efficient cleaning while maintaining quiet operation.

Product Feature



Energy Saving



Spin
Wash&Dry



Double-cylinder



Quite



Figure 1: Product Features. This image highlights the key features of the KUPPET portable washing machine, including energy saving, spin wash & dry functionality, a double-cylinder design, and quiet operation.

Products Appearance



The twin tub design can meet you different needs.



Figure 2: Product Appearance. A front view of the KUPPET portable washing machine, illustrating its twin tub design suitable for various laundry needs.

Product Application Scenario

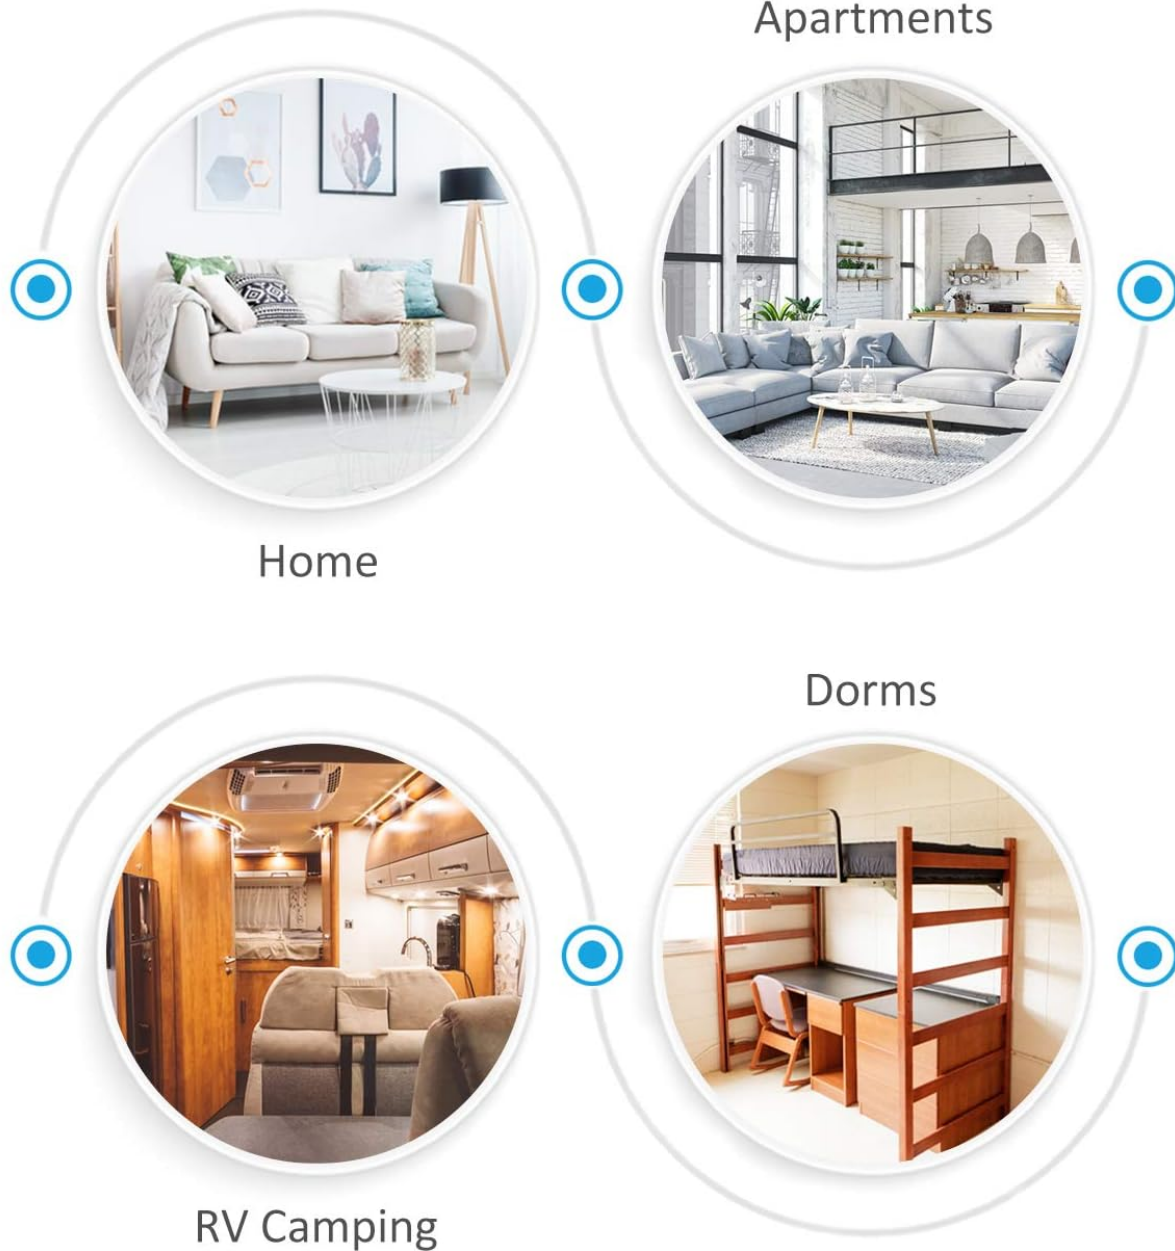


Figure 3: Product Application Scenarios. This diagram illustrates the versatility of the KUPPET portable washing machine, suitable for use in homes, apartments, dormitories, and RV camping environments.

PRODUCT COMPONENTS

Familiarize yourself with the main components of your washing machine:

Product Structure



Figure 4: Product Structure. This image labels the main parts of the washing machine, including the water inlet, spin cap, pulsator, spin tub, drain hose, and power wire.

- **Water Inlet:** Port for filling the wash tub with water.
- **Pulsator:** Located at the bottom of the wash tub, it agitates clothes during the wash cycle.
- **Spin Tub:** Smaller tub for spin-drying clothes.
- **Spin Cap:** A cover placed over clothes in the spin tub to secure them during the spin cycle.
- **Drain Hose:** Used to discharge water from the machine.
- **Power Wire:** Connects the machine to an electrical outlet.
- **Removable Filter Box:** Located inside the wash tub, it collects fluff and lint during washing.

SETUP AND INSTALLATION

Proper setup ensures optimal performance and safety.

1. **Placement:** Position the washing machine on a firm, level surface. Ensure it is close to a water source and a drainage point (sink, bathtub, or floor drain).
2. **Water Connection:** Connect the provided water inlet hose to the water injection port on the machine. The other end of the hose can be connected to a faucet or used to fill the tub manually with a bucket.
3. **Drainage:** Place the drain hose in a suitable drainage area. Ensure the hose is not kinked or blocked to allow for proper water discharge. The machine features a drainage pump for easy water removal.

OPERATING INSTRUCTIONS

Follow these steps for washing and spin-drying your laundry.

Product Operations


0—15 mins
WASH TIMER


**SOFT
DRAIN
STANDARD**
WASH DRAIN SELECTOR


0—5 mins
SPIN TIMER

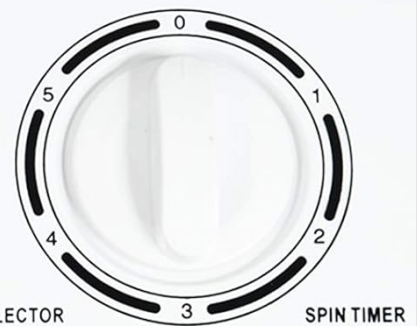


Figure 5: Product Operations. This image displays the control panel with the Wash Timer, Wash Drain Selector, and Spin Timer dials.

Washing Cycle

1. **Load Clothes:** Open the wash tub lid and place clothes inside. Do not exceed the maximum washing capacity of 21 pounds.
2. **Add Water and Detergent:** Fill the wash tub with water to the desired level using the inlet hose or manually. Add appropriate laundry detergent.

3. **Set Wash Timer:** Turn the 'Wash Timer' dial to select the desired wash time (0-15 minutes).
4. **Set Wash/Drain Selector:** Turn the 'Wash Drain Selector' dial to either 'Soft' or 'Standard' for washing.
5. **Start Washing:** The machine will begin the wash cycle.

Spin Drying Cycle

1. **Transfer Clothes:** After the wash cycle, transfer the wet clothes from the wash tub to the spin tub. Do not exceed the maximum spin-drying capacity of 8 pounds.
2. **Place Spin Cap:** Place the spin cap firmly on top of the clothes inside the spin tub.
3. **Set Spin Timer:** Close the spin tub lid and turn the 'Spin Timer' dial to select the desired spin time (0-5 minutes).
4. **Water Injection (Optional):** During the spin cycle, you can inject clean water into the spin tub through the water inlet to rinse clothes further. This saves water and time.

Video 1: Portable Washing Machine Operation. This video demonstrates the basic operation of the KUPPET Portable Washing Machine, including loading clothes, adding water, and using the wash and spin functions.

MAINTENANCE

Regular maintenance helps prolong the life of your appliance.

- **Cleaning the Filter Box:** Regularly remove and clean the lint filter box located inside the wash tub. This prevents lint buildup and ensures efficient washing.
- **Cleaning Tubs:** After each use, wipe down the interior of both tubs with a soft cloth to remove any residue. For deeper cleaning, use a mild detergent and rinse thoroughly.
- **Exterior Cleaning:** Clean the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Storage:** If storing the machine for an extended period, ensure both tubs are dry and the drain hose is empty. Store in a dry, well-ventilated area.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Power outage; Timer not set.	Check power connection; Restore power; Set timer correctly.
Water not draining	Drain hose kinked or blocked; Drain selector not set to 'Drain'.	Straighten drain hose, clear blockages; Turn 'Wash Drain Selector' to 'Drain'.
Excessive vibration/noise during spin	Clothes unevenly distributed in spin tub; Machine not on a level surface.	Rearrange clothes evenly; Adjust machine's position on a level surface.
Water leaking from machine	Overfilling the wash tub; Loose water inlet/drain hose connections.	Do not exceed maximum water level; Secure all hose connections.

If the problem persists after attempting these solutions, please contact customer support.


SPECIFICATIONS



Easy operation-allowing you to simply put in your load of clothes and fill with water.



Then start washing or spin-dry.

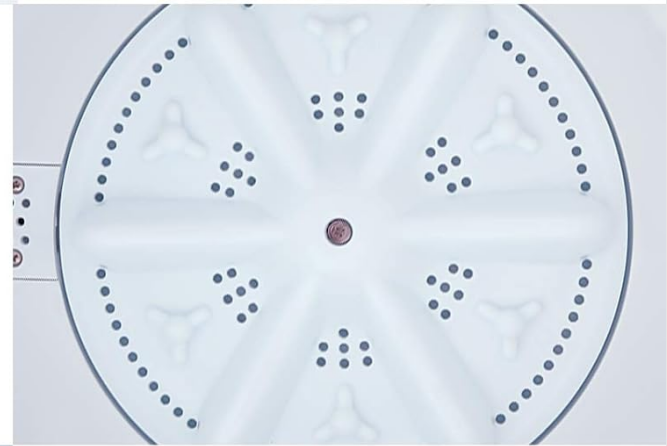

Eco-friendly design-less water and detergent used which leads you for money saving.



Figure 6: Product Dimensions. This image provides a visual representation of the washing machine's dimensions.

- **Brand:** KUPPET
- **Model:** KP1040600T
- **Washing Capacity:** 21 Pounds
- **Spin Drying Capacity:** 8 Pounds
- **Product Dimensions:** 25 x 14.2 x 28 inches
- **Item Weight:** 13 Pounds
- **Material:** Plastic
- **Operation Mode:** Automatic
- **Number of Washing Cycles:** 2 (Soft, Standard)
- **Number of Drying Cycles:** 1 (Spin)
- **Controls Type:** Push Button / Dial
- **Maximum Rotational Speed:** 1300 RPM

- **Access Location:** Top Load
- **Special Features:** Portable, Space-saving, Compact, Energy Efficient

WARRANTY AND SUPPORT

This KUPPET Portable Washing Machine comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact KUPPET customer service through the contact information provided in your product packaging or on the official KUPPET website.