

[manuals.plus](#) /

› [KUPPET](#) /

› [KUPPET 10lbs Mini Twin Tub Washing Machine Instruction Manual \(Model: 10406002900\)](#)

KUPPET 10406002900

KUPPET 10lbs Mini Twin Tub Washing Machine Instruction Manual

Model: 10406002900

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the KUPPET 10lbs Mini Twin Tub Washing Machine. This compact and portable appliance is designed for efficient laundry in smaller living spaces such as apartments, dormitories, RVs, and during camping trips. This manual provides essential information for the safe and effective setup, operation, and maintenance of your washing machine.



Figure 1: KUPPET 10lbs Mini Twin Tub Washing Machine (Purple model shown)

2. SAFETY INFORMATION

Please read all instructions carefully before using the appliance to prevent injury or damage. Keep this manual for future reference.

- Ensure the washing machine is placed on a stable, level surface to prevent tipping or excessive vibration during operation.
- Do not operate the machine with a damaged power cord or plug. Contact qualified personnel for repair.
- Keep children and pets away from the appliance during operation.
- Do not immerse the electrical components in water.
- Unplug the machine from the power outlet when not in use or before cleaning.
- Avoid overloading the wash or spin tubs, as this can damage the motor or cause imbalance.
- Ensure the drainage hose is properly positioned to prevent water spillage, especially given the gravity-fed drainage system.

3. PRODUCT FEATURES

- **Twin Tub Design:** Allows for simultaneous washing and spinning, saving time.
- **Compact Size:** Ideal for small living spaces, easy to store and move.
- **Capacity:** Total capacity of 10 lbs (5.5 lbs for washing, 4.5 lbs for spin cycle).
- **Timer Control:** Separate analog timers for wash (up to 15 minutes) and spin (up to 5 minutes) operations.
- **Powerful Performance:** Equipped with a 1300 RPM motor for effective cleaning.
- **Easy Drainage:** Features a drainage tube for convenient removal of dirty water.
- **Energy Efficient:** Uses less water and detergent compared to larger machines.



Figure 2: Key specifications and features of the KUPPET Washing Machine.

4. PACKAGE CONTENTS

Verify that all items are included in the package:

- KUPPET 10lbs Mini Twin Tub Washing Machine
- Instruction Manual
- Drainage Tube
- Plastic Circle (for spin tub)

5. SPECIFICATIONS

Specification	Value
Brand	KUPPET
Model Number	10406002900

Total Capacity	10 lbs (4.5 kg)
Wash Capacity	5.5 lbs
Spin Capacity	4.5 lbs
Dimensions (L x W x H)	21.6 x 14.1 x 23.2 inches
Item Weight	24.2 pounds
Power Supply	110V/60Hz
Rated Wash Input Power	240W
Rated Dry Input Power	120W
Max Spin Speed	1300 RPM
Control Type	Knob
Access Location	Top Load



Figure 3: Dimensions of the KUPPET Mini Twin Tub Washing Machine.

6. SETUP

6.1 Placement

Place the washing machine on a stable, level surface. For optimal drainage, it is recommended to elevate the machine at least 6 inches off the ground, as it utilizes a gravity-fed drainage system. A shower or bathtub is an ideal location to ensure proper drainage and contain any minor leaks.

6.2 Water Connection

The water inlet is a simple opening. You can manually pour water into the wash tub or use a shower hose to fill it. There is no internal pump for water intake.

6.3 Drainage

The machine uses a gravity-fed drainage system. Ensure the drainage tube is positioned lower than the machine's base to allow water to flow out effectively. Place the drainage tube directly into a drain (e.g., bathtub, sink) to prevent water from accumulating on the floor.

Your browser does not support the video tag.

Video 1: Detailed setup and operation guide for the KUPPET Mini Washing Machine, including tips for water filling and drainage.

7. OPERATING INSTRUCTIONS

7.1 Initial Use (Pre-wash)

Before washing clothes for the first time, run a cycle with just water to clean out any manufacturing residues, dyes, or chemicals from the factory. This helps ensure your clothes are washed in a clean environment.

7.2 Washing Cycle

- Load Clothes:** Open the lid of the wash tub and place your clothes inside. Do not overload; ensure clothes can move freely for effective agitation.
- Add Detergent:** Use a small amount of detergent, approximately 1/4 to 1/6 of what you would use in a standard washing machine. Excessive detergent can lead to excessive suds and difficulty rinsing.
- Fill with Water:** Fill the wash tub with water to a level that covers the clothes. You can use a shower hose or manually pour water.
- Select Wash Mode:** Use the middle knob (Select Switch) to choose between "Standard" for regular washing or "Soft" for delicate items.
- Set Wash Timer:** Turn the "Wash Timer" knob to your desired wash time, up to a maximum of 15 minutes. The machine will start washing automatically.

7.3 Spin Cycle

- Transfer Clothes:** After the wash cycle, transfer the wet clothes from the wash tub to the spin tub.
- Even Distribution:** Arrange the clothes evenly around the spin tub to prevent imbalance and excessive vibration.
- Secure Plastic Circle:** Place the provided plastic circle firmly on top of the clothes in the spin tub. This helps maintain balance and prevents clothes from flying out.
- Set Spin Timer:** Turn the "Spin Timer" knob to your desired spin time, up to a maximum of 5 minutes. The machine will begin spinning.

SIMULTANEOUS OPERATION

Separate timer control settings for washer and spinner



Figure 4: Control panel with Wash Timer, Select Switch, and Spin Timer.

7.4 Draining Water

To drain water from either tub, turn the "Select Switch" knob to the "Drain" position. Ensure the drainage hose is positioned correctly for water to flow out.



Figure 5: KUPPET Washing Machine with both wash and spin tub lids open.

8. MAINTENANCE

8.1 Cleaning

- After each use, drain all water from the machine.
- Wipe down the interior and exterior of the machine with a soft, damp cloth.
- Leave the lids open for a period to allow the tubs to air dry and prevent mildew.
- Regularly check and clean any lint filters or screens to ensure optimal performance.

8.2 Storage

Store the washing machine in a cool, dry place away from direct sunlight and extreme temperatures.

9. TROUBLESHOOTING

If you encounter issues with your KUPPET washing machine, refer to the following common solutions:

- **Machine Not Starting:** Ensure the power cord is securely plugged in and the timer knobs are set correctly.
- **Water Not Draining:** Check that the "Select Switch" is set to "Drain" and the drainage hose is positioned lower than the machine's base and free of kinks or blockages.
- **Excessive Vibration/Noise:** This often indicates an unbalanced load in the spin tub. Redistribute clothes evenly. Ensure the machine is on a stable, level surface.
- **Water Leakage:** Verify all hoses are securely connected. Ensure the machine is elevated for proper gravity drainage. Minor leaks can occur if the machine is not perfectly sealed or if water is overfilled.
- **Clothes Not Clean:** Do not overload the wash tub. Use the appropriate amount of detergent. Ensure sufficient water is used to cover the clothes.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or the official KUPPET website. Keep your purchase receipt as proof of purchase.