

Comfee SOGNIDORO-09E

Comfee SOGNIDORO-09E Portable Air Conditioner

USER MANUAL

1. SAFETY INFORMATION

Please read all safety warnings and instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance uses R290 refrigerant, which is flammable. Do not puncture the refrigerant circuit.
- Ensure the appliance is placed on a stable, level surface to prevent tipping.
- Do not block air inlets or outlets. Maintain adequate clearance around the unit for proper ventilation.
- Do not operate the unit with a damaged power cord or plug. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Unplug the appliance from the power outlet before cleaning, maintenance, or moving.
- Do not insert fingers or foreign objects into the air inlets or outlets.
- Keep the appliance away from heat sources and direct sunlight.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

2. PRODUCT OVERVIEW

The Comfee SOGNIDORO-09E is a portable air conditioner designed to provide efficient cooling and dehumidification for your indoor spaces. It features a compact design with swivel wheels for easy mobility and a user-friendly control panel and remote.

Key Features:

- **Auto-Restart Function:** In case of a power interruption during operation, the unit will automatically resume with the previous settings once power is restored.
- **Motorized Directional Vanes:** The air outlet vanes are motorized, allowing for continuous oscillation or fixed positioning with a single button press.
- **Infrared Remote Control:** All functions of the unit can be controlled conveniently via the included infrared remote control.
- **Swivel Wheels:** Equipped with swivel wheels for easy transport and repositioning of the unit.
- **Sleep Function:** Gradually adjusts the set cooling temperature to prevent overcooling during the night, promoting comfortable sleep.



Image: Front view of the Comfee SOGNIDORO-09E Portable Air Conditioner, showing the air outlet and Comfee logo.

Potente funzione di deumidificazione



Image: Angled view of the Comfee SOGNIDORO-09E Portable Air Conditioner, highlighting its compact design and side vents.



Image: Diagram showing the dimensions of the Comfee SOGNIDORO-09E Portable Air Conditioner: 45.8cm width, 37.3cm depth, and 77.5cm height.

3. SETUP

Follow these steps to properly set up your portable air conditioner:

1. **Unpacking:** Carefully remove the unit from its packaging. Retain the packaging for future storage or transport.
2. **Placement:** Place the air conditioner on a firm, level floor in the desired room. Ensure there is at least 20-30 cm of space around the unit for proper airflow. Do not place it near heat sources or in direct sunlight.
3. **Exhaust Hose Installation:**
 - Attach the exhaust hose to the air outlet on the back of the unit.
 - Extend the exhaust hose to the nearest window or suitable opening.
 - Use the included window sealing kit (if applicable) to secure the hose in the window opening, ensuring minimal air leakage.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet with the correct voltage (230V). Ensure the outlet is capable of handling the unit's wattage (1015W).
5. **Drainage (Dehumidification Mode):** When operating in dehumidification mode, condensate water will collect. Ensure a suitable container is placed under the drainage outlet, or connect a continuous drainage hose if available.

Gas refrigerante R290



Image: The Comfee SOGNIDORO-09E Portable Air Conditioner set up with its exhaust hose connected to a window sealing kit for proper ventilation.

4. OPERATING INSTRUCTIONS

Your Comfee SOGNIDORO-09E portable air conditioner offers various modes and settings for optimal comfort.

Control Panel and Remote Control:

The unit can be operated using the control panel on top of the unit or the infrared remote control. The remote control allows access to all functions without needing to be near the unit.

Operating Modes:

- **Cooling Mode:** Press the 'Mode' button until the cooling indicator light is on. Adjust the desired temperature using the temperature up/down buttons. The unit will cool the room to the set temperature.
- **Dehumidification Mode:** Press the 'Mode' button until the dehumidification indicator light is on. In this

mode, the unit removes moisture from the air. Ensure proper drainage is set up.

- **Fan Mode:** Press the 'Mode' button until the fan indicator light is on. The unit will circulate air without cooling. You can adjust the fan speed.



Image: The Comfee SOGNIDORO-09E Portable Air Conditioner demonstrating its powerful dehumidification function, removing moisture from the air.

Additional Functions:

- **Temperature Adjustment:** Use the '+' and '-' buttons to set your desired room temperature in Cooling mode.
- **Fan Speed:** In Cooling or Fan mode, press the 'Fan Speed' button to cycle through available fan speeds (e.g., Low, Medium, High). Note: Some users report minimal difference between fan speeds.
- **Sleep Mode:** Activate Sleep mode for quiet operation and gradual temperature adjustment during the night. The unit will slowly increase the set temperature to prevent overcooling.

Sleep Mode



Image: The Comfee SOGNIDORO-09E Portable Air Conditioner operating in Sleep Mode, designed for quiet and comfortable nighttime use.

- **Oscillation:** Press the 'Swing' or 'Oscillation' button to activate the motorized directional vanes, allowing the airflow to sweep across the room. Press again to stop the vanes at a desired position.
- **Timer Function:** Set a timer for the unit to automatically turn on or off after a specified period. Refer to the remote control instructions for detailed timer setup.

5. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your air conditioner.

Filter Cleaning:

The unit is equipped with a dust filter. A dirty filter can reduce cooling efficiency and airflow. Clean the filter regularly, ideally every two weeks or more often depending on usage and air quality.

1. Unplug the unit from the power outlet.
2. Locate and remove the air filter (usually at the back or side of the unit).
3. Clean the filter using a vacuum cleaner to remove dust, or wash it gently with lukewarm water and mild detergent.
4. Allow the filter to dry completely before reinserting it into the unit.

Condensate Drainage:

In cooling and dehumidification modes, water will accumulate inside the unit. The unit has a built-in water collection system. When the tank is full, the unit may stop operating and display an error code. You will need to drain the water manually.

- Place a large, shallow pan or container under the drainage outlet at the bottom rear of the unit.
- Remove the drain plug to allow water to flow out.
- Once drained, replace the drain plug securely.
- For continuous drainage in high humidity environments, you can connect a suitable hose to the continuous drainage port (if available) and direct it to a floor drain.

General Cleaning:

- Wipe the exterior of the unit with a soft, damp cloth. Do not use harsh chemicals, abrasives, or solvents.
- Ensure the unit is completely dry before plugging it back in.

Storage:

If storing the unit for an extended period, ensure it is completely drained of water, cleaned, and the filter is dry. Store it in a cool, dry place, preferably in its original packaging.

6. TROUBLESHOOTING

Before contacting customer support, try the following troubleshooting steps for common issues:

| Problem | Possible Cause | Solution |
|---------------------------------|--|--|
| Unit does not turn on | No power supply; Power cord not plugged in; Full water tank. | Check power outlet and plug; Empty water tank if full. |
| Unit does not cool sufficiently | Air filter dirty; Room too large; Doors/windows open; Exhaust hose not properly installed; Temperature setting too high. | Clean air filter; Ensure room size is within unit capacity; Close doors/windows; Check exhaust hose connection; Lower temperature setting. |
| Unit is noisy | Unit not on a level surface; Air filter dirty; Internal components vibrating. | Place unit on a level surface; Clean air filter; If noise persists and is unusual, contact support. |

| Problem | Possible Cause | Solution |
|----------------------------|--|--|
| Water leakage | Drain plug loose or missing; Drainage hose clogged or improperly connected; Water tank full. | Check and secure drain plug; Clear any blockages in drainage hose; Empty water tank. |
| Remote control not working | Batteries dead or incorrectly inserted; Obstruction between remote and unit. | Replace batteries; Ensure clear line of sight to unit's receiver. |

If the problem persists after trying these solutions, please contact customer support. Do not attempt to repair the unit yourself, especially concerning the refrigerant circuit, as it contains flammable R290 gas. Always consult a qualified professional for repairs.

7. SPECIFICATIONS

Detailed technical specifications for the Comfee SOGNIDORO-09E Portable Air Conditioner:

| Specification | Value |
|--------------------------------|--|
| Manufacturer | Comfee |
| Model Number | SOGNIDORO-09E |
| Product Dimensions (L x W x H) | 45.8 x 37.3 x 77.5 cm |
| Weight | 26.31 kg |
| Color | White |
| Power Source | Electric |
| Voltage | 230 Volt |
| Wattage | 1015 Watt |
| Cooling Capacity | 9000 BTU |
| Refrigerant Type | R290 |
| Noise Level | 65 dB |
| Energy Efficiency Class | A |
| Filter Type | Dust filter |
| Included Components | Portable air conditioner, exhaust hose, window kit, remote control |





енергия · ενεργεια

IE

IA

Comfee

SOGNIDORO-09E

EER



A⁺⁺⁺

A⁺⁺

A⁺

A

B

C

D

A

2,6
kW

2,6
EER



65dB

1,1
kWh/60min*

ENERGIA · ЕНЕРГИЯ · ΕΝΕΡΓΕΙΑ · ENERGIJA · ENERGY · ENERGIE · ENERGI

* Минимум потребления энергии

Image: EU Energy Label for Comfee SOGNIDORO-09E, showing Energy Efficiency Class A, 2.6 kW cooling capacity, and 65 dB noise level.

| Information requirements | | | |
|--|--|-------------|-----------------------|
| Information to identify the model(s) to which the information relates to SOGNIDORO-09E | | | |
| Description | Symbol | value | Unit |
| Rated capacity for cooling | P_{rated} for cooling | [2,6] | kW |
| Rated capacity for heating | P_{rated} for heating | [x,x] | kW |
| Rated power input for cooling | P_{EER} | [1,1] | kW |
| Rated power input for heating | P_{COP} | [x,x] | kW |
| Rated Energy efficiency ratio | $EERd$ | [2,6] | — |
| Rated Coefficient of performance | $COPd$ | [x,x] | — |
| Power consumption in thermostat-off mode | P_{TO} | [1,0] | W |
| Power consumption in standby mode | P_{SB} | [0,5] | W |
| Electricity consumption of single/double duct appliances (indicate for cooling and heating separately) | $DD: Q_{DD}$ | $DD: [x]$ | DD: kWh/a |
| | $SD: Q_{SD}$ | $SD: [1,1]$ | SD: kWh/h |
| Sound power level | L_{WA} | [65] | dB(A) |
| Global warming potential | GWP | [3] | kgCO ₂ eq. |
| Contact details for obtaining more information | GD Midea Air-Conditioning Equipment Co., Ltd. Midea Industrial City, Beijiao, 528311 Shunde, Foshan, Guangdong, People's Republic of China | | |

| Scheda Prodotto | | | |
|--|----------------------|--------|-------|
| Informazioni relative al modello SOGNIDORO-09E | | | |
| Descrizione | Simbolo | Valore | Unità |
| Capacità nominale raffreddamento | $P_{nominale Raff.}$ | [2,6] | kW |
| Capacità nominale riscaldamento | $P_{nominale Risc.}$ | [x,x] | kW |
| Potenza elettrica nominale raffreddamento | P_{EER} | [1,1] | kW |
| Potenza elettrica nominale riscaldamento | P_{COP} | [x,x] | kW |
| EER Nominale | $EERd$ | [2,6] | — |
| COP Nominale | $COPd$ | [x,x] | — |
| Potenza elettrica modalità termostato spento | P_{TO} | [1,0] | W |
| Potenza elettrica modalità attesa | P_{SB} | [0,5] | W |

| Descrizione caratteristica tecnica | Simbolo | Unità | Valore |
|---|--|-------------|-----------------------|
| Consumo elettrico per condizionatori a singolo/doppio condotto (indicazione differenziata per Raffreddamento e Riscaldamento) | $DD: Q_{DD}$ | $DD: [x]$ | DD: kWh/a |
| | $SD: Q_{SD}$ | $SD: [1,1]$ | SD: kWh/h |
| Livello di potenza sonora | L_{WA} | $[65]$ | dB(A) |
| GWP | GWP | $[3]$ | kgCO ₂ eq. |
| Contatto per ulteriori informazioni | Midea Italia S.r.l. , Via Lazzaroni 5 ,20147 Saronno(VA) -Italy- | | |

Image: Product Information Sheet for Comfee SOGNIDORO-09E, detailing technical requirements and contact information.

Similar sheets are available in French, Dutch, Polish, and Swedish.

For more detailed product information, you can visit the EPREL database: <https://eprel.ec.europa.eu/qr/2248483>

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the details provided below. Keep your purchase receipt as proof of purchase.

Manufacturer:


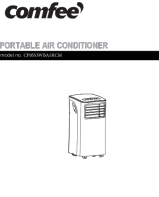

Comfee (Manufactured by Midea Italia S.r.l.)

Address: Viale Luigi Bodio 29/37, 20158 Milan, Italia

Customer Service:

- **Website:** <https://www.midea.com/it>
- **Email:** assistenza@midea.com
- **Phone:** +390296193015

Please contact customer support for any technical issues, warranty claims, or service requests. Do not attempt to open or repair the unit yourself.

| | |
|---|---|
|  <p>comfee® DE</p> <p>Mobiles Klimagerät (Leibschalen Klimagerät) Bedienungsanleitung</p> <p>Bitte lesen Sie die Bedienungsanleitung des Klimageräts sorgfältig durch und bewahren Sie sie an einem sicheren Ort auf. DIESE ANLEITUNG LERNEN UND BEWAHREN SIE!</p> | <p>Comfee Portable Air Conditioner MPPHA-07CRN7 Instruction Manual</p> <p>This document provides comprehensive instructions for the Comfee portable air conditioner, model MPPHA-07CRN7. It covers safety precautions, installation, operation, maintenance, and troubleshooting for optimal use.</p> |
|  <p>comfee®</p> <p>PORTABLE AIR CONDITIONER Instruction Manual</p> <p>Toll-free: 1-866-646-4332</p> | <p>Comfee CP05S3WBA1RCM Portable Air Conditioner Instruction Manual</p> <p>This instruction manual provides detailed safety precautions, installation, operation, maintenance, and troubleshooting guides for the Comfee CP05S3WBA1RCM portable air conditioner. Learn how to use your appliance safely and effectively.</p> |
|  <p>comfee®</p> <p>PORTABLE AIR CONDITIONER Instruction Manual</p> <p>Toll-free: 1-866-646-4332</p> | <p>Comfee Portable Air Conditioner MPPH-06CRN1-BI0 Instruction Manual</p> <p>This comprehensive instruction manual guides users through the safe operation, installation, maintenance, and troubleshooting of the Comfee Portable Air Conditioner, model MPPH-06CRN1-BI0. It also details remote control functions and the limited warranty.</p> |
|  <p>comfee®</p> <p>Split Air Conditioner INFINI SAVE</p> <p>SAFETY MANUAL</p> <p>Bitte lesen Sie das Handbuch sorgfältig durch, bevor Sie das Klimagerät installieren, betreiben oder warten. Es enthält wichtige Sicherheitshinweise und Anweisungen für die richtige Handhabung des Geräts.</p> | <p>Comfee Split Air Conditioner INFINI SAVE Safety Manual</p> <p>This safety manual provides essential guidelines for the installation, operation, and servicing of the Comfee INFINI SAVE Split Air Conditioner. It covers crucial safety precautions, handling of refrigerants, and proper procedures to ensure safe usage and maintenance.</p> |
|  <p>comfee®</p> <p>Remote Controller CR132-RG57A3</p> | <p>Comfee Air Conditioner Remote Controller Illustration and Operation Guide</p> <p>This document provides a detailed illustration and operational guide for the Comfee air conditioner remote controller, model CR132-RG57A3. It covers button functions, LCD indicators, and various operating modes like Auto, Cooling, Heating, Fan, Dehumidifying, and Timer operations.</p> |
|  <p>Owner's Manual</p> <p>comfee®</p> <p>2D-18K 3D-27K</p> | <p>Comfee 2D-18K 3D-27K Inverter Split-Type Air Conditioner Owner's Manual</p> <p>Comfee owner's manual for 2D-18K and 3D-27K inverter split-type air conditioners. Includes installation, operation, safety, troubleshooting, and maintenance guides.</p> |