

LaCrosse 617-3014

LaCrosse 617-3014 Mantel Alarm Clock User Manual

Model: 617-3014 | Brand: LaCrosse

1. INTRODUCTION

Thank you for choosing the LaCrosse 617-3014 Mantel Alarm Clock. This manual provides essential information for the proper setup, operation, and maintenance of your new clock. Please read these instructions carefully before use to ensure optimal performance and longevity of your device.

2. PRODUCT OVERVIEW

The LaCrosse 617-3014 is an analog quartz mantel alarm clock designed for reliability and style. It features a traditional beeping alarm and luminous hands for enhanced visibility in low-light conditions. The clock's classic design includes a black matted frame, black metal hands, and a quiet sweeping movement. A soft base pad is integrated to protect surfaces from scratches.



Figure 2.1: Front view of the LaCrosse 617-3014 Mantel Alarm Clock, showcasing its black matted frame and white analog dial with black numbers and luminous hands.

Key Features:

- Silent sweeping quartz movement for quiet operation.
- Durable plastic matted frame in black finish.
- Clear glass lens protecting the dial.
- Illuminating black metal hands for easy nighttime viewing.
- Traditional beep alarm sound.
- Requires one AA alkaline battery (not included).



Figure 2.2: The LaCrosse 617-3014 Mantel Alarm Clock placed on a wooden nightstand next to a vase of flowers, demonstrating its compact size and suitability for various room settings.

3. SETUP

3.1 Unpacking

Carefully remove the clock from its packaging. Inspect the clock for any signs of damage. Retain the packaging materials for future storage or transport if needed.

3.2 Battery Installation

The LaCrosse 617-3014 Mantel Alarm Clock requires one (1) AA alkaline battery for operation. Batteries are not included.

1. Locate the battery compartment cover on the back of the clock.
2. Remove the battery compartment cover by sliding or lifting it off.
3. Insert one new AA alkaline battery into the compartment, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover securely.

4. OPERATING INSTRUCTIONS

4.1 Setting the Time

1. Locate the time setting knob on the back of the clock.
2. Rotate the time setting knob clockwise or counter-clockwise until the hour and minute hands display the correct current time.

4.2 Setting the Alarm

1. Locate the alarm setting knob on the back of the clock.
2. Rotate the alarm setting knob to set the desired alarm time. The alarm hand will move independently of the time hands.
3. Locate the alarm ON/OFF switch (usually a small slider or button) on the back or side of the clock.
4. Slide the switch to the "ON" position to activate the alarm. Slide to "OFF" to deactivate.

4.3 Alarm Function

When activated, the alarm will sound a traditional beep at the set alarm time. To stop the alarm, slide the alarm ON/OFF switch to the "OFF" position. This model does not feature a snooze function.

5. MAINTENANCE

5.1 Cleaning

To clean the clock, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the clock's finish or internal components.

5.2 Battery Replacement

Replace the AA alkaline battery annually or when the clock's movement becomes erratic, the timekeeping becomes inaccurate, or the alarm sound weakens. Always dispose of used batteries responsibly according to local regulations.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not working / Hands not moving.	Battery is dead or incorrectly installed.	Check battery polarity. Replace with a new AA alkaline battery.
Alarm not sounding.	Alarm is not activated or set incorrectly.	Ensure the alarm ON/OFF switch is in the "ON" position. Verify the alarm time is set correctly.
Clock loses time or runs slow.	Low battery power.	Replace the AA alkaline battery with a new one.

7. SPECIFICATIONS

Model Number:	617-3014
---------------	----------

Brand:	LaCrosse
Display Type:	Analog
Movement Type:	Quartz (Silent Sweeping)
Power Source:	1 x AA Alkaline Battery (not included)
Product Dimensions:	4.92"W x 5.6"H
Material:	Plastic (Matted Frame)
Color:	Black
Special Features:	Illuminated Hands, Silent Clock, Beep Alarm

8. WARRANTY AND SUPPORT

This LaCrosse product comes with a Limited Warranty. For specific details regarding warranty coverage and duration, please refer to the warranty card included with your purchase or visit the official LaCrosse website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact LaCrosse customer service. Contact information can typically be found on the manufacturer's website or on the product packaging.

Website: www.lacrossetechnology.com (Example link, please refer to actual product documentation for correct URL)