

[Manuals.plus](#) /

› [Zerone](#) /

› Universal Remote Control User Manual

Zerone 8541715022

Universal Remote Control User Manual

Model: HTR-A18M (Zerone 8541715022)

For Haier HTR-A18M, 55D3550, 40D3500M, 48D3500 TV Models

1. INTRODUCTION

This user manual provides comprehensive instructions for the Universal Remote Control, designed as a dedicated replacement for various Haier TV models, including HTR-A18M, 55D3550, 40D3500M, and 48D3500. This remote control offers a stable and reliable connection for controlling your television.

Key features include:

- Professional dedicated replacement for specified Haier TV models.
- Effective transmitting distance of up to 10 meters (33 feet).
- Constructed from durable and wearable ABS material.
- Direct usability upon battery installation, no complex setup required.



Figure 1.1: Front and back view of the Zerone Universal Remote Control. The front displays all control buttons, while the back shows the model number HTR-A18M.

2. SETUP AND INSTALLATION

The Universal Remote Control is designed for immediate use with compatible Haier TV models. No programming or pairing is typically required.

2.1 Battery Installation

To begin using your remote control, you will need to install two (2) AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Close the battery compartment cover securely.



Figure 2.1: Close-up view of the remote control, highlighting the battery compartment on the back. This image also shows the top portion of the remote with the power and input buttons.

3. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready to operate your compatible Haier TV. Point the remote directly at the TV's infrared receiver for optimal performance.

3.1 Basic Functions

- **Power Button ():** Press to turn the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Directly select channels.
- **VOL +/-:** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the TV audio.
- **CH +/-:** Changes channels up or down.
- **MENU:** Accesses the TV's main menu.
- **BACK:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or function.
- **Navigation Buttons (▲ ▼ ◀ ▶):** Used to navigate through menus and options.
- **OK Button:** Confirms selections in menus.



Remote control replacement
for Haier HTR-A18M 55D3550
40D3500M 48D3500 TV.

Figure 3.1: A user holding the remote control, demonstrating its use with a Haier TV displaying a smart interface. This image illustrates the remote's compatibility and ease of use.

3.2 Advanced Functions

- **DISPLAY:** Shows current channel information or TV status.
- **SAP (Secondary Audio Program):** Toggles between audio tracks, if available.
- **SLEEP:** Sets a timer for the TV to automatically turn off.
- **WIDE:** Adjusts the screen aspect ratio.
- **AUDIO:** Selects audio modes or languages.
- **PICTURE:** Accesses picture settings.
- **CH.LIST:** Displays the channel list.
- **FAVORITE:** Accesses favorite channels.
- **Color Buttons (Red, Green, Yellow, Blue):** Perform specific functions depending on the TV menu or application.
- **Media Control Buttons (Play/Pause, Rewind, Fast Forward, Stop):** Control media playback.

THE REMOTE DISTANCE IS UP TO 10M / 33FT

(Actual remote distance depends on the model of your TV)



Figure 3.2: This image visually represents the remote control's effective transmitting distance, indicating it can operate from up to 10 meters (33 feet) away from the television.

4. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Avoid dropping the remote control or subjecting it to strong impacts, as this can damage internal components.

5. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following troubleshooting steps:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).
Remote only works at close range or requires hard button presses.	Weak batteries; obstruction between remote and TV; remote sensor on TV is dirty or obstructed.	Replace batteries. Ensure a clear line of sight to the TV's infrared receiver. Clean the TV's sensor if necessary.
Specific buttons not working.	Button stuck or damaged; TV model incompatibility for that specific function.	Gently press the button multiple times to dislodge any debris. Verify if the function is supported by your specific Haier TV model.
Remote does not control the TV at all.	Incorrect TV model; remote control malfunction.	Confirm your TV model is listed as compatible (Haier HTR-A18M, 55D3550, 40D3500M, 48D3500). If issues persist, contact customer support.

6. SPECIFICATIONS

Feature	Detail
Brand	Zerone
Model Number	8541715022
Compatible Devices	Haier HTR-A18M, 55D3550, 40D3500M, 48D3500 TV models
Connectivity Technology	Infrared (IR)
Material	ABS
Color	Black
Power Source	2 x AAA Batteries (not included)

Feature	Detail
Dimensions (Approx.)	17.5cm (Length) x 5.0cm (Width) x 2.0cm (Thickness)
Max Transmitting Distance	10m / 33ft

SIZE



Figure 6.1: Diagram illustrating the approximate dimensions of the remote control, showing its length, width, and thickness.

7. WARRANTY AND SUPPORT

Zerone products are designed for reliability and performance. We offer a satisfaction guarantee for your purchase. If you are not satisfied with your purchase for any reason, please feel free to contact us. For technical support or warranty inquiries, please refer to the contact information provided with your purchase or visit the official Zerone store on Amazon.

Note: Actual remote distance may vary depending on the model of your TV and environmental factors.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07CVTBZPF>

More documents and user manuals: <https://manuals.plus/>