



Manuals.plus /

› eufy /

› eufy Replacement Rolling Brush Instruction Manual

eufy AK-T2907031

eufy Replacement Rolling Brush Instruction Manual

Model: AK-T2907031

Brand: eufy

INTRODUCTION



The eufy Replacement Rolling Brush, designed for various eufy RoboVac models.

This manual provides detailed instructions for the installation, maintenance, and care of your eufy Replacement Rolling Brush. Regular maintenance ensures optimal performance and extends the lifespan of your eufy RoboVac.

COMPATIBILITY

This replacement rolling brush is compatible with the following eufy RoboVac models:

- 11S, 11S PLUS, 11S MAX
- 12, 15C, 15C MAX, 15T
- 25C, 30, 30C, 30C MAX, 35C, 25C Max
- G10 Hybrid, G30, G30 Edge, G30 Hybrid, G30 Verge, G20, G20 Hybrid
- G35, G35+, G30 SES series, G40 series
- R500, R450

MAINTENANCE

Regular cleaning and replacement of parts are crucial for maintaining your RoboVac's cleaning efficiency. The suggested replacement frequency for the rolling brush is 3-6 months, depending on usage frequency.

Official Maintenance Video Guide

Your browser does not support the video tag.

This video demonstrates how to clean the dust collector, filters, rolling brush, and side brushes of your eufy RoboVac. It provides a visual guide to complement the written instructions below.

1. Turning Off Your RoboVac

Before performing any maintenance, ensure your RoboVac is turned off. Flip the RoboVac over and press the power button to turn it off.

2. Emptying the Dustbin

Press the dust collector release button to pull the dust collector out. Open and empty the dust collector into a waste bin.

3. Cleaning the Pre-filter

Remove the pre-filter from the dust collector by pulling on its hooks. Clean the pre-filter using the provided cleaning tool or a vacuum cleaner. For a deeper clean, you may rinse the pre-filter with water, ensuring it is completely dry before reinserting it. Place the pre-filter securely back into the dust collector.

4. Replacing the Filter

Open the filter compartment of the dust collector by pulling on the blue tab. Remove both the white filter and the black foam insert. Clean both components using the provided tool or a vacuum. The white filter can also be washed with water, but must be completely dry before reinsertion. First, place the black foam filter, then the white filter on top. Close the filter door and push down on the blue button to reinsert the dustbin into the RoboVac.

5. Cleaning and Replacing the Rolling Brush

Turn your RoboVac over. Pull on the release tabs to unlock and lift the brush guard. Lift the rolling brush to remove it. Use the provided cleaning tool to cut and remove any hair or debris wrapped around the rolling brush bristles and ends. Ensure the ends of the rolling brush are clean for proper connection.



This image illustrates the four-step process for removing and installing the rolling brush. It shows how to access the brush, remove it, align the new brush, and secure the brush guard.

To reinsert, place the square side of the rolling brush into its corresponding square hole first, then lower the other side. Replace the brush guard and press it down until it clicks into place.

6. Cleaning the Side Brushes

Remove each side brush by gently pulling it from the RoboVac. Carefully unwind and pull off any hair or string wrapped around the side brush bristles. Use a cloth dampened with warm water to clean the bristles and reshape them if they have become bent. Replace each side brush by pressing it down onto its connection with the RoboVac until it is securely in place.

SPECIFICATIONS

Feature	Detail
Package Dimensions	6.57 x 1.65 x 1.65 inches
Item Weight	0.634 ounces
Manufacturer	eufy
Item Model Number	AK-T2907031
Included Components	Brush

TROUBLESHOOTING

If your RoboVac becomes noisy after replacing the rolling brush, ensure the brush is correctly installed and free of any debris. Refer to the "Cleaning and Replacing the Rolling Brush" section for detailed steps. If issues persist, ensure you are using authentic eufy accessories, as third-party parts may not fit correctly or perform optimally.

WARRANTY AND SUPPORT

For warranty information or further technical support, please refer to the official eufy website or contact eufy customer service. Using authentic eufy accessories is recommended to maintain product warranty and performance.

You can visit the official eufy store for more products and support: [eufy Store](#)