

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [eufy](#) /
- › eufy RoboVac Replacement Side Brush User Manual

eufy T2905

eufy RoboVac Replacement Side Brush User Manual

Model: T2905

Brand: eufy

INTRODUCTION

This manual provides essential information for the installation, maintenance, and optimal use of your eufy Replacement Side Brushes. These genuine eufy accessories are designed to maintain the peak cleaning performance of your RoboVac, ensuring thorough cleaning, especially in corners and along edges.

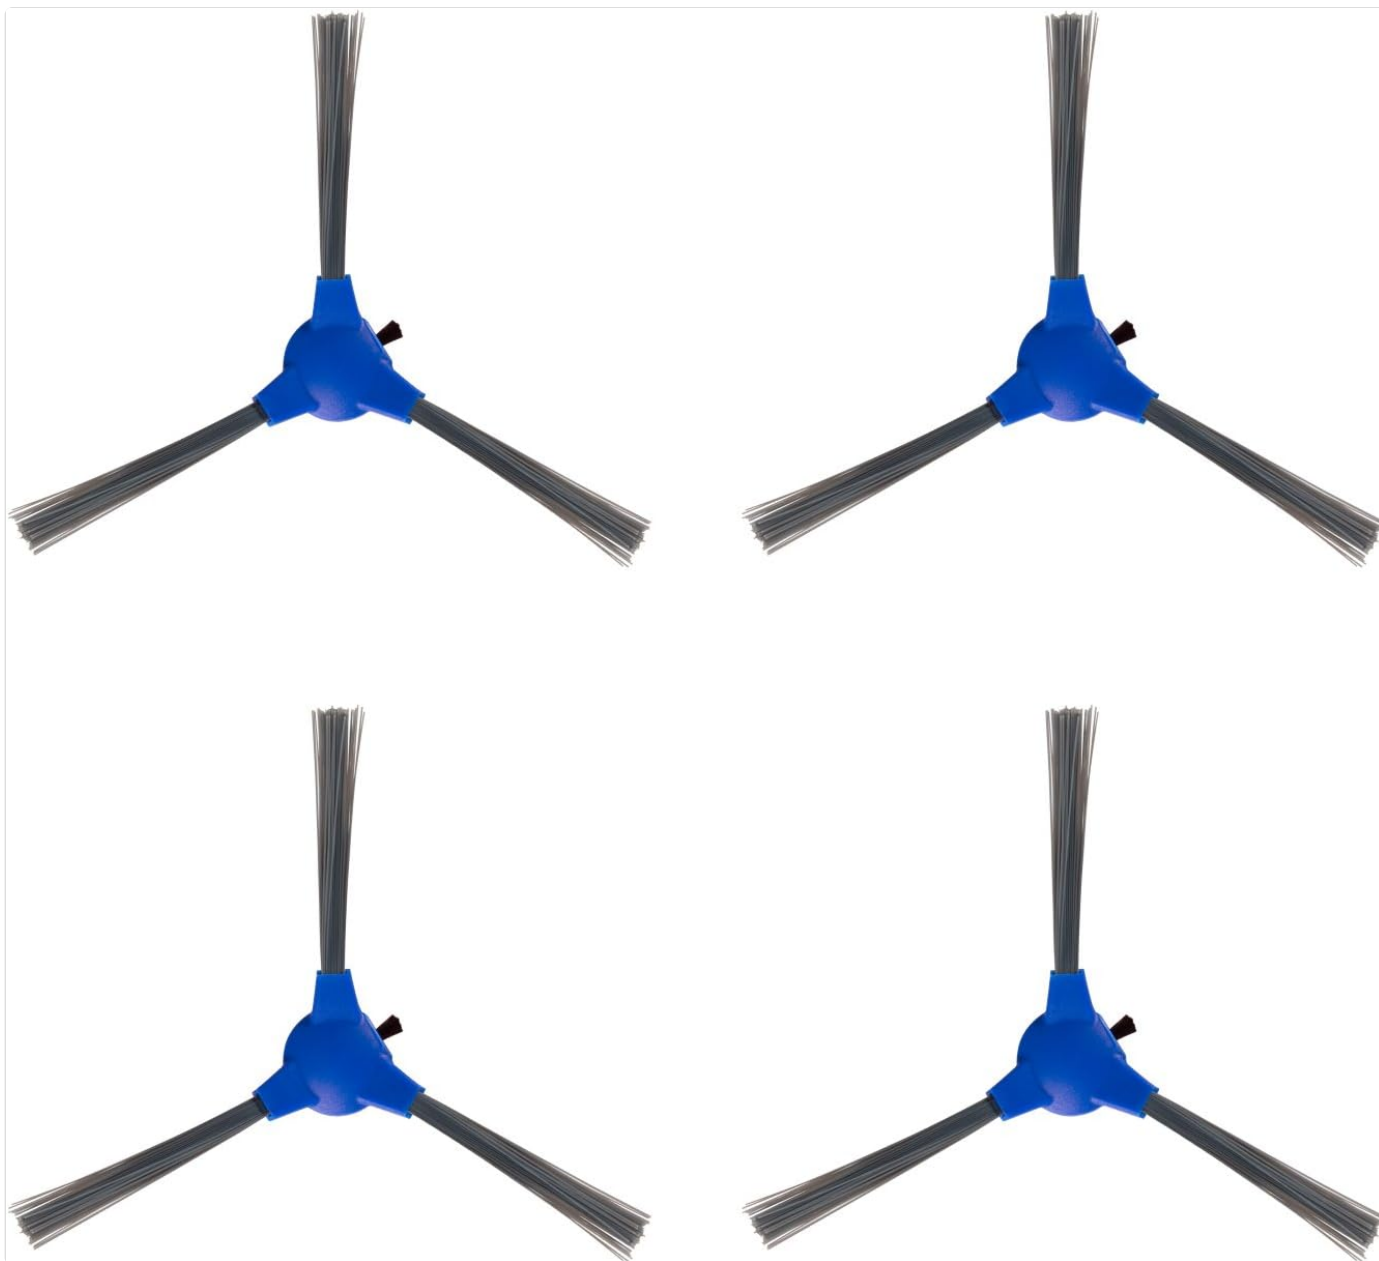


Image: Four eufy replacement side brushes, essential for maintaining cleaning efficiency.

COMPATIBILITY

These replacement side brushes are compatible with a broad range of eufy RoboVac models, including:

- 11S, 11S PLUS, 11S MAX
- 12, 15C, 15C MAX, 15T
- 25C, 30, 30C, 30C MAX, 35C, 25C Max
- G10 Hybrid, G30, G30 Edge, G30 Hybrid, G30 Verge
- G20, R500, R450



Image: An example of a compatible eufy RoboVac model.

INSTALLATION

Replacing the side brushes on your eufy RoboVac is a simple, tool-free process. Follow these steps for proper installation:

1. **Step 1:** Turn your RoboVac over to access the side brushes located on the underside of the unit.
2. **Step 2:** Grasp the old side brush firmly and pull it upwards to remove it from its post. You may need to use two hands for a secure grip.
3. **Step 3:** Take a new replacement side brush. Align the central hole of the new brush with the post on the RoboVac.
4. **Step 4:** Push down firmly on the new side brush until it snaps securely into place. Ensure it is fully seated and can

rotate freely.



1 Turn RoboVac over to access side brushes.



2 Use two hands to remove old side brushes.



3 Pull firmly on bristles to remove.



4 Push down on new side brushes to snap into place.

Image: A visual guide demonstrating the four steps for replacing the side brushes.

MAINTENANCE

Regular maintenance of your RoboVac's side brushes and other components is essential for optimal performance and longevity. The suggested replacement frequency for side brushes is every 3-6 months, depending on your usage frequency. It is also recommended to perform maintenance on the brushes and other parts once every 2 weeks.

General Cleaning Tips:

- **Side Brushes:** Regularly check the side brushes for tangled hair or debris. Remove any obstructions to ensure they can rotate freely and effectively sweep debris into the vacuum's path.
- **Main Rolling Brush:** Periodically remove the main rolling brush and clean any hair or debris wrapped around it. A cleaning tool is often provided with your RoboVac to assist with this.
- **Dust Bin and Filter:** Empty the dust bin after each cleaning cycle. The filter should be cleaned regularly, ideally

once a week, by rinsing it under water. Ensure the filter is completely dry before reinserting it into the dust bin.

- **Wheels and Sensors:** Wipe down the wheels and sensors to remove any dust or dirt that might impede the RoboVac's movement or navigation.

SPECIFICATIONS

| Attribute | Detail |
|---------------------|-------------------------------|
| Product Dimensions | 11.38 x 6.22 x 0.67 inches |
| Item Weight | 0.64 ounces |
| Manufacturer | eufy |
| Item Model Number | T2905 |
| Included Components | Brush (Set of 4 side brushes) |
| Batteries Required | No |

TROUBLESHOOTING

If your RoboVac's cleaning performance seems to diminish, consider the following common issues and solutions related to the side brushes:

- **Brushes not sweeping effectively:**
 - Check for tangled hair or debris around the brush bristles or the brush post. Clean thoroughly.
 - Inspect the bristles for wear or damage. If they are splayed out or heavily worn, replace the side brushes with new ones.
- **Unusual noise from brushes:**
 - Remove the side brushes and check for any foreign objects lodged in the brush mechanism.
 - Ensure the side brushes are correctly installed and snapped firmly into place.
- **RoboVac leaving debris behind:**
 - This could indicate worn side brushes that are no longer effectively sweeping. Replace them.
 - Also, check the main rolling brush and dust bin/filter for blockages or fullness.

For more detailed troubleshooting, please refer to the complete RoboVac user manual specific to your model.

