

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [VINABTY](#) /

> [VINABTY AKB73615337 Replacement Remote Control for LG Plasma TVs User Manual](#)

VINABTY AKB73615337

VINABTY AKB73615337 Replacement Remote Control for LG Plasma TVs

Model: AKB73615337 | Brand: VINABTY

1. INTRODUCTION

This manual provides instructions for the VINABTY AKB73615337 replacement remote control, designed to operate various LG Plasma TV models. This remote is a direct replacement and typically requires no programming, functioning immediately upon battery installation.



AKB73615337 Replace Remote for LG Plasma TV

42PA4900 50PA4500 50PA450C 50PA4510 50PA4900 50PA5500
50PA550C 50PA6500 50PA6500UA 50PA6500-UA 50PA6550
60PA5500 60PA550C 60PA6500 60PA6500UA

Image 1: VINABTY AKB73615337 Remote Control with compatible LG Plasma TV models.

Compatible LG Plasma TV Models:

- 42PA4900
- 50PA4500, 50PA450C, 50PA4510, 50PA4900, 50PA5500, 50PA550C
- 50PA6500, 50PA6500UA, 50PA6500-UA, 50PA6550

- 60PA5500, 60PA550C
- 60PA6500, 60PA6500UA, 60PA6500-UA, 60PA6550, 60PA6550UA, 60PA6550-UA, 60PA6550UF, 60PA6550-UF
- And other LG Plasma TV models that originally used the AKB73615337 remote.

2. SETUP

Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image 2: Battery compartment with AAA batteries inserted.

Note: No programming is required for this replacement remote. It is ready to use once batteries are installed.

3. OPERATING INSTRUCTIONS

Point the remote control directly at your LG Plasma TV. Ensure there are no obstructions between the remote and the TV's infrared receiver.



Image 3: Front view of the remote control with button layout.

Key Button Functions:

Button	Function
--------	----------

Button	Function
Power (Red)	Turns the TV on or off.
TV	Switches to TV mode.
RATIO	Adjusts the screen aspect ratio.
INPUT	Selects input sources (HDMI, AV, Component, etc.).
ENERGY SAVING	Activates or deactivates energy-saving modes.
Number Buttons (0-9)	Direct channel selection.
LIST	Displays the channel list.
FLASHBK	Returns to the previously viewed channel.
VOL (+/-)	Adjusts the volume level.
CH (Up/Down)	Changes channels.
MUTE	Mutes or unmutes the TV sound.
INFO	Displays program information.
SETTINGS	Accesses the TV's main settings menu.
AV MODE	Selects audio/video modes.
Q.MENU	Accesses the Quick Menu for common settings.
Navigation (Up/Down/Left/Right)	Navigates through menus and options.
OK	Confirms selections in menus.
EXIT	Exits the current menu or function.
Color Buttons (Red, Green, Yellow, Blue)	Functions vary depending on the TV menu or application.
Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward)	Controls media playback (e.g., USB content).

4. MAINTENANCE

Cleaning the Remote

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or solvents, as these can damage the remote's surface or internal components.

Battery Care

- Replace batteries when the remote's response becomes sluggish or stops working.
- Do not mix old and new batteries, or different types of batteries (e.g., alkaline and rechargeable).
- Remove batteries if the remote will not be used for an extended period to prevent leakage and damage.
- Dispose of used batteries according to local regulations.

5. TROUBLESHOOTING

Problem	Solution
Remote is not working.	<p>Ensure batteries are inserted correctly with the correct polarity (+/-).</p> <p>Replace old batteries with new AAA batteries.</p> <p>Check if there are any obstructions between the remote and the TV's infrared sensor.</p> <p>Confirm that the remote is compatible with your specific LG Plasma TV model.</p>
Remote works intermittently.	<p>Batteries may be low; replace them.</p> <p>Ensure you are within the effective range and line of sight of the TV.</p> <p>Strong light sources (e.g., direct sunlight, fluorescent lights) can interfere with the IR signal. Try to minimize such interference.</p>
Certain buttons do not respond.	<p>Some advanced functions might be specific to the original remote or TV model. Verify compatibility for all desired functions.</p> <p>Clean the remote, especially around the unresponsive buttons, to ensure no debris is causing issues.</p>

6. SPECIFICATIONS





Image 4: Remote control dimensions.

- **Model Number:** AKB73615337

- **Brand:** VINABTY
- **Compatible Devices:** LG Plasma Televisions
- **Power Source:** 2 x AAA Batteries (not included)
- **Color:** Black
- **Product Dimensions:** Approximately 7 x 2 x 0.5 inches (17.78 x 5.08 x 1.27 cm)
- **Item Weight:** Approximately 3 ounces (85 grams)
- **Special Feature:** Ergonomic design

7. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your VINABTY AKB73615337 replacement remote control, please refer to the retailer or manufacturer's customer service channels. Keep your purchase receipt for warranty claims, if applicable.

This product is designed to provide a reliable replacement for your original LG Plasma TV remote. Should you encounter any issues not covered in this manual, please contact customer support for further assistance.