

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [J-AXIS](#) /

> J-AXIS 10 BAR Water Resistant Digital Watch ACY14-BK User Manual

J-AXIS ACY14-BK

J-AXIS 10 BAR Water Resistant Digital Watch ACY14-BK User Manual

Model: ACY14-BK

INTRODUCTION

Thank you for purchasing the J-AXIS ACY14-BK 10 BAR Water Resistant Digital Watch. This manual provides comprehensive instructions for setting up, operating, and maintaining your watch. Please read this manual carefully to ensure proper use and to fully utilize all its features.

SETUP

1. Unboxing and Initial Inspection

Upon opening the package, please ensure all components are present and in good condition:

- J-AXIS ACY14-BK Digital Watch
- Instruction Manual (this document)
- Warranty Card (included within the instruction manual)
- Product Box

2. Battery Information

The watch comes with one Lithium Ion battery pre-installed. No user installation is required for initial use. The battery type is specified as Lithium Ion.

3. Button Functions Overview

Your watch features four buttons, typically located on the sides of the watch case. Their general functions are:

- **MODE:** Cycles through different modes (Time, Alarm, Stopwatch, Timer, Second Time Zone).
- **RESET:** Used to reset values or move selection during setting.
- **ST/STP (Start/Stop):** Used to start/stop functions like stopwatch or timer, or to adjust values during

setting.

- **LIGHT:** Activates the EL backlight for illumination.



Image: Front view of the J-AXIS ACY14-BK digital watch, showing the display and button labels. The watch has a black case with red accents and a clear digital display.

4. Time and Date Setting

1. In Timekeeping Mode, press the **MODE** button repeatedly until the seconds start flashing.
2. Press **RESET** to cycle through the setting items: seconds → hour → minute → year → month → day.
3. Use the **ST/STP** button to adjust the flashing value.
4. Once all settings are correct, press **MODE** to exit the setting mode.

5. Alarm Setting

The watch supports up to 5 alarms.

1. From Timekeeping Mode, press **MODE** until you reach the Alarm Mode (indicated by 'AL' or similar on the display).
2. Press **RESET** to select the alarm number (AL1, AL2, etc.) or to toggle the alarm ON/OFF.

3. When an alarm time is flashing, use **ST/STP** to adjust the hour and minute.
4. Press **MODE** to confirm and exit.

6. Timer Function

1. From Timekeeping Mode, press **MODE** until you reach the Timer Mode (indicated by 'TR' or similar).
2. Press **RESET** to set the desired countdown time (hours, minutes, seconds). Use **ST/STP** to adjust values.
3. Press **ST/STP** to start or pause the timer.
4. Press **RESET** while the timer is paused to reset it to the initial set time.

7. Stopwatch Function

1. From Timekeeping Mode, press **MODE** until you reach the Stopwatch Mode (indicated by 'ST' or 'CHRONO').
2. Press **ST/STP** to start the stopwatch.
3. Press **ST/STP** again to pause it.
4. Press **RESET** while paused to reset the stopwatch to zero.
5. The watch also supports split time measurement. Consult the display for specific indicators.

8. EL Backlight

Press the **LIGHT** button to illuminate the display for a few seconds, making it visible in low-light conditions.

9. Hourly Chime

The watch features an hourly chime function. To activate or deactivate it, navigate to the Timekeeping Mode and look for an indicator (e.g., a bell icon). Use the **ST/STP** or **RESET** button to toggle it on or off.

10. Second Time Zone Display

Your watch can display a second time zone. Navigate to the Dual Time or Second Time Zone mode using the **MODE** button. Follow the on-screen instructions or use the **ST/STP** and **RESET** buttons to set the desired second time zone.

OPERATING INSTRUCTIONS

This section details the daily operation of your J-AXIS ACY14-BK watch.

1. Mode Switching

Press the **MODE** button to cycle through the various functions of the watch. The typical sequence is:
Timekeeping → Alarm → Stopwatch → Timer → Second Time Zone → Timekeeping

2. Water Resistance (10 BAR)

Your watch is rated for 10 BAR (10 atmospheres) water resistance. This means it is suitable for swimming, showering, and snorkeling. However, it is not recommended for scuba diving or high-impact water sports. Do not operate buttons while the watch is submerged in water.



CYBEAT WATER RESIST

ACY14-BK

対象	男・女性用
材質	ABS樹脂、アクリル樹脂(ケース:約径50mm × 厚さ15mm)、ポリウレタン(ベルト:全長約260mm)
ムーブメント	電池式クォーツ
機能	<ul style="list-style-type: none"> ■10気圧防水 ■EL全面ライト ■カレンダー(日付・曜日) ■第2時刻表示 ■ストップウォッチ ■5アラーム ■時報機能 ■タイマー ■カレンダーアラーム(指定日時にアラームが鳴る機能)
付属品	保証書(メーカー1年保証)、取扱説明書

Image: A diagram highlighting the features of the J-AXIS ACY14-BK digital watch, including 10 BAR water resistance, EL backlight, stopwatch, 5 alarms, hourly chime, timer, calendar, and second time display.

MAINTENANCE

1. Cleaning Your Watch

To clean your watch, wipe it with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch case and strap.

2. Battery Replacement

The watch uses a Lithium Ion battery. When the display becomes dim or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is properly maintained.

3. Storage

When not in use for extended periods, store your watch in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. This helps preserve battery life and the integrity of the watch materials.

TROUBLESHOOTING

If you encounter any issues with your watch, please refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Buttons do not respond.	Watch is in a locked mode or malfunction.	Try pressing all buttons simultaneously for a few seconds to reset (if applicable). If issue persists, consult support.
Time is incorrect.	Time not set correctly or battery low.	Re-set the time as per instructions. If it keeps losing time, replace battery.
Water inside the watch.	Water resistance seal compromised or buttons operated underwater.	Immediately take the watch to a qualified technician for inspection and repair. Do not attempt to dry it yourself.

SPECIFICATIONS

Below are the technical specifications for the J-AXIS ACY14-BK Digital Watch:

Feature	Detail
Model Number	ACY14-BK
Brand	J-AXIS
Water Resistance	10 BAR (10 ATM)
Movement	Battery-powered Quartz
Case Material	ABS Resin, Acrylic Resin
Band Material	Polyurethane
Case Dimensions	Approx. 50mm diameter x 15mm thickness
Band Length	Approx. 260mm
Weight	55 g
Battery Type	1 Lithium Ion Battery (included)

Feature	Detail
Functions	10 BAR Water Resistance, EL Full Backlight, Calendar (Date/Day), Second Time Display, Stopwatch, 5 Alarms, Hourly Chime, Timer, Calendar Alarm (alarm sounds on specified date)
Country of Origin	China



Image: The J-AXIS ACY14-BK digital watch shown in its retail packaging, highlighting key features like 10 BAR water resistance and various functions.

WARRANTY AND SUPPORT

1. Manufacturer's Warranty

This product comes with a **1-year manufacturer's warranty** from the date of purchase. The warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase and the warranty card (included in this manual) for any warranty claims.

The warranty does not cover:

- Damage caused by improper use or negligence.
- Damage caused by unauthorized repair or modification.
- Normal wear and tear of the case, band, or battery.
- Water damage if the watch was used beyond its specified water resistance limits or if buttons were operated underwater.

2. Customer Support

For further assistance, technical support, or warranty inquiries, please contact your retailer or visit the official J-AXIS brand store:

[J-AXIS Official Store on Amazon.co.jp](https://www.amazon.co.jp)