

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [J-AXIS](#) /
- › [J-AXIS 10 Bar Water Resistant Digital Watch ACY14-OR Instruction Manual](#)

J-AXIS ACY14-OR

J-AXIS 10 Bar Water Resistant Digital Watch ACY14-OR Instruction Manual

Model: ACY14-OR

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your J-AXIS 10 Bar Water Resistant Digital Watch, model ACY14-OR. Please read this manual thoroughly before using your watch to ensure optimal performance and longevity.

PRODUCT OVERVIEW

The J-AXIS ACY14-OR is a robust digital watch designed for various activities, featuring 10 bar water resistance and multiple functions including a stopwatch, 5 alarms, timer, EL backlight, hourly chime, calendar display, and second time display.



Figure 1: Front view of the J-AXIS ACY14-OR Digital Watch. This image displays the watch face with its digital display, showing time and other indicators, and the surrounding buttons labeled 'RESET', 'MODE', 'ST/STP', and 'LIGHT'.

SETUP

Initial Time Setting

1. Press the **MODE** button repeatedly until the time setting mode is displayed.
2. Use the **RESET** button to select the digit you wish to adjust (e.g., hours, minutes).
3. Use the **ST/STP** button to increase the selected digit.
4. Once the time is set, press the **MODE** button to exit the setting mode.

Date Setting

The date can be set similarly to the time. In the time setting mode, cycle through the options using the **RESET** button until the date (month, day, year) is highlighted, then adjust with the **ST/STP** button.

OPERATING INSTRUCTIONS

Mode Selection

Press the **MODE** button to cycle through the following functions:

- Time Display (Normal Mode)
- Stopwatch
- Alarm Setting
- Timer
- Second Time Display

Stopwatch Function

1. Enter Stopwatch mode by pressing the **MODE** button.
2. Press **ST/STP** to start the stopwatch.
3. Press **ST/STP** again to pause/resume.
4. Press **RESET** to reset the stopwatch to zero.

Alarm Function

The watch features 5 independent alarms. To set an alarm:

1. Enter Alarm mode by pressing the **MODE** button.
2. Use **RESET** to select the alarm number (AL1-AL5).
3. Use **ST/STP** to adjust the alarm time.
4. Press **MODE** to confirm and exit.

EL Backlight

Press the **LIGHT** button to illuminate the display for easy viewing in low-light conditions.

Hourly Chime

The hourly chime can be toggled on or off in the alarm setting mode. Refer to the specific instructions in the included manual for detailed steps.

MAINTENANCE

Water Resistance (10 Bar)

Your J-AXIS ACY14-OR watch is rated for 10 bar water resistance, meaning it is suitable for swimming, showering, and snorkeling. However, it is not recommended for scuba diving. Do not operate buttons while the watch is submerged in water.



CYBEAT WATER RESIST

ACY14-OR

対象	男・女性用
材質	ABS樹脂、アクリル樹脂(ケース:約径50mm × 厚さ15mm)、ポリウレタン(ベルト:全長約260mm)
ムーブメント	電池式クォーツ
機能	<ul style="list-style-type: none"> ■10気圧防水 ■EL全面ライト ■カレンダー(日付・曜日) ■第2時刻表示 ■ストップウォッチ ■5アラーム ■時報機能 ■タイマー ■カレンダーアラーム(指定日時にアラームが鳴る機能)
付属品	保証書(メーカー1年保証)、取扱説明書

Figure 2: Image illustrating the 10 Bar water resistance feature of the J-AXIS ACY14-OR watch, along with other key specifications and functions. This graphic highlights the watch's durability and multi-functionality.

Cleaning

To clean your watch, wipe it with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners or solvents, as these can damage the watch's finish and seals.

Battery Replacement

The watch uses one Lithium Ion battery. When the display becomes dim or functions become erratic, it may be time to replace the battery. It is recommended to have battery replacement performed by a qualified watch technician to ensure water resistance is maintained.

TROUBLESHOOTING

- **Display is blank or dim:** Check the battery. If the battery is low, replace it.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, refer to the full manual). If the issue persists, a battery reset may be required (consult a technician).

- **Time is incorrect:** Re-set the time following the instructions in the Setup section. Ensure the correct time zone is selected if applicable.

SPECIFICATIONS

Model Number	ACY14-OR
Brand	J-AXIS
Water Resistance	10 Bar
Movement	Quartz
Functions	Stopwatch, 5 Alarms, Timer, EL Backlight, Hourly Chime, Calendar, Second Time Display
Battery	1 Lithium Ion Battery (included)
Country of Origin	China
Package Size	9 x 8.8 x 5.6 cm
Weight	20 g

WARRANTY AND SUPPORT

This product comes with a warranty. The warranty card is included within the instruction manual provided in the product packaging. Please retain your purchase receipt and the warranty card for any warranty claims. For further assistance or inquiries, please refer to the contact information provided on the warranty card or visit the official J-AXIS website.



Figure 3: The J-AXIS ACY14-OR Digital Watch presented in its retail packaging, which typically contains the watch, box, instruction manual, and warranty card.