

[Manuals.plus](#) /

› [TENMOS](#) /

› TENMOS K6 Wireless Gaming Mouse User Manual

TENMOS K6003

TENMOS K6 Wireless Gaming Mouse User Manual

Model: K6003

INTRODUCTION

Thank you for choosing the TENMOS K6 Wireless Gaming Mouse. This manual provides detailed instructions on how to set up, operate, and maintain your new mouse to ensure optimal performance and longevity. The TENMOS K6 is a rechargeable, silent, LED optical mouse designed for comfort and precision, compatible with various operating systems.

WHAT'S IN THE BOX

- Wireless Mouse
- USB Receiver
- USB Charging Cable
- User Manual

PRODUCT OVERVIEW

The TENMOS K6 mouse features an ergonomic design with multiple buttons and customizable LED lighting. Familiarize yourself with the components and controls:

Peffect Size with Pratical Buttons

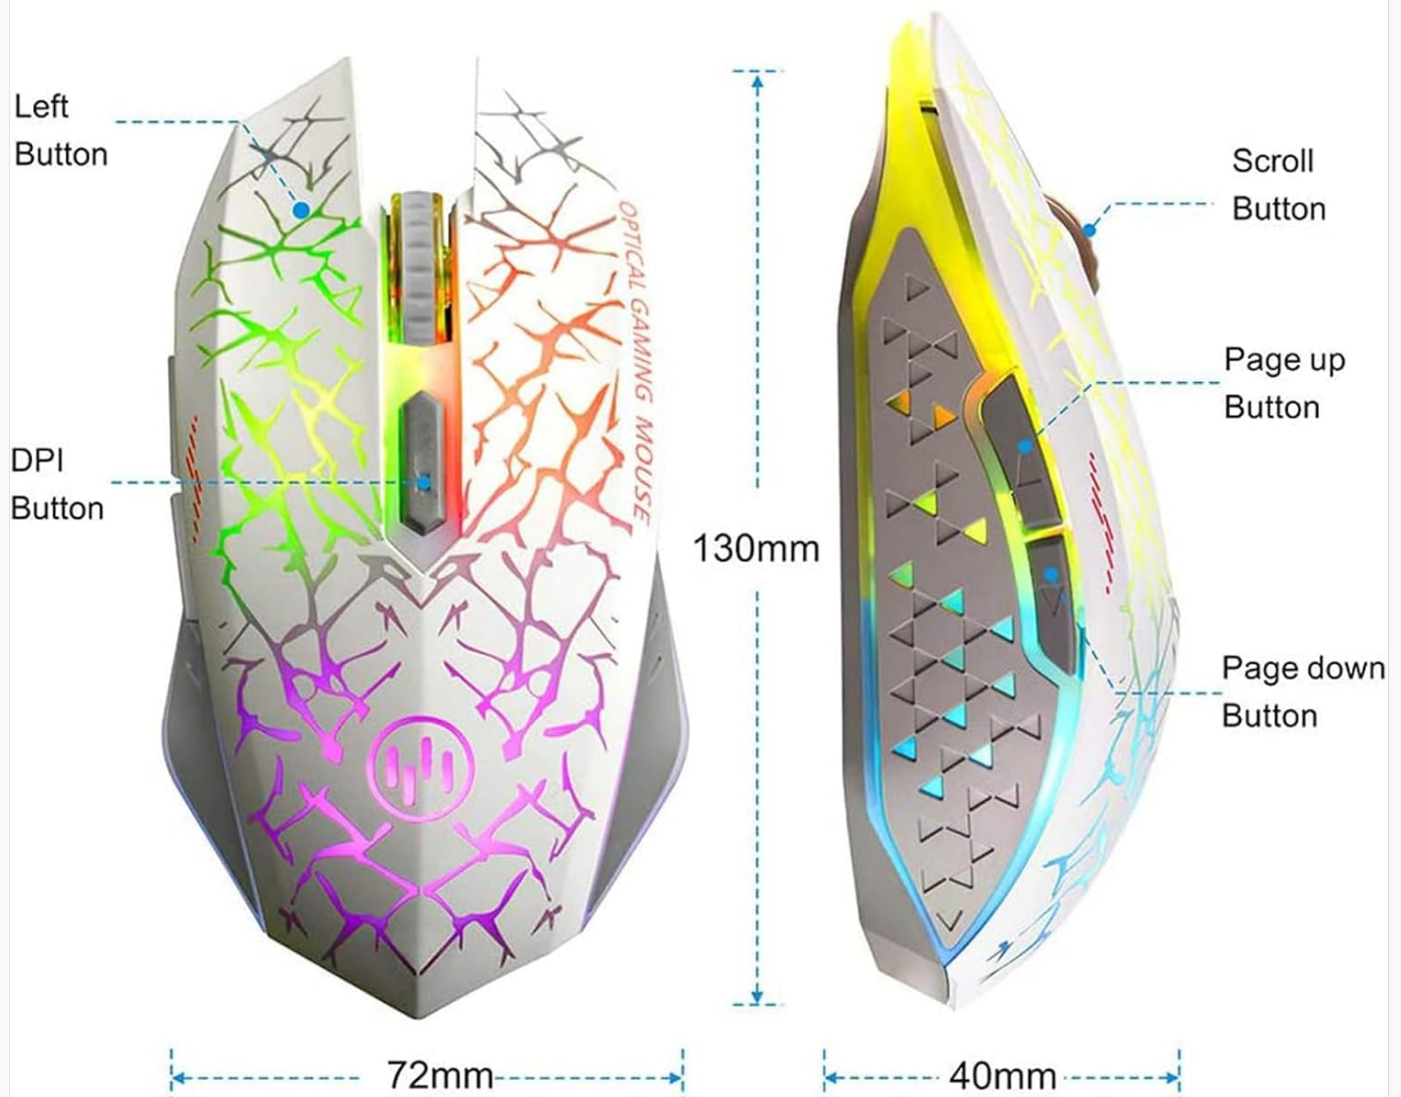


Figure 1: Mouse Layout with Button Functions and Dimensions. The mouse measures approximately 130mm in length, 72mm in width, and 40mm in height. Key buttons include Left Button, Right Button, Scroll Button, DPI Button, Page Up Button, and Page Down Button.

- **Left/Right Buttons:** Designed for super silent clicks to minimize disturbance.
- **Scroll Wheel:** For vertical scrolling.
- **DPI Button:** Adjusts cursor sensitivity (1000/1600/2400 CPI).
- **Page Up/Page Down Buttons:** Convenient for navigation in web browsers or documents.
- **LED Lights:** Soothing LED lights change color randomly, illuminating the mouse.
- **USB Receiver:** Compact 2.4GHz wireless receiver for stable connection.

SETUP

1. **Charge the Mouse:** Before first use, connect the mouse to a USB power source using the provided USB charging cable. The LED lights will indicate charging status.
2. **Insert USB Receiver:** Locate the USB receiver, typically stored in a compartment on the underside of the mouse. Plug the USB receiver into an available USB port on your laptop or computer.



Figure 2: Plugging the USB receiver into a laptop. The mouse uses 2.4G wireless technology for a stable connection up to 33 feet.

3. **Power On:** On the bottom of the mouse, there are two ON/OFF switches. The top switch controls the mouse power. The bottom switch controls the LED lights. Turn on the mouse power switch.
4. **Automatic Connection:** The mouse should automatically connect to your computer. No additional drivers are typically required.

OPERATING INSTRUCTIONS

DPI Adjustment

The mouse features 3 adjustable DPI levels (1000/1600/2400 CPI) to suit your precision needs. Press the **DPI Button** (located behind the scroll wheel) to cycle through the DPI settings. A higher CPI value results in faster cursor movement on your screen.

LED Light Control

The mouse has a soothing LED light feature that changes colors randomly. To turn off the LED lights and conserve battery, use the dedicated LED light switch located on the bottom of the mouse.

Colorful LED Light



Figure 3: The mouse illuminated with colorful LED lights. The 7-color light feature can be toggled on or off.

Silent Click Feature

The left and right buttons are designed with a special soundless mechanism, allowing you to work or play without disturbing others.

Auto Sleeping Function

To save power, the mouse will enter an auto-sleeping mode after a period of inactivity. To wake it up, simply move the mouse or click any button.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the mouse. Avoid using harsh chemicals or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the mouse frequently. Recharge when the battery indicator suggests low power.
- **Storage:** When not in use for extended periods, turn off the mouse to conserve battery. Store in a cool, dry place.

TROUBLESHOOTING

Mouse not responding:

- Ensure the USB receiver is securely plugged into a working USB port.
- Check if the mouse power switch is turned ON.
- Recharge the mouse if the battery is low.
- Try plugging the USB receiver into a different USB port.
- Restart your computer.

Cursor movement is erratic or slow:

- Adjust the DPI setting using the DPI button.
- Ensure the mouse is used on a clean, non-reflective surface.
- Clean the optical sensor on the bottom of the mouse.

LED lights are not working:

- Ensure the LED light switch on the bottom of the mouse is turned ON.
- Check if the mouse battery is charged.

SPECIFICATIONS

Feature	Detail
Model Number	K6003
Connectivity Technology	2.4GHz Wireless (USB Receiver)
Movement Detection	Optical
DPI Levels	1000/1600/2400 CPI (Adjustable)
Buttons	6 (Left, Right, Scroll, DPI, Page Up, Page Down)
Special Features	Ergonomic Design, LED Lights, Rechargeable, Silent Click, Wireless
Power Source	Built-in Rechargeable Battery
Product Dimensions	5.1 x 2.7 x 1.2 inches (130 x 72 x 40 mm)
Item Weight	3.88 ounces
Compatibility	Windows XP/Vista/7/8/10, Mac OS

WARRANTY AND SUPPORT

TENMOS products are manufactured with high-quality standards. For any warranty claims, technical support, or further inquiries, please refer to the purchase platform or visit the official TENMOS brand store. Keep your proof of purchase for warranty purposes.

You can visit the TENMOS Store for more information:[TENMOS Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question