

[Manuals.plus](#) /

› [Tayogo](#) /

› Tayogo W12 Bluetooth Waterproof MP3 Player User Manual

Tayogo W12

Tayogo W12 Bluetooth Waterproof MP3 Player User Manual

Model: W12

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Tayogo W12 Bluetooth Waterproof MP3 Player. Please read this manual thoroughly before using the device to ensure proper function and longevity.



Image 1.1: Tayogo W12 Bluetooth Waterproof MP3 Player. This image displays the front view of the white Tayogo W12 MP3 player with integrated headphones, featuring the control panel at the center.

2. PRODUCT OVERVIEW

The Tayogo W12 is a versatile waterproof audio device designed for various activities, including swimming, running, and other water sports. It features IPX8 waterproofing, 8GB of internal storage for MP3 playback, Bluetooth connectivity, and an FM radio function.

2.1 Key Features

- **IPX8 Waterproof Rating:** Designed to withstand continuous submersion in water up to 3 meters for up to 5 hours.
- **8GB Internal Memory:** Store thousands of songs for offline playback.
- **Bluetooth Connectivity:** Connect wirelessly to your smartphone for music streaming and call answering (Bluetooth signal is blocked by water and cannot be used underwater).
- **FM Radio:** Enjoy your favorite radio stations.
- **Integrated Headphones:** Comfortable and secure fit for active use.

2.2 Device Components and Controls

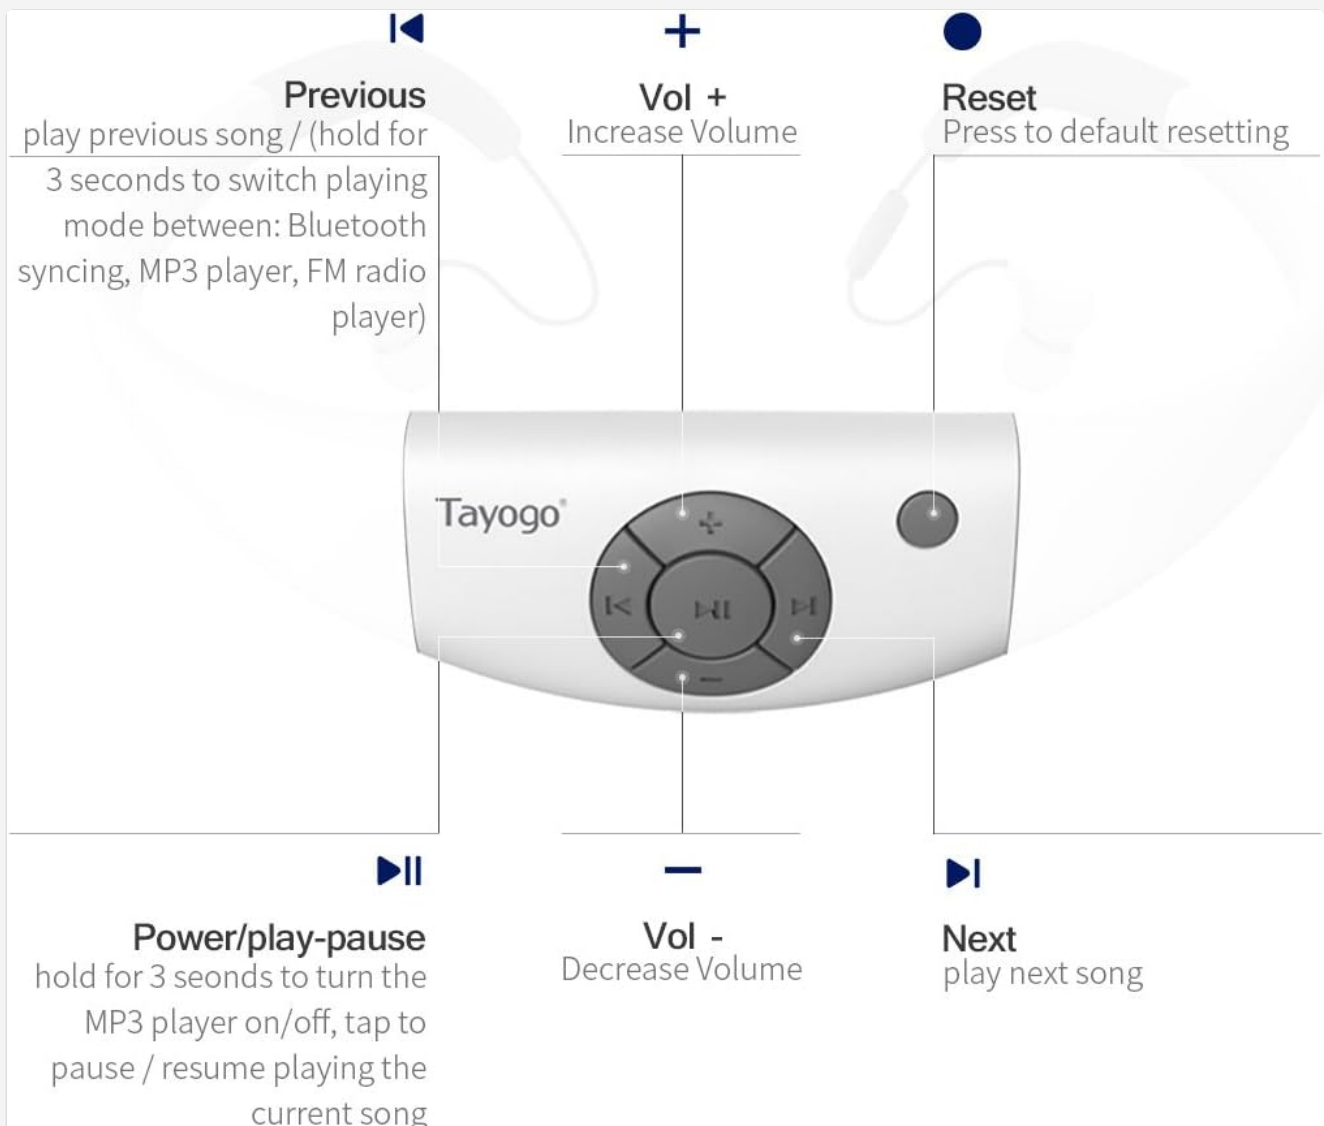


Image 2.1: Tayogo W12 Control Layout. This diagram illustrates the main control panel of the Tayogo W12. Key buttons include: Previous/Mode Switch (left arrow), Volume Up (+), Reset (small circular button), Power/Play-Pause (center), Volume Down (-), and Next (right arrow).

- **Previous / Mode Switch (Left Arrow):** Short press for previous song. Hold for 3 seconds to switch between Bluetooth syncing, MP3 player, and FM radio player modes.

- **Volume Up (+):** Increases audio volume.
- **Reset (Small Circular Button):** Press to restore default settings.
- **Power / Play-Pause (Center Button):** Hold for 3 seconds to turn the MP3 player on/off. Tap to pause or resume playback.
- **Volume Down (-):** Decreases audio volume.
- **Next (Right Arrow):** Plays the next song.

3. SETUP

3.1 How to Wear the Headphones

Properly wearing the device ensures comfort and secure fit during activities.



Image 3.1: Tayogo W12 Wearing Instructions. This image shows two steps for adjusting the headset: 1) Squeeze the earphone bone in the middle to tighten, and 2) Squeeze on both sides of the headset to loosen the bones. Below, it illustrates the correct way to wear the device (holding the tail of the bracket and wearing it on the back of the head) and warns against pulling the headphone cord vigorously.

1. **Adjusting Fit:** To tighten the fit, squeeze the earphone bone in the middle. To loosen, squeeze on both sides of the headset.

2. **Wearing Position:** Hold the tail of the bracket and wear the device on the back of your head, ensuring the earbuds are comfortably seated in your ears.
3. **Caution:** Do not pull the headphone cord vigorously to avoid damage.

3.2 Charging the Device

Before first use, fully charge your Tayogo W12. Connect the device to a USB power source using the provided charging cable. The charging indicator light will show the charging status.

3.3 Loading Music (MP3 Mode)

The Tayogo W12 has 8GB of internal storage for MP3 files.

1. Remove the USB Main Player carefully from the headphone frame as per the instruction manual.
2. Connect the USB Main Player to your computer.
3. Drag and drop your desired MP3, WMA, APE, FLAC, OGG, or WAV audio files into the device's storage.
4. Safely eject the device from your computer and reinsert the USB Main Player into the headphone frame.

You can also manage playlists using the Tayogo app (available for iOS and Android) when connected via Bluetooth.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **To Power On:** Hold the **Power / Play-Pause** button (center button) for 3 seconds.
- **To Power Off:** Hold the **Power / Play-Pause** button (center button) for 3 seconds.

4.2 Switching Playback Modes

The Tayogo W12 supports MP3 player, Bluetooth, and FM radio modes.

- **To Switch Modes:** Hold the **Previous / Mode Switch** button (left arrow) for 3 seconds. The device will cycle through the available modes.

4.3 MP3 Playback

Once in MP3 mode, the device will play music from its internal 8GB storage.

- **Play/Pause:** Tap the **Power / Play-Pause** button.
- **Next Song:** Tap the **Next** button (right arrow).
- **Previous Song:** Tap the **Previous** button (left arrow).
- **Shuffle/Order Play:** Use the Tayogo app to create playlists and set shuffle or order play preferences.

4.4 Bluetooth Connectivity

Bluetooth mode allows you to stream audio from your smartphone and answer calls.

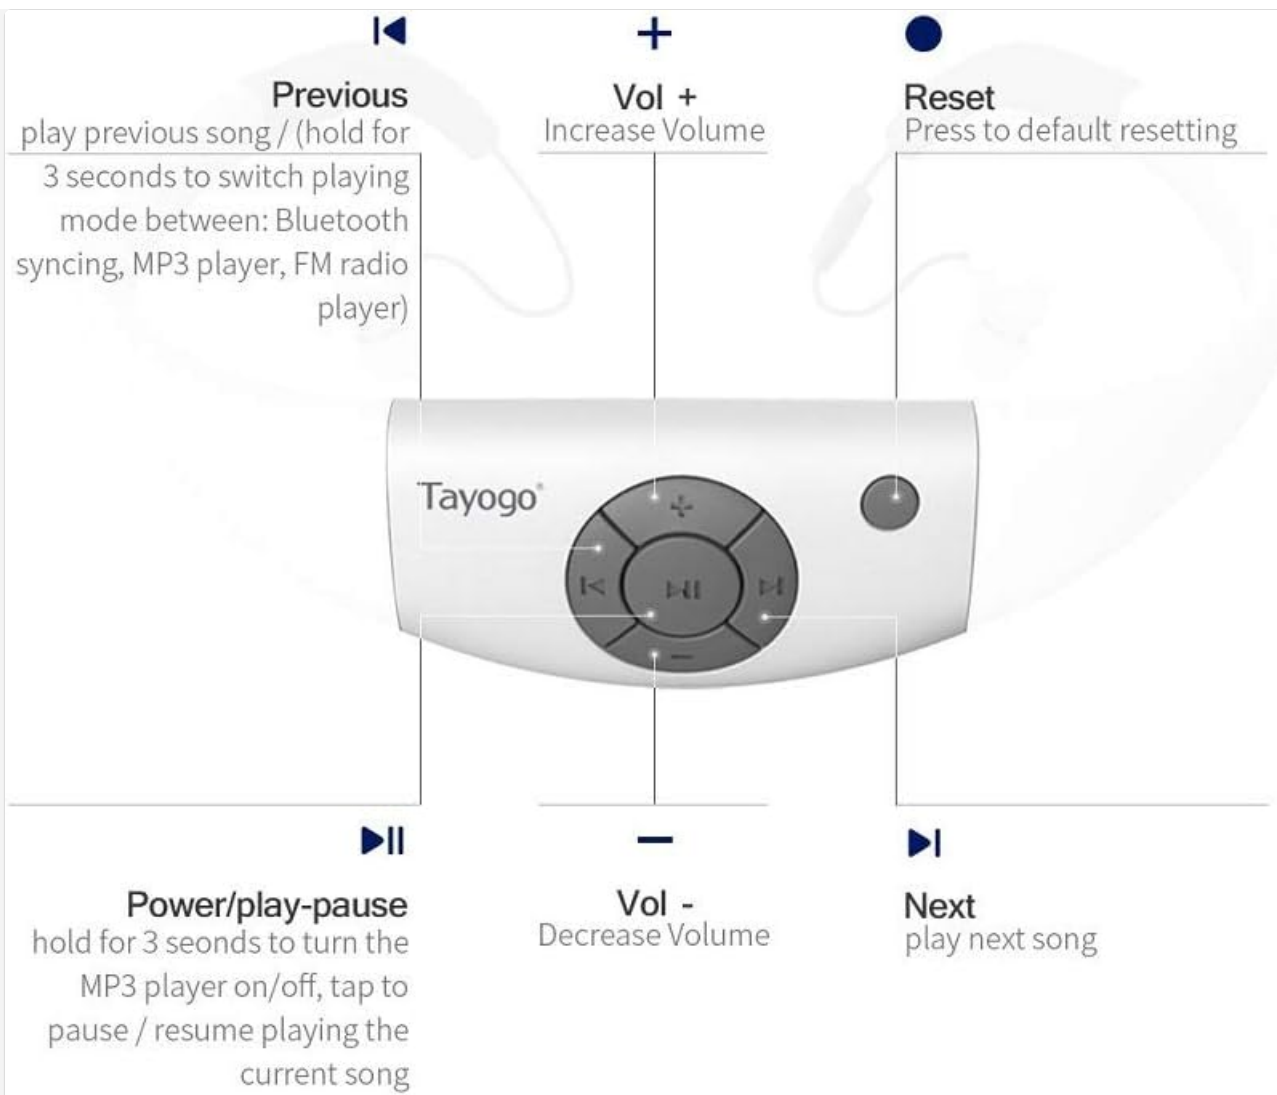


Image 4.1: Tayogo W12 Bluetooth Usage. This image shows a woman wearing the Tayogo W12 while holding a smartphone, illustrating the device's Bluetooth capabilities for music streaming and call handling. A note below clarifies that Bluetooth signals cannot be transmitted underwater.

1. Switch the device to Bluetooth syncing mode (refer to Section 4.2).
2. On your smartphone, go to Bluetooth settings and select "Tayogo W12" to pair.
3. Once paired, you can stream music from apps like iTunes or Spotify.
4. You can also answer phone calls through the device.

Important Note: Bluetooth signals are significantly blocked by water and cannot be used effectively while swimming or submerged.

4.5 FM Radio

In FM radio mode, you can listen to local radio stations.

Free switch between MP3 and 4.2 Bluetooth

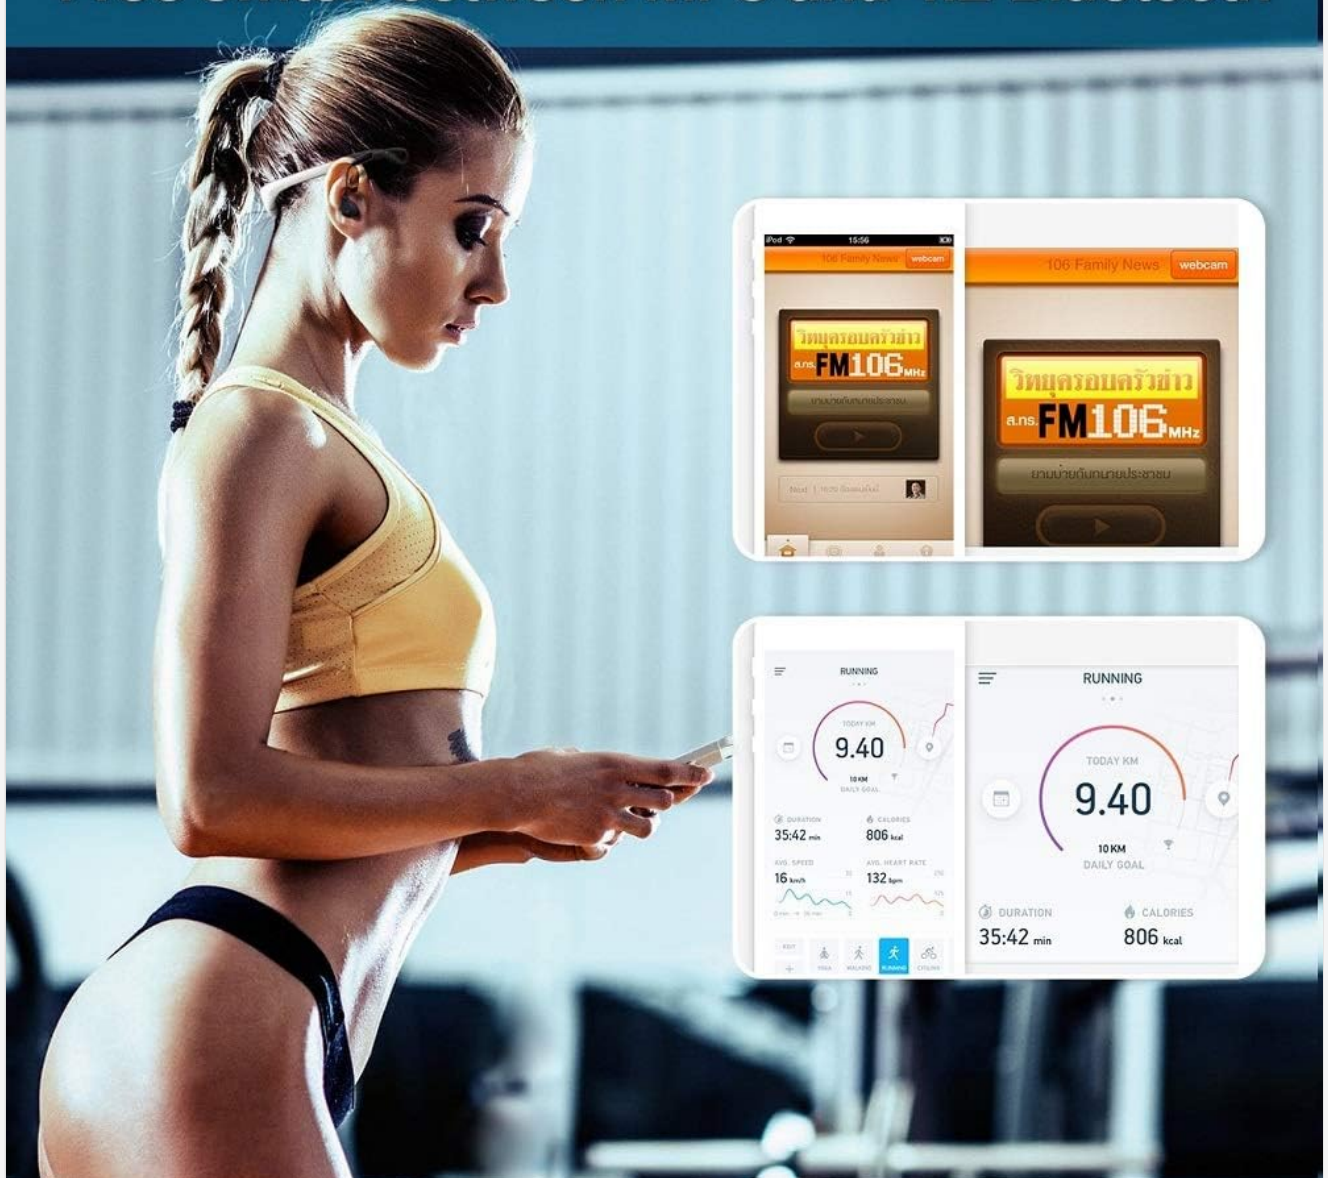


Image 4.2: Tayogo W12 Running and App Integration. This image depicts a woman using the Tayogo W12 while running, with smartphone screens showing an FM radio interface and a fitness tracking app displaying running data (distance, duration, calories, steps).

- Switch the device to FM radio mode (refer to Section 4.2).
- Use the Tayogo app to automatically search and store FM channels.

4.6 Volume Control

- **Increase Volume:** Press the **Volume Up (+)** button.
- **Decrease Volume:** Press the **Volume Down (-)** button.

5. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and performance of your Tayogo W12.

- **After Swimming:** Always clear the headphones with clean water and dry them thoroughly after use in chlorinated or saltwater.
- **USB Main Player:** Handle the USB Main Player carefully when removing or inserting it.

- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cleaning:** Use a soft, damp cloth to clean the exterior of the device. Avoid using harsh chemicals or abrasive cleaners.

6. TROUBLESHOOTING

If you encounter issues with your Tayogo W12, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No power / Device won't turn on.	Low battery.	Charge the device fully.
No sound or distorted sound.	Volume too low; improperly seated earbuds; damaged audio files; water in earbuds.	Increase volume. Ensure earbuds are properly inserted. Check audio files. Dry earbuds thoroughly after water exposure.
Bluetooth not connecting or disconnecting frequently.	Device too far from phone; interference; attempting to use underwater.	Ensure device is within Bluetooth range (typically 10 meters). Avoid obstacles. Bluetooth does not work underwater.
Cannot switch modes.	Incorrect button press.	Hold the Previous / Mode Switch button for 3 seconds to cycle modes.
Earbuds fall out easily.	Improper fit or ear tip size.	Adjust the headset for a secure fit (refer to Section 3.1). Ensure you are using the correct size ear tips for your ears.
Device unresponsive.	Software glitch.	Press the Reset button to restore default settings.

7. SPECIFICATIONS

Feature	Detail
Model Number	W12
Waterproof Rating	IPX8 (up to 3 meters for 5 hours)
Internal Memory	8 GB
Connectivity	Bluetooth, USB
Supported Audio Formats	APE, FLAC, MP3, OGG, WAV, WMA
Special Features	FM Radio, Waterproof
Battery	1 Lithium Ion battery (required)
Product Dimensions	4 x 4 x 1.1 inches
Item Weight	5.6 ounces
Manufacturer	Tayogo

8. WARRANTY AND SUPPORT

Tayogo is committed to product quality and customer satisfaction. If you experience any issues with your Tayogo W12 MP3 Player, please contact customer support.

8.1 Warranty Information

Specific warranty terms and duration may vary. Please refer to the product packaging or contact Tayogo customer service for detailed warranty information. Keep your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please visit the official Tayogo website or contact their customer service department. Timely support can often resolve issues quickly.

Based on customer feedback, Tayogo customer service has been noted for replacing defective products. For assistance, you may need to provide your order number and mailing address.