

AEG DKB4650M

AEG 60cm Pyramid Chimney Cooker Hood Instruction Manual

Model: DKB4650M

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your new AEG 60cm Pyramid Chimney Cooker Hood. Please read these instructions carefully before installation and operation, and keep them for future reference. This appliance is designed to effectively remove cooking fumes and odours from your kitchen, contributing to a cleaner and more pleasant environment.

2. SAFETY INFORMATION

Always adhere to local regulations regarding the discharge of exhaust air. Ensure the electrical installation complies with all applicable standards. Do not operate the appliance if it is damaged. Disconnect the appliance from the power supply before any cleaning or maintenance. This appliance is intended for domestic use only. Keep children away from the appliance during operation.

3. SETUP AND INSTALLATION

The AEG DKB4650M cooker hood is designed for wall mounting. It can be configured for either recirculation or ducted extraction. For ducted extraction, ensure proper ventilation to the outside. For recirculation, charcoal filters (not included) are required to purify the air before returning it to the kitchen.

3.1. Mounting Requirements

Ensure adequate clearance between the hob and the cooker hood. The minimum distance for electric hobs is 500 mm, and for gas hobs, it is 650 mm. Refer to the technical drawing for precise dimensions and mounting points.



Figure 3.1: Technical drawing showing installation dimensions and minimum clearances for the cooker hood.

3.2. Electrical Connection

The appliance operates on 220V. Ensure the power supply is disconnected before connecting the hood. It is

recommended that installation be performed by a qualified electrician.

4. OPERATING INSTRUCTIONS

Your AEG cooker hood features push-button controls for easy operation of fan speeds and lighting.



Figure 4.1: Control panel with buttons for light and fan speed selection.

4.1. Fan Speed Selection

The hood offers 3 fan speeds to suit various cooking needs. Press the corresponding button to select the desired speed:

- **Speed 1:** Low setting for light cooking or simmering.
- **Speed 2:** Medium setting for general cooking.
- **Speed 3:** High setting for intense cooking or strong odours.

4.2. Lighting

The cooker hood is equipped with energy-efficient LED lighting to illuminate your cooking area. Press the light button to turn the lights on or off.



Figure 4.2: Integrated LED lighting for enhanced visibility.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and longevity of your cooker hood. Always disconnect the power supply before cleaning.

5.1. Cleaning the Grease Filters

The cooker hood is fitted with washable aluminium grease filters. These should be cleaned regularly, depending on usage, to maintain effective extraction. To remove, locate the release clips and gently pull down. The filters can be washed by hand with warm soapy water or in a dishwasher on a low-temperature cycle.

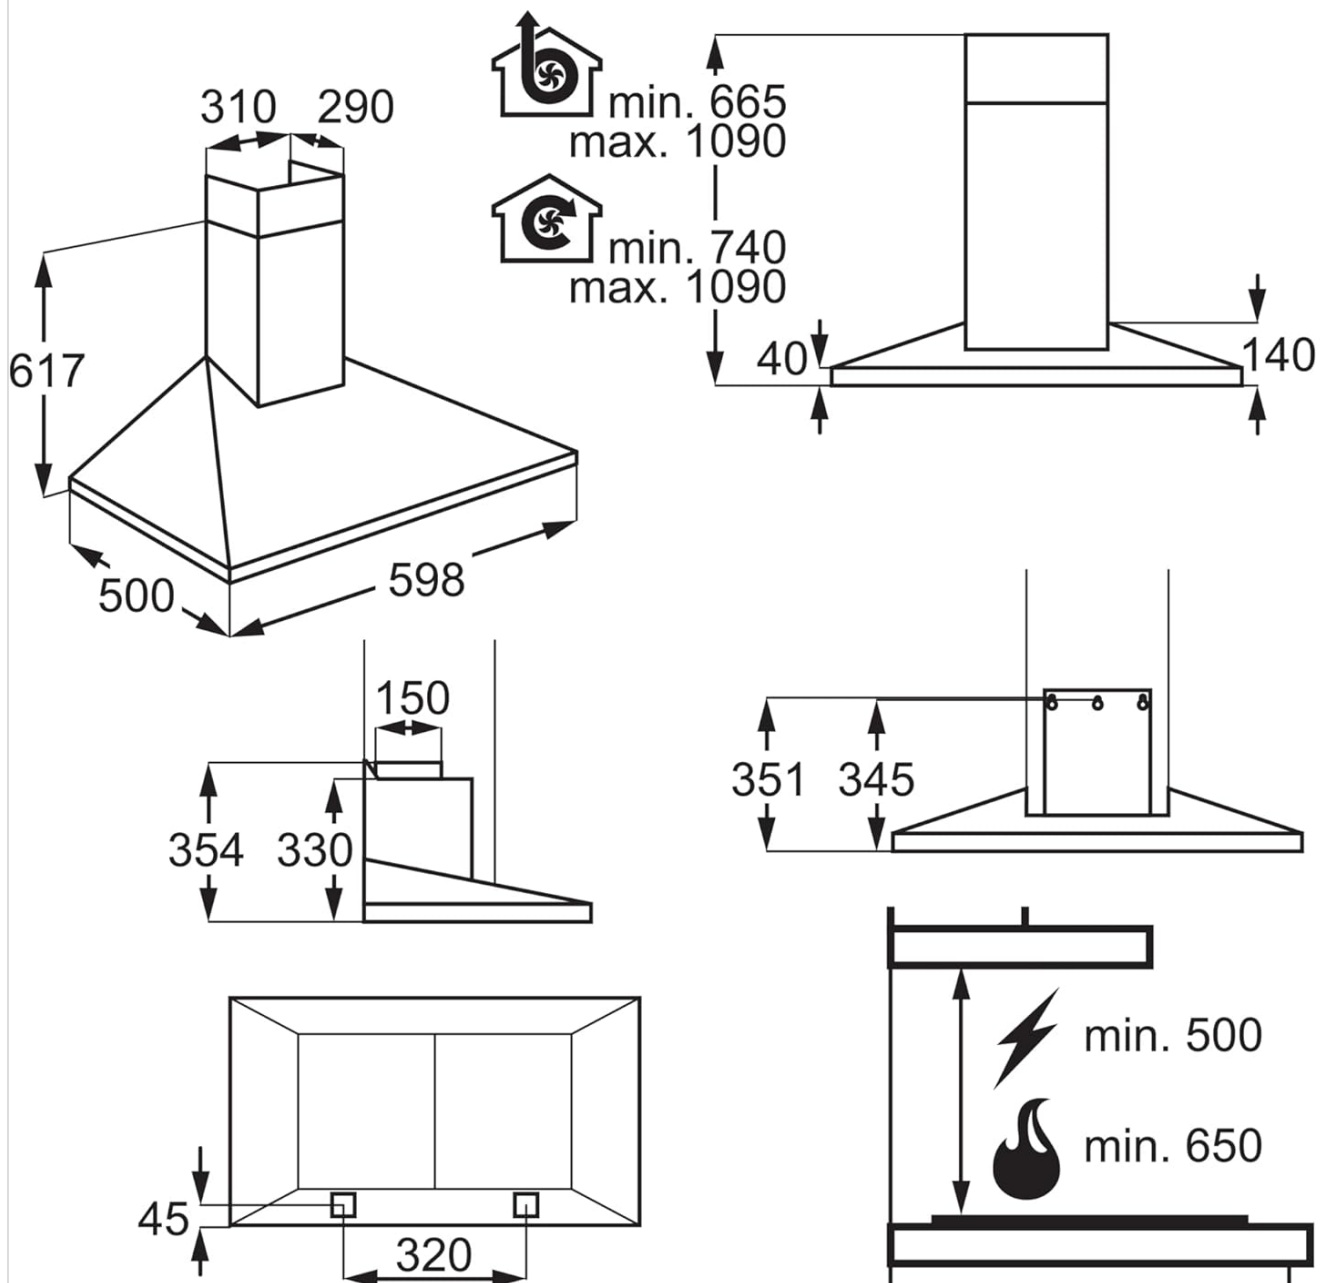


Figure 5.1: View of the hood's underside, highlighting the washable grease filters.

5.2. Cleaning the Exterior

Clean the stainless steel exterior with a soft cloth and a non-abrasive cleaner specifically designed for stainless steel. Avoid using harsh chemicals or abrasive pads, as these can damage the finish.

5.3. Replacing LED Lights

The LED lights are designed for long life. If replacement is necessary, contact qualified service personnel. Do not attempt to replace the LED modules yourself.

6. TROUBLESHOOTING

If you experience issues with your cooker hood, refer to the following common troubleshooting steps:

- **No power:** Check the power supply and circuit breaker. Ensure the appliance is properly plugged in.
- **Poor extraction:** Clean the grease filters. If using recirculation mode, check and replace charcoal filters if

necessary. Ensure there are no obstructions in the ducting.

- **Excessive noise:** Check if the filters are correctly installed. Ensure the hood is securely mounted and there are no loose parts.
- **Lights not working:** Check the light switch. If the issue persists, the LED module may require professional inspection.

For problems not resolved by these steps, contact AEG customer support or a qualified service technician.

7. SPECIFICATIONS

Feature	Specification
Brand	AEG
Model	DKB4650M
Material	Stainless Steel
Noise Level	64 dB
Mounting Type	Wall Mount
Included Components	Grease Filter
Controls Type	Push Button
Voltage	220V
Number of Speeds	3
Item Weight	13.7 Kilograms
Light Source Type	LED
Filter Type	Grease Filter
Item Form	Pyramid
Ventilation Type	Recirculation or Ducted
Vent Hood Design	Wall Mounted Canopy Hood
Product Dimensions (L x W x H)	50 x 59.8 x 66.5 cm
Energy Efficiency Class	B
Annual Energy Consumption	56.4 Kilowatt Hours Per Year
Airflow Displacement	603 CMPH

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or visit the official AEG website. For technical support, spare parts, or service inquiries, please contact AEG customer service.

You can find more information and contact details on the [AEG Store on Amazon](#).

