

FITUEYES TT107501MB

FITUEYES TT107501MB TV Stand User Manual

Model: TT107501MB

INTRODUCTION

Thank you for choosing the FITUEYES TT107501MB TV Stand. This stand is designed to provide a stable and versatile mounting solution for your television, featuring a swivel function and adjustable height. Please read this manual carefully before assembly and use to ensure safe and correct installation and operation. Keep this manual for future reference.

SAFETY INFORMATION

- **Weight Capacity:** This TV stand is designed to support televisions weighing up to 40 kg (88 lbs). Do not exceed this weight limit.
- **Screen Size:** Compatible with screens from 32 to 65 inches. Ensure your TV's VESA pattern is compatible (200x200mm to 600x400mm).
- **Assembly:** Assembly should be performed by at least two adults. Follow all instructions carefully. Incorrect assembly can lead to product failure or injury.
- **Stability:** Ensure the stand is placed on a flat, stable, and level surface. Do not place heavy objects on the stand's base or shelves.
- **Children:** Keep children away from the assembly area. Small parts can be a choking hazard. Do not allow children to climb on the stand or TV.
- **Damage:** Do not use the stand if any parts are missing or damaged. Contact customer support for replacement parts.



The TV stand has a maximum weight capacity of 40 kg (88 lbs). Ensure your television does not exceed this limit for safe operation.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact FITUEYES customer service.

Part	Description	Quantity
A	Tempered Glass Base	1
B	Main Support Column	1
C	TV Mounting Bracket	1
D	Vertical TV Brackets	2
E	Hardware Kit (Screws, Washers, Spacers)	1 set

Part	Description	Quantity
------	-------------	----------


F	Cable Management Clips	2
G	Tools (Allen Key, Wrench)	1 set

ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your FITUEYES TV stand. It is recommended to have a second person assist with the assembly, especially when mounting the TV.

Step 1: Attach the Main Support Column to the Base

Place the tempered glass base (A) on a soft, clean surface to prevent scratches. Align the main support column (B) with the pre-drilled holes on the base. Secure it using the appropriate screws and washers from the hardware kit (E). Tighten firmly with the provided tools (G).

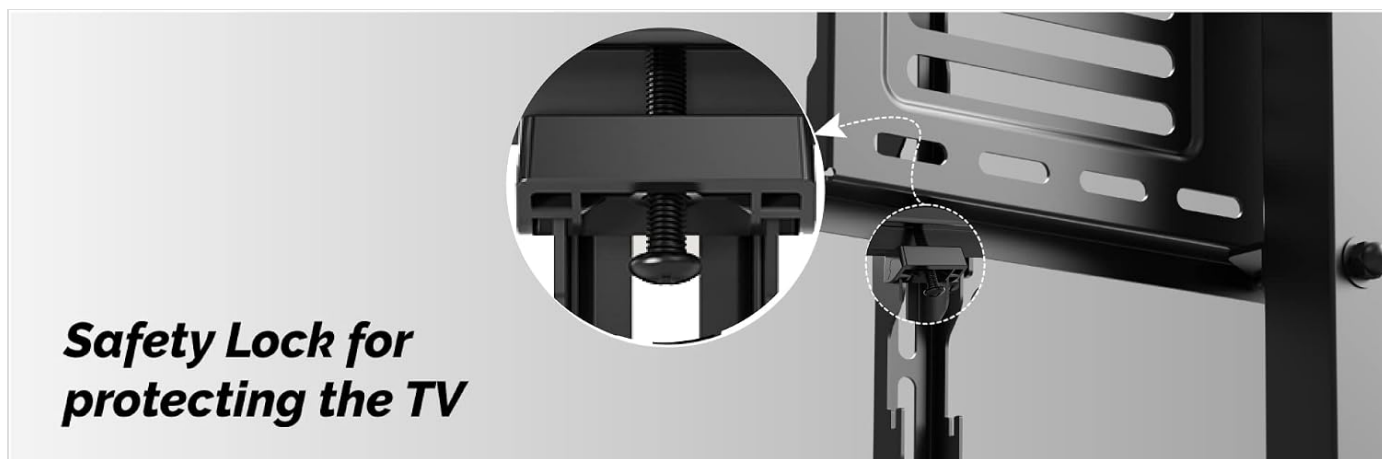


Safety Lock for protecting the TV



Cable Management to organized the wires

 10mm Thick Tempered Glass Base

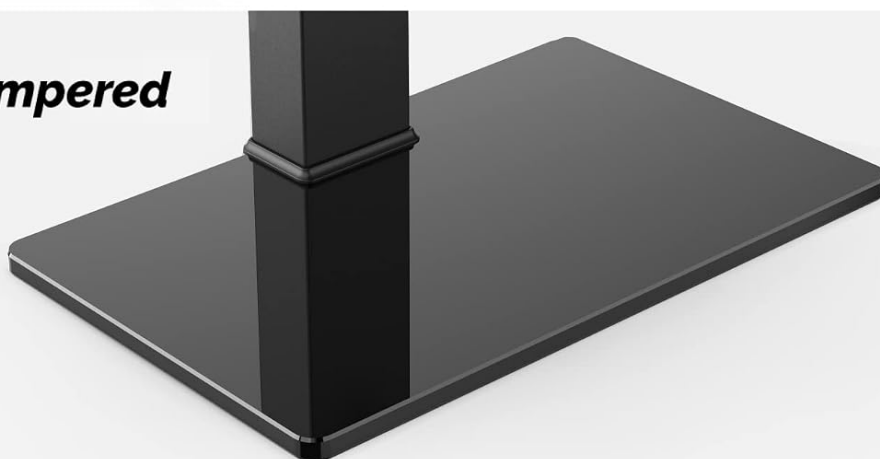


Detail of the 10mm thick tempered glass base and cable management feature. Ensure the column is securely attached to the base.

Step 2: Assemble the TV Mounting Bracket

Attach the TV mounting bracket (C) to the top of the main support column (B). Ensure it is oriented correctly as per the diagrams in your physical manual. Use the designated screws and tighten them securely.

Step 3: Attach Vertical TV Brackets to your Television

Identify the VESA mounting holes on the back of your television. Select the correct screws, washers, and spacers from the hardware kit (E) that fit your TV's VESA pattern. Attach the two vertical TV brackets (D) to the back of your television. Ensure they are level and securely fastened.

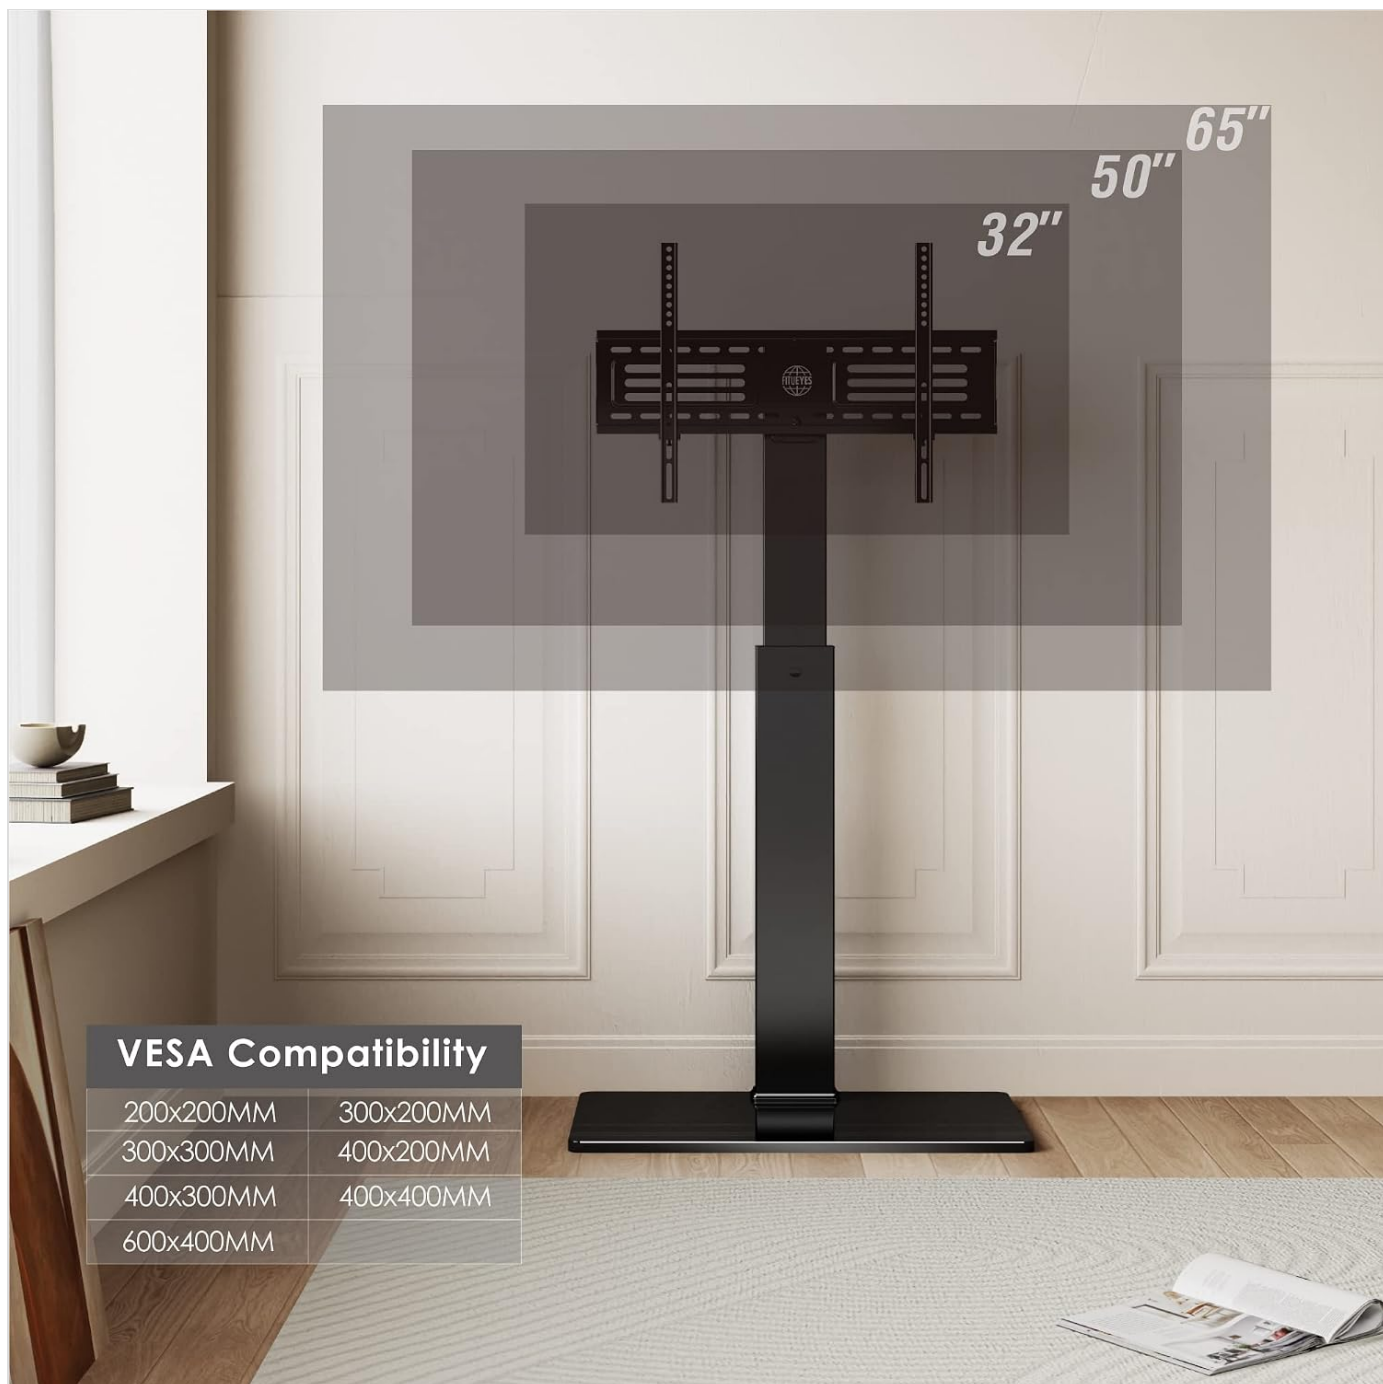

VESA Compatibility

200x200MM	300x200MM
300x300MM	400x200MM
400x300MM	400x400MM
600x400MM	

This image shows the VESA compatibility of the stand, supporting patterns from 200x200mm up to 600x400mm for TVs between 32 and 65 inches.

Step 4: Mount the Television onto the Stand

With assistance, carefully lift your television and hook the vertical TV brackets (D) onto the TV mounting bracket (C) on the stand. Ensure the TV is properly seated and centered. Use the safety lock mechanism (visible in the image for Step 1) to secure the TV to prevent accidental dislodgement. This typically involves tightening a screw or engaging a clip at the bottom of the vertical brackets.

Step 5: Adjust Height and Manage Cables

Adjust the height of the TV as desired (refer to the Operating Instructions section). Use the provided cable management clips (F) to route and organize your TV cables along the main support column for a tidy appearance.

 
 


A fully assembled FITUEYES TV stand with a television, showcasing its sleek design in a living room setting.

OPERATING INSTRUCTIONS

Height Adjustment

The TV stand offers multiple height adjustment levels to optimize your viewing experience. To adjust the height, you may need to temporarily unmount the TV from the main bracket, adjust the position of the vertical TV brackets on the main support column, and then remount the TV. Refer to the specific instructions in your physical manual for detailed steps on adjusting the height settings.

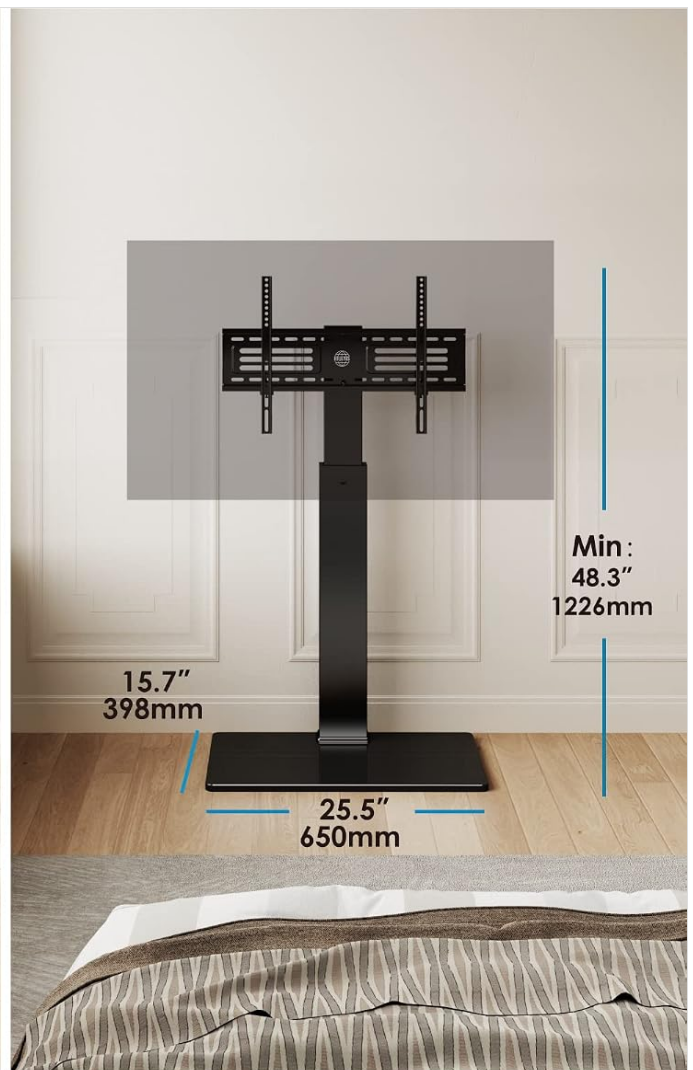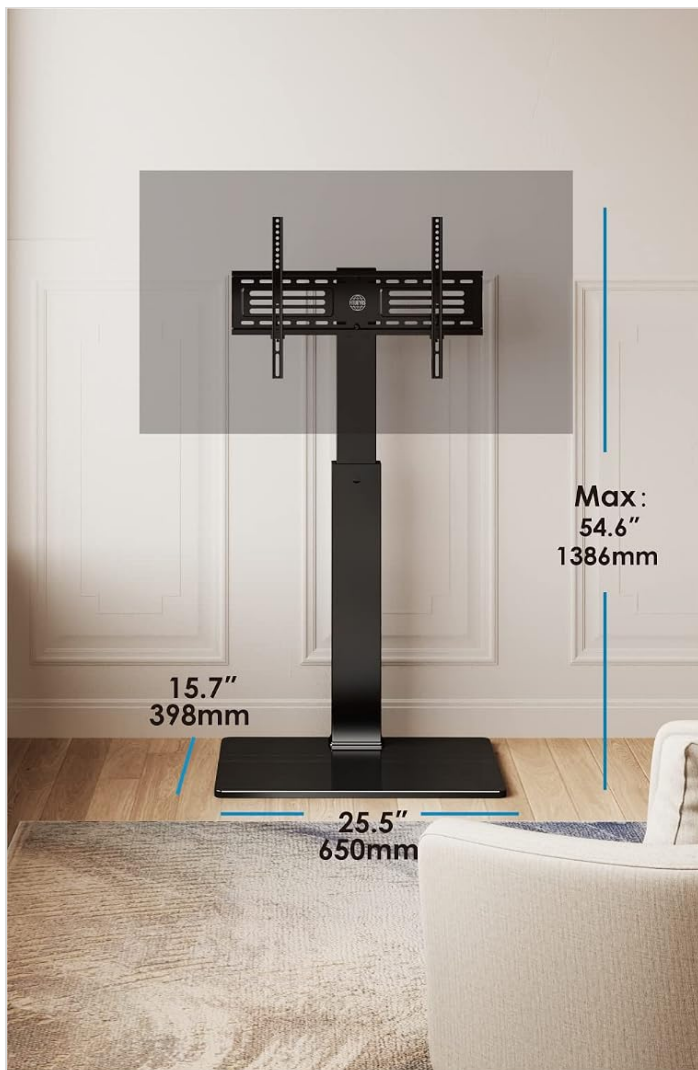

3x2 LEVELS HEIGHT ADJUSTMENT

Choose the height that you need

The stand allows for 3x2 levels of height adjustment, ranging from a minimum TV center height of approximately 1226mm (48.3 inches) to a maximum of 1386mm (54.6 inches).

Swivel Function

The TV mounting bracket allows your television to swivel up to ± 30 degrees (left or right). Gently push the sides of your television to adjust the viewing angle as needed. Avoid forcing the swivel beyond its intended range.



The TV stand features a swivel function, allowing the television to rotate ± 30 degrees horizontally for optimal viewing from different positions.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the stand. For the tempered glass base, a glass cleaner can be used. Avoid abrasive cleaners or solvents that may damage the finish.
- **Inspections:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Avoid Overloading:** Do not place items on the stand that exceed its weight capacity.

TROUBLESHOOTING

TV is not level

Ensure that the vertical TV brackets are attached evenly to the back of your television. Check that the main support

column is securely fastened to the base and that the TV mounting bracket is level.

Stand feels unstable

Verify that all screws are tightened securely. Ensure the stand is placed on a flat, level, and solid surface. Do not place the stand on uneven flooring or thick carpets that might compromise stability.

Difficulty with swivel function

Check for any obstructions behind the TV or around the stand that might be impeding movement. Ensure the TV is not overloaded beyond the weight capacity, which could strain the swivel mechanism.

SPECIFICATIONS

Feature	Detail
Model Number	TT107501MB
Brand	FITUEYES
Type of Fixation	Floor Mount
Movement Type	Swivel
Material	Tempered Glass (Base)
Compatible Devices	Television
Minimum Compatible Screen Size	32 Inches
Maximum Compatible Screen Size	65 Inches
Weight Capacity	40 Kilograms (88 lbs)
VESA Compatibility	200x200mm to 600x400mm
Item Weight	14.8 Kilograms
UPC	606479277570

WARRANTY AND SUPPORT

FITUEYES products are manufactured with quality and durability in mind. For specific warranty information, please refer to the warranty card included with your product or visit the official FITUEYES website. If you encounter any issues during assembly or use, or if you require replacement parts, please contact FITUEYES customer support. Have your model number (TT107501MB) and purchase details ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question