

[Manuals.plus](#) /

> [Weelko](#) /

> Weelko F-311A Ultrasonic Facial Exfoliation Device User Manual

Weelko F-311A

Weelko F-311A Ultrasonic Facial Exfoliation Device User Manual

Model: F-311A | Brand: Weelko

1. INTRODUCTION

Thank you for choosing the Weelko F-311A Ultrasonic Facial Exfoliation Device. This professional-grade ultrasonic peeling device is designed for deep facial cleansing, exfoliation, and enhanced product absorption. Please read this manual thoroughly before operation to ensure safe and effective use.

2. SAFETY INSTRUCTIONS

To prevent injury or damage to the device, always follow these basic safety precautions:

- Do not use the device on broken, irritated, or infected skin.
- Keep the device away from water and do not immerse it in liquids.
- Ensure the power cord is not damaged and is properly connected to a suitable power outlet.
- Do not use the device if it has been dropped or damaged.
- Keep out of reach of children.
- Consult a physician before use if you have any pre-existing skin conditions or medical concerns.
- Unplug the device when not in use and before cleaning.

3. PRODUCT OVERVIEW

The Weelko F-311A is a modern and compact ultrasonic device equipped with a spatula-shaped applicator and a safety wrist strap. It is designed to effectively remove impurities, dead skin cells, and deeply cleanse pores of grease, dirt, and makeup.

The spatula applicator works in two main modes:

- **Exfoliation Mode:** Used for quick and direct exfoliation, removing surface impurities.

- **Product Absorption Mode:** By reversing the spatula's position, it facilitates the penetration of skincare products through ultrasonic vibration massage, aiding in better hydration and tissue toning.



Figure 1: Weelko F-311A Ultrasonic Facial Exfoliation Device. This image shows the compact design of the device with its ergonomic handle and the distinctive spatula-shaped head, ready for use.

4. SETUP

1. **Unpack:** Carefully remove the device and all accessories from the packaging.
2. **Inspect:** Check the device for any visible damage. Do not use if damaged.
3. **Connect Power:** Plug the power cord into the device and then into a suitable electrical outlet (100-120V or 220-240V, 50/60Hz).
4. **Prepare Skin:** Ensure the skin is clean and moist before treatment. It is recommended to use the device on damp skin or with a suitable conductive gel/serum.

5. OPERATING INSTRUCTIONS

5.1 Exfoliation and Deep Cleansing

1. Turn on the device using the power button.
2. Ensure your skin is thoroughly cleansed and moist. You may use a facial steamer or warm towel to open pores.
3. Hold the device with the spatula angled downwards (approximately 45 degrees) against the skin.
4. Gently glide the spatula across the skin, moving from the center of the face outwards. Focus on areas with blackheads, whiteheads, or congestion.
5. Observe the spatula collecting impurities. Wipe the spatula clean with a tissue as needed.
6. Limit treatment to 15 minutes per session.

5.2 Product Absorption (Sonophoresis)

1. After exfoliation, apply your preferred serum, moisturizer, or treatment cream to your face.
2. Reverse the spatula's position so it is flat against the skin.
3. Gently glide the flat side of the spatula over the areas where product has been applied. The ultrasonic vibrations will

help to push the product deeper into the skin.

4. Move the spatula slowly and evenly across the face.
5. Limit treatment to 15 minutes per session.

Note: The device has a predetermined working time of 15 minutes per session.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and hygiene of your device:

- **After Each Use:** Turn off and unplug the device. Wipe the spatula head clean with a soft, damp cloth or an alcohol wipe.
- **Do Not Submerge:** Never immerse the device in water or any other liquid.
- **Storage:** Store the device in a cool, dry place, away from direct sunlight and moisture.
- **Cleaning the Body:** Wipe the main body of the device with a soft, dry cloth.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Not plugged in; power outlet issue; device malfunction.	Ensure power cord is securely plugged in. Try a different outlet. If problem persists, contact support.
No ultrasonic vibration.	Device not activated; malfunction.	Ensure the device is turned on and the correct mode is selected. If problem persists, contact support.
Skin feels dry or irritated after use.	Insufficient moisture on skin; excessive pressure; prolonged use.	Ensure skin is adequately moist during treatment. Apply less pressure. Reduce treatment duration.

8. SPECIFICATIONS

Model: F-311A

Brand: Weelko

Working Frequency: 25 – 27 kHz

Rated Voltage: 100V ~ 120V / 220V ~ 240V

Frequency: 50 Hz / 60 Hz

Working Power: 6 W

Rated Power: 20 W

Predetermined Working Time: 15 minutes

Packaging Dimensions: 37 x 27.5 x 14 cm

GTIN/UPC: 713228281792

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or contact your authorized Weelko dealer. Keep your proof of purchase for warranty claims.

For further assistance, please visit the official Weelko website or contact customer service through the details provided on your product packaging.

