

Braun BC03B

Braun Classic Analogue Alarm Clock BC03B Instruction Manual

Model: BC03B

INTRODUCTION

This instruction manual provides essential information for the safe and efficient operation of your Braun Classic Analogue Alarm Clock, Model BC03B. Please read this manual thoroughly before using the product and retain it for future reference.

PRODUCT FEATURES

- Quiet quartz sweeping movement for silent operation.
- Crescendo beep alarm that increases in frequency and volume.
- Integrated foot snooze and light function.
- Luminous tipped hour and minute hands for visibility in low light.
- Iconic yellow second hand.



Image: Front view of the Braun Classic Analogue Alarm Clock, Model BC03B, displaying its black face, white hour and minute hands, and yellow second hand.

SETUP

1. Battery Installation

The clock requires one 'A' battery (not included). To install the battery:

1. Locate the battery compartment cover on the back of the clock.
2. Remove the cover by sliding it or gently prying it open.
3. Insert one 'A' battery, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover.

Luminous tipped hands.

Glow in the dark hour and minute hands to aid legibility.



Image: Rear view of the Braun alarm clock, showing the battery compartment and setting knobs.

2. Setting the Time

To set the current time:

1. Locate the time setting knob on the back of the clock (often labeled with a clock icon).
2. Rotate the knob in either direction until the hour and minute hands display the correct time.

3. Setting the Alarm

To set the alarm time:

1. Locate the alarm setting knob on the back of the clock (often green or labeled with an alarm icon).
2. Rotate this knob until the alarm hand points to your desired wake-up time.

OPERATING INSTRUCTIONS

1. Activating/Deactivating the Alarm

The alarm is activated or deactivated using the alarm switch, typically located on the top or back of the clock. Slide the switch to the "ON" position to activate the alarm and to the "OFF" position to deactivate it.

Crescendo beep alarm.



The beep alarm gets more frequent if you do not turn it off.



Image: Top view of the Braun alarm clock, highlighting the alarm ON/OFF switch with a green indicator when active.

2. Crescendo Alarm Function

When the alarm is activated, it will begin with a soft beep and gradually increase in frequency and volume to ensure you wake up. This feature is designed for a gentle awakening.

Integrated foot snooze / light function.



Snooze interval is 5 minutes. Light illuminates for 5 seconds once manually activated.

Image: Close-up of the Braun alarm clock with an icon representing the crescendo beep alarm feature.

3. Snooze and Light Function

The clock features an integrated foot snooze and light function. To activate:

- **Snooze:** When the alarm sounds, gently press down on the top of the clock. The alarm will pause for approximately 5 minutes before sounding again.
- **Light:** Pressing down on the top of the clock will also illuminate the clock face for approximately 5 seconds, allowing you to view the time in the dark. This can be activated at any time.

Luminous tipped hands.

Glow in the dark hour and minute hands to aid legibility.



Image: The Braun alarm clock with its face illuminated, indicating the snooze and light function is active. A 'Zzz' icon with '5 min' is shown.

4. Luminous Hands

The hour and minute hands are tipped with luminous material, providing visibility in low-light conditions without needing to activate the backlight.

Quiet precision quartz movement.



Image: Close-up of the Braun alarm clock face in darkness, showing the glow of the luminous hour and minute hands.

MAINTENANCE

1. Cleaning

To clean the clock, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the clock's finish or internal components.

2. Battery Replacement

Replace the battery when the clock's movement becomes erratic or stops. Always use a fresh 'A' battery. Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not functioning or running slowly.	Low or depleted battery.	Replace with a new 'A' battery. Ensure correct polarity.

Problem	Possible Cause	Solution
Alarm does not sound.	Alarm switch is OFF or alarm time is not set correctly.	Ensure the alarm switch is in the "ON" position. Verify the alarm hand is set to the desired time. Check battery.
Light function not working.	Low battery or malfunction.	Replace battery. If the issue persists, contact customer support.

SPECIFICATIONS

- **Model:** BC03B
- **Movement:** Quiet Quartz Sweeping Movement
- **Alarm Type:** Crescendo Beep Alarm
- **Snooze Duration:** Approximately 5 minutes
- **Light Duration:** Approximately 5 seconds (manual activation)
- **Power Source:** 1 x 'A' Battery (not included)
- **Dimensions:** 3.07 x 1.5 x 3.07 inches (7.8 x 3.8 x 7.8 cm)
- **Weight:** 3.53 ounces (100 grams)
- **Material:** Plastic



Image: Diagram illustrating the dimensions of the Braun alarm clock in centimeters.

WARRANTY AND SUPPORT

Braun products are manufactured to high-quality standards. For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official Braun website. Keep your purchase receipt as proof of purchase.

Manufacturer: Braun

Date First Available: November 19, 2019

For further assistance, you may visit the [Braun Store on Amazon](#).

IMPORTANT SAFETY INFORMATION

- Do not expose the clock to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping the clock or subjecting it to strong impacts.

- Keep out of reach of small children.
- Remove batteries if the clock will not be used for an extended period to prevent leakage.