

[Manuals.plus](#) /

› [Braun](#) /

› Braun Classic Analogue Alarm Clock Instruction Manual

Braun BC12B

Braun Classic Analogue Alarm Clock Instruction Manual

Model: BC12B

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Braun Classic Analogue Alarm Clock, Model BC12B. Please read these instructions carefully before use to ensure optimal performance and longevity of your device.



Image: Front view of the Braun Classic Analogue Alarm Clock, black with white hour and minute hands, and a distinctive yellow second hand. The clock face is clear with hour markers.

SETUP

Follow these steps to prepare your alarm clock for first use:

1. **Battery Installation:**

The Braun Classic Analogue Alarm Clock requires 1x AAA battery (not included). Locate the battery compartment on the back of the clock. Open the compartment cover, insert the AAA battery, ensuring correct polarity (+/-), and close the cover securely.

Luminous tipped hands.

Glow in the dark hour and minute hands to aid legibility.



Image: Rear view of the alarm clock, highlighting the battery compartment and the time/alarm setting knobs.

2. Setting the Time:

On the back of the clock, locate the time setting knob. Rotate this knob clockwise to set the current time. Ensure the hour and minute hands are accurately aligned.

OPERATING INSTRUCTIONS

Learn how to use the various functions of your alarm clock:

1. Setting the Alarm:

Locate the alarm setting knob on the back of the clock. Rotate this knob to set your desired alarm time. The alarm hand (often a smaller, distinct hand) will point to the set time.

2. Activating/Deactivating the Alarm:

The alarm is activated by a switch or button, typically located on the top or side of the clock. When activated, a small indicator (e.g., a raised bar or color) may become visible. To deactivate, move the switch to the off position.

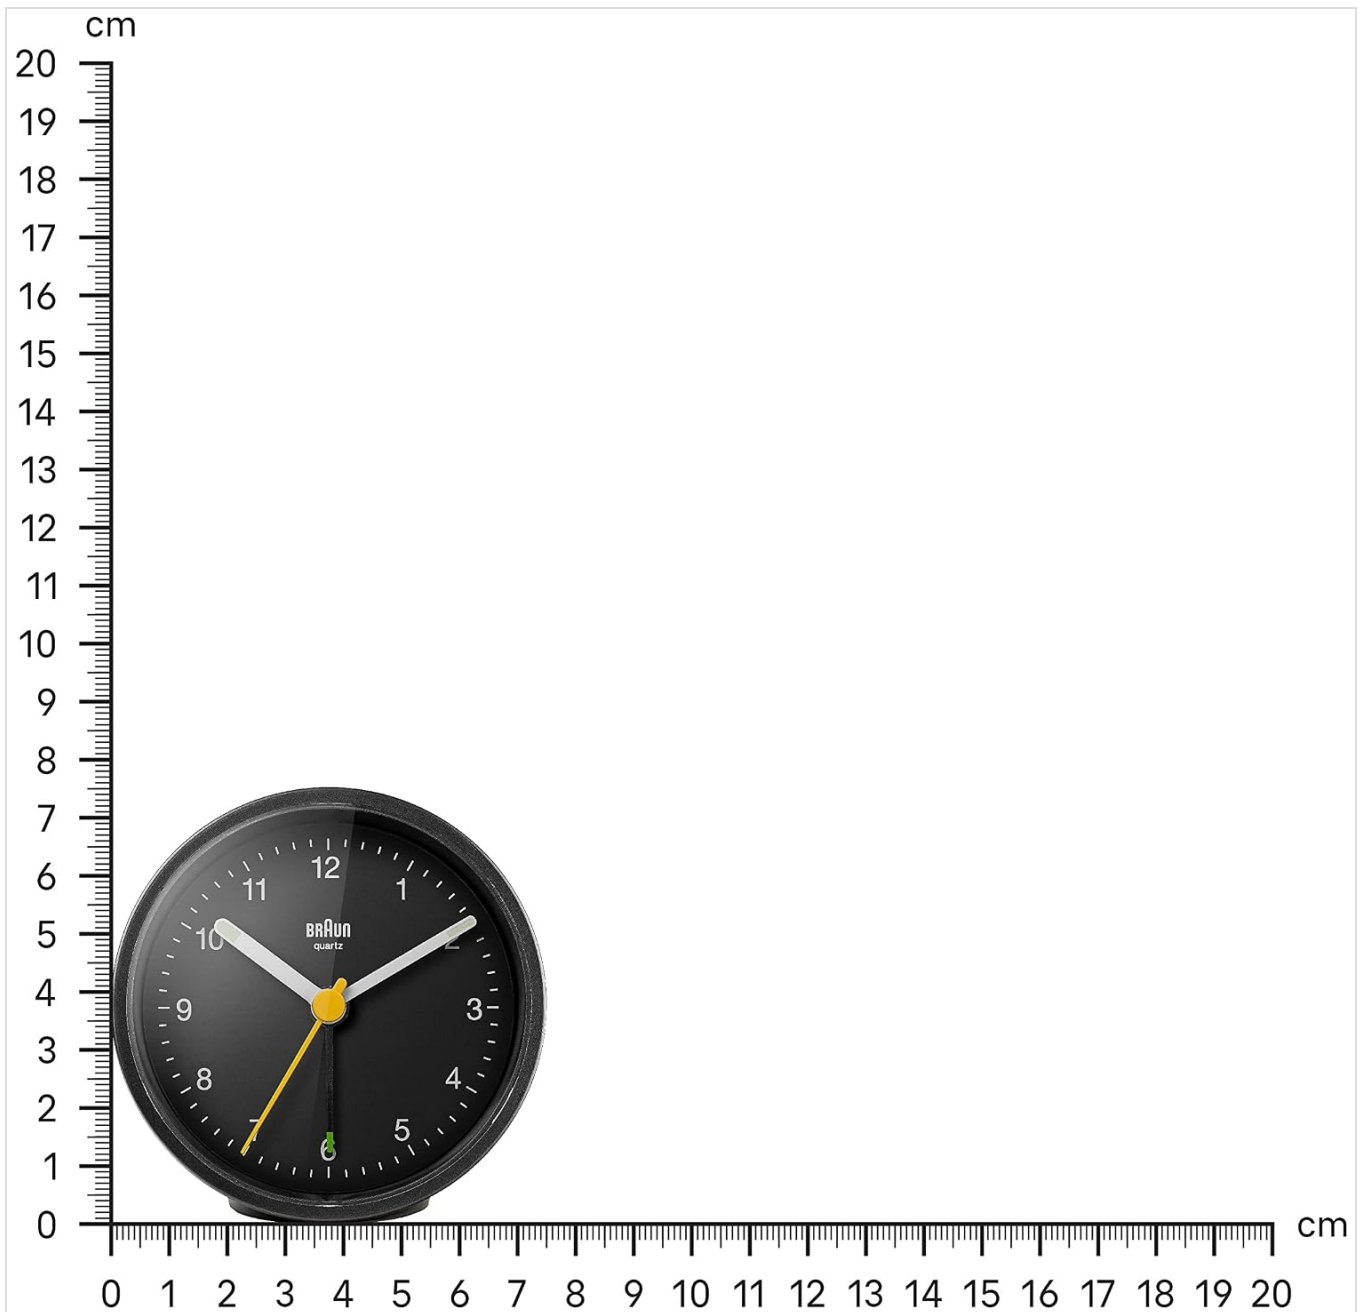


Image: Top view of the alarm clock, illustrating the alarm activation switch, which protrudes when the alarm is set.

3. Crescendo Beep Alarm:

The alarm features a crescendo beep, meaning the sound gradually increases in frequency and volume to gently wake you. If not turned off, the alarm will continue to sound at increasing intensity.

4. Snooze and Light Function:

The clock features an integrated foot snooze/light function. To activate the snooze (for a 5-minute interval) or illuminate the dial (for 5 seconds), gently press down on the top of the clock. This action compresses the foot snooze/light button located at the base.



Quiet precision quartz movement.

Image: Front view of the alarm clock with the light function active, showing a soft illumination on the dial for easy nighttime viewing.

5. Luminous Tipped Hands:

The hour and minute hands are equipped with luminous tips, allowing for improved legibility in low-light conditions. These tips glow in the dark after exposure to light.



Image: Close-up of the clock face in darkness, demonstrating the glow of the luminous hour and minute hands.

MAINTENANCE

To ensure the longevity and proper functioning of your alarm clock, follow these maintenance guidelines:

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the surface.
- **Battery Replacement:** Replace the AAA battery when the clock's movement becomes erratic or the alarm sound weakens. Always dispose of used batteries responsibly.
- **Storage:** If storing the clock for an extended period, remove the battery to prevent leakage and potential damage.

TROUBLESHOOTING

If you encounter any issues with your Braun Classic Analogue Alarm Clock, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Clock not keeping accurate time or stopping.	Low battery or incorrect battery installation.	Replace the AAA battery, ensuring correct polarity.
Alarm not sounding.	Alarm not activated, alarm time not set correctly, or low battery.	Ensure the alarm switch is in the 'ON' position. Verify the alarm hand is set to the desired time. Replace the battery.
Light function not working.	Low battery or button not fully pressed.	Replace the AAA battery. Ensure you are pressing down firmly on the clock to activate the foot snooze/light button.

If the problem persists after attempting these solutions, please contact Braun customer support.

SPECIFICATIONS

- **Model:** BC12B
- **Brand:** Braun
- **Color:** Black
- **Display Type:** Analog
- **Movement:** Quiet Precision Quartz
- **Special Features:** Crescendo Beep Alarm, Integrated Foot Snooze/Light Function, Luminous Tipped Hands
- **Power Source:** 1 x AAA Battery (not included)
- **Dimensions:** Approximately 2.95"W x 2.95"H (75mm x 75mm)
- **Weight:** Approximately 3.21 ounces (91 Grams)
- **Material:** Plastic



Image: Visual representation of the clock's dimensions, showing its compact size.

WARRANTY AND SUPPORT

Your Braun Classic Analogue Alarm Clock is covered by a manufacturer's 2-year limited warranty. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or further assistance, please refer to the contact information provided in the original product packaging or visit the official Braun website.

Important: Keep your purchase receipt as proof of purchase for warranty purposes.

© 2025 Braun. All rights reserved.
For more information, visit www.braun.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Where do I insert the battery in the Braun BC12B analog alarm clock?

To insert the battery into your Braun BC12B analog alarm clock, follow these steps:Locate the battery compartment on the back of the clock.Open the compartment cover.Insert 1x AAA (1.5V) battery, ensuring you observe the...

[Read full answer](#)