

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Farberware](#) /

› [Farberware Professional Medium Etched Grater Instruction Manual](#)

### Farberware 5211461

## Farberware Professional Medium Etched Grater

Model: 5211461

Brand: Farberware

### PRODUCT OVERVIEW

The Farberware Professional Medium Etched Hand Grater is designed for efficient grating of various food items, particularly cheeses and hard chocolate. Its construction features an ultra-sharp, etched stainless steel surface for optimal performance and a soft-grip footing for stability during use. A protective blade cover is included for safe storage.





Image: Top view of the Farberware Professional Medium Etched Grater, showcasing its stainless steel grating surface and black soft-grip handle.

## SETUP AND INITIAL USE

The Farberware Professional Medium Etched Grater requires minimal setup. Before first use, wash the grater thoroughly with warm, soapy water and rinse completely. Ensure it is dry before storage or use.

1. Remove the grater from its packaging.
2. Remove the protective blade cover by sliding it off the grating surface.
3. Wash the grater as per the cleaning instructions.
4. The grater is now ready for use.

## OPERATING INSTRUCTIONS

This grater is designed for efficient and safe grating. Always exercise caution when handling the sharp grating surface.

- **Preparation:** Ensure the food item to be grated (e.g., cheese, chocolate) is firm and clean.
- **Positioning:** Place the soft-grip footing of the grater firmly on a stable surface, such as a cutting board or directly over a bowl. The soft-grip footing helps prevent slipping during use.
- **Grating:** Hold the grater handle firmly. Take the food item and rub it against the etched stainless steel surface using a downward motion. Apply gentle, consistent pressure.
- **Collection:** The grated food will collect beneath the grater.
- **Safety:** Keep fingers away from the sharp grating surface. Use caution when grating smaller pieces of food.



Image: The Farberware Professional Medium Etched Grater positioned next to a block of cheese, demonstrating its intended use in a kitchen setting.

## MAINTENANCE AND CLEANING

Proper care will extend the life and maintain the performance of your Farberware grater.

- **Cleaning:** The grater is dishwasher safe for convenient cleaning. For hand washing, use warm, soapy water and a brush to safely remove food particles from the etched surface. Rinse thoroughly.
- **Drying:** Dry immediately after washing to prevent water spots and maintain the stainless steel's luster.
- **Storage:** Always replace the protective blade cover before storing the grater to protect the sharp surface and for user safety. Store in a dry place.



Image: The Farberware Professional Medium Etched Grater shown with its clear protective blade cover, indicating safe storage.

## SPECIFICATIONS

<b>Brand</b>	Farberware
<b>Model Number</b>	5211461
<b>Color</b>	Black
<b>Material</b>	Stainless Steel
<b>Style</b>	Medium Grater
<b>Item Weight</b>	6.2 ounces
<b>Product Dimensions</b>	12.5 x 3.15 x 1.18 inches
<b>Dishwasher Safe</b>	Yes
<b>UPC</b>	024131378920

## WARRANTY AND SUPPORT

This Farberware Professional Medium Etched Grater comes with a **Lifetime Limited Warranty**. For detailed information regarding warranty coverage or for product support, please refer to the official Farberware website or contact their

customer service directly.

For further assistance, you may visit the [Farberware Store on Amazon](#).

---

© 2023 Farberware. All rights reserved.