

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Moulinex](#) /

› [Moulinex Super Uno Fryer Basket Instruction Manual SS-993458](#)

Moulinex SS-993458

Moulinex Super Uno Fryer Basket Instruction Manual

Model: SS-993458

Brand: Moulinex

INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your Moulinex Super Uno Fryer Basket. Please read this manual thoroughly before installation and operation, and retain it for future reference. This product is an original replacement part designed to maintain the performance of your Moulinex Super Uno fryer.

PRODUCT OVERVIEW

The Moulinex Super Uno Fryer Basket is a genuine replacement component for specific Moulinex Super Uno fryer models. It is constructed from durable metal mesh, designed to safely hold food items during the deep-frying process and allow for efficient oil drainage. This basket ensures even cooking and easy handling of food in hot oil.

Compatible Fryer Models:

- AM3008 series
- AM3021 series
- AM3031 series
- FR3001 series
- FR3021 series

To confirm compatibility, please check the identification plate on your Moulinex fryer, usually located on the underside of the appliance.



Image 1: Moulinex Super Uno Fryer Basket. This image displays the rectangular metal mesh basket, designed for use with compatible Moulinex Super Uno deep fryers. It features a sturdy construction and a handle attachment point for safe operation.

SETUP

1. **Unpacking:** Carefully remove the fryer basket from its packaging. Inspect for any signs of damage.
2. **Initial Cleaning:** Before first use, wash the fryer basket thoroughly with warm water and a mild dish soap. Rinse it completely to remove any manufacturing residues.
3. **Drying:** Ensure the basket is completely dry before placing it into the fryer. Moisture can react with hot oil.
4. **Placement:** Carefully place the basket into the designated slot within your Moulinex Super Uno fryer. Ensure it sits securely and is properly aligned with the fryer's lifting mechanism (if applicable). Do not force the basket into place.

OPERATING INSTRUCTIONS

1. **Prepare Food:** Prepare your food items according to your recipe. Ensure food is dry before placing it in the basket to minimize oil splattering.

2. **Load Basket:** Place the food items into the fryer basket. Do not overfill the basket; ensure there is enough space for oil to circulate and for food to cook evenly. Overfilling can also lead to oil overflow.
3. **Lower into Oil:** Once the fryer oil has reached the desired temperature, use the basket's handle to slowly and carefully lower the basket containing the food into the hot oil. Avoid sudden movements to prevent oil splashes.
4. **Frying:** Allow the food to fry for the recommended time. Monitor the cooking process as needed.
5. **Retrieve Basket:** Once cooking is complete, use the handle to slowly lift the basket out of the hot oil. Allow excess oil to drain back into the fryer for a few seconds.
6. **Serve:** Carefully transfer the fried food from the basket to a serving dish lined with paper towels to absorb any remaining oil.

MAINTENANCE AND CLEANING

Proper maintenance and cleaning will extend the life of your fryer basket and ensure hygienic use.

1. **Cool Down:** Always allow the fryer basket to cool completely after each use before attempting to clean it.
2. **Washing:** Wash the basket with warm water and a mild dish soap. A non-abrasive brush or sponge can be used to remove any stuck-on food particles or oil residue.
3. **Rinsing:** Rinse the basket thoroughly under running water to remove all soap residue.
4. **Drying:** Dry the basket completely with a clean cloth or allow it to air dry before storage. This prevents water spots and potential rust formation.
5. **Storage:** Store the clean, dry basket in a dry place.

Caution: Do not use abrasive cleaners, steel wool, or harsh scouring pads, as these can damage the basket's metal finish and potentially lead to rust.

TROUBLESHOOTING

- **Basket does not fit in fryer:**
 - Verify your fryer model number against the compatible models listed in the 'Product Overview' section.
 - Ensure the basket is oriented correctly within the fryer.
- **Food sticking to the basket:**
 - Ensure the basket is thoroughly clean before use.
 - For certain foods, especially battered items, a light coating of cooking oil on the basket before adding food may help prevent sticking.
- **Rust spots appearing on the basket:**
 - Ensure the basket is completely dried after every wash before storage.
 - Avoid using harsh chemicals or abrasive cleaning tools that can damage the protective layer of the metal.
 - Store the basket in a dry environment.

SPECIFICATIONS

- **Model Number:** SS-993458
- **Brand:** Moulinex
- **Material:** Metal
- **Color:** Silver
- **Dimensions (L x W x H):** Approximately 27.4 x 23.8 x 9.3 cm (10.8 x 9.4 x 3.7 inches)
- **Weight:** Approximately 220 g (0.49 lbs)

WARRANTY AND SUPPORT

This fryer basket is an original Moulinex replacement part. For specific warranty information regarding this component or your Moulinex Super Uno fryer, please refer to the original fryer manual or visit the official Moulinex website. For technical assistance or customer support, please contact Moulinex customer service directly. Always retain your purchase receipt as proof of purchase for any warranty claims.