

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Simple Houseware](#) /
- › [Simple Houseware Standard Rod Garment Rack BO-007-3 Instruction Manual](#)

## Simple Houseware BO-007-3

# Simple Houseware Standard Rod Garment Rack Instruction Manual

Model: BO-007-3

## INTRODUCTION

---

Thank you for choosing the Simple Houseware Standard Rod Garment Rack. This manual provides essential information for the proper assembly, operation, maintenance, and troubleshooting of your new garment rack. Please read these instructions carefully before assembly and retain them for future reference.

This garment rack is designed to provide a simple and effective solution for additional clothing storage. Its sturdy metal construction and wheeled base offer both durability and mobility.

## PACKAGE CONTENTS

---

Before beginning assembly, ensure all parts are present and undamaged. If any parts are missing or damaged, please contact Simple Houseware customer support.

- Main Horizontal Rod (Extensible)
- Vertical Support Rods (2)
- Base Frame Components
- Caster Wheels (4)
- Assembly Hardware (Screws, Wrenches if needed)

## SETUP AND ASSEMBLY

---

Assembly of the Simple Houseware Garment Rack is designed to be straightforward. Follow these steps carefully:

1. **Attach Caster Wheels:** Securely attach the four caster wheels to the designated points on the base frame components. Ensure they are tightened to prevent wobbling.
2. **Assemble Base Frame:** Connect the base frame components to form a rectangular base. Use the provided hardware to fasten them firmly.
3. **Insert Vertical Support Rods:** Insert the bottom ends of the two vertical support rods into the upright sockets on the assembled base frame.
4. **Attach Main Horizontal Rod:** Place the main horizontal rod onto the top ends of the vertical support rods. Ensure it clicks into place or is secured with the provided fasteners.

5. **Extend Horizontal Rod (Optional):** The main horizontal rod is extensible. Pull the ends outwards to adjust the length as desired. Ensure both sides are extended evenly for stability.



Image: Assembly diagram illustrating the connection of components.



Image: The extensible top horizontal rod, demonstrating its adjustable length.

## OPERATING INSTRUCTIONS

---

Using your Simple Houseware Garment Rack is straightforward:

- **Hanging Clothes:** Utilize the main horizontal rod to hang garments on hangers. The rod can be extended from 30.5 inches to 47.25 inches to accommodate more items.
- **Weight Capacity:** Do not exceed the maximum load capacity of 100 pounds to ensure stability and prevent damage. Distribute weight evenly across the rod.
- **Mobility:** The rack is equipped with caster wheels for easy movement. To move the rack, gently push it to your desired location. Ensure the path is clear of obstacles.



Image: Detail of the durable caster wheels for easy movement.

## MAINTENANCE

---

Regular maintenance will help prolong the life of your garment rack:

- **Cleaning:** Wipe down the metal surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Wheel Care:** Keep the caster wheels free of dust, hair, and debris to ensure smooth rolling.

## TROUBLESHOOTING

---

If you encounter any issues with your garment rack, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rack wobbles or is unstable.	Loose connections; uneven weight distribution.	Ensure all screws are tightened. Redistribute clothes evenly on the rod. Do not exceed weight capacity.
Wheels do not roll smoothly.	Debris caught in wheels; wheels not properly installed.	Clean any debris from the wheels. Check that wheels are securely attached and oriented correctly.
Horizontal rod does not extend/retract easily.	Mechanism is stiff or obstructed.	Ensure no clothes or objects are obstructing the extension mechanism. Apply a small amount of silicone lubricant if necessary.

## SPECIFICATIONS

---

- **Brand:** Simple Houseware
- **Model:** BO-007-3
- **Color:** Black
- **Material:** Metal (Heavy Duty Steel with Chrome finish)
- **Product Dimensions:** 17"D x 47.75"W x 58.3"H (Depth x Width x Height)
- **Extensible Top Horizontal Rod:** Adjustable from 30.5" to 47.25"
- **Load Capacity:** 100 Pounds
- **Installation Type:** Free Standing
- **Assembly Required:** Yes
- **Item Weight:** 6.16 pounds (2.8 Kilograms)



Image: Detailed dimensions of the garment rack.

## WARRANTY AND SUPPORT

---

For warranty information or customer support regarding your Simple Houseware Standard Rod Garment Rack, please refer to the product packaging or visit the official Simple Houseware website. Keep your purchase receipt for warranty claims.

For further assistance, you may contact Simple Houseware directly through their customer service channels.