

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KASINGS](#) /

› [KASINGS Bobbin Cover Slide Plate Replacement for Singer 7468, 7469, 7469Q, 7470, 8763, 8770, 8780 \(Curvy\) Instruction Manual](#)

KASINGS JCEC201805120500006

KASINGS Bobbin Cover Slide Plate Replacement

Instruction Manual for Singer Sewing Machines

Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your KASINGS Bobbin Cover Slide Plate. Please read carefully before proceeding to ensure proper installation and function.

Compatibility

This replacement bobbin cover slide plate is compatible with the following Singer sewing machine models:

- Singer 7468
- Singer 7469
- Singer 7469Q
- Singer 7470
- Singer 8763
- Singer 8770
- Singer 8780 (Curvy)

Safety Information

Always prioritize safety when working with your sewing machine. Follow these guidelines:

- Always turn off and unplug your sewing machine from the power outlet before performing any maintenance or part replacement.
- Handle small parts with care to avoid injury or loss.
- Keep replacement parts and tools out of reach of children.

Installation Guide

Follow these steps to correctly install your new KASINGS Bobbin Cover Slide Plate:

Step 1: Prepare Your Sewing Machine

Turn off and unplug your Singer sewing machine from the power outlet. Raise the needle to its highest position to provide clear access to the bobbin area.

Step 2: Remove the Old Bobbin Cover Slide Plate

Locate the existing bobbin cover slide plate on your sewing machine. Gently slide the plate towards you or lift it to remove it. If it is stuck, apply gentle, even pressure. Inspect the area for any debris or lint and clean thoroughly.



Figure 1: The bobbin area of a Singer sewing machine with the old bobbin cover slide plate removed, showing the bobbin case and feed dogs. Ensure the area is clean before installing the new plate.

Step 3: Install the New Bobbin Cover Slide Plate

Align the new KASINGS Bobbin Cover Slide Plate with the opening over the bobbin area. Gently slide it into place until it sits flush and securely. Ensure it moves smoothly along its track.



Figure 2: The new KASINGS bobbin cover slide plate correctly installed, covering the bobbin area. The plate should sit flush with the sewing machine's surface.

Step 4: Test the Installation

Plug in your sewing machine and turn it on. Perform a few test stitches on a scrap piece of fabric to ensure the bobbin cover slide plate does not interfere with the machine's operation and that the fabric glides smoothly.

Operation

The bobbin cover slide plate serves a crucial role in your sewing machine by protecting the bobbin and bobbin case from dust, lint, and accidental interference. It also provides a smooth, flat surface for fabric to glide over during the sewing process. Once correctly installed, it operates as an integral part of your sewing machine's bobbin system, requiring no further user interaction during normal sewing.

Maintenance

To ensure the longevity and smooth operation of your sewing machine and the bobbin cover slide plate, regular maintenance is recommended:

- Regularly remove the bobbin cover slide plate to clean the bobbin area. Use a small brush or a vacuum cleaner attachment to remove lint and dust buildup. This prevents thread jams and ensures smooth operation.
- Wipe the plate with a soft, dry cloth if it becomes dirty. Avoid using harsh chemicals that could damage the plastic.
- Inspect the plate periodically for any signs of wear or damage.

Troubleshooting

If you encounter any issues with your KASINGS Bobbin Cover Slide Plate, refer to the following common problems and solutions:

Issue: The plate does not slide smoothly.

Solution: Ensure there is no lint, thread, or debris obstructing the sliding mechanism or the track. Check for proper alignment of the plate within its grooves. If the issue persists, remove and re-install the plate, ensuring the track is clean.

Issue: The plate does not sit flush with the sewing machine's surface.

Solution: Verify that the plate is correctly seated in its designated grooves. Remove and re-install, ensuring no foreign objects are preventing it from sitting flat. Check for any bending or damage to the plate itself.

Specifications

Manufacturer	KASINGS
Part Number	JCEC201805120500006
Item Weight	8 ounces
ASIN	B07D1RQGPB

Warranty and Support

This KASINGS Bobbin Cover Slide Plate comes with a Fit and Function Guarantee, ensuring it will perform as expected for its intended purpose. For support, warranty inquiries, or further assistance, please contact your retailer or the manufacturer directly through their official channels.