

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [B. WEISS](#) /

› [B. WEISS Air Fryer XL Extreme Model User Manual](#)

B. WEISS Extreme Model

B. WEISS Air Fryer XL Extreme Model User Manual

Model: Extreme Model | Brand: B. WEISS

INTRODUCTION

Welcome to the B. WEISS Air Fryer XL Extreme Model. This appliance offers a healthier alternative to traditional deep frying, allowing you to enjoy your favorite fried, grilled, baked, and roasted foods with significantly less oil. Its rapid air technology ensures efficient and even cooking, making meal preparation simpler and faster.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance and retain them for future reference. Always follow basic safety precautions when using electrical appliances.

- Do not immerse the main unit, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Keep the appliance and its cord out of reach of children.
- Do not block any air vents. Ensure proper ventilation around the appliance during use.
- Do not operate the appliance if the plug, main cord, or the appliance itself is damaged.
- Always unplug the appliance after use and before cleaning.
- Do not place the appliance against a wall or other appliances. Leave at least 10 cm (4 inches) free space on the back and sides and 10 cm (4 inches) free space above the appliance.
- Do not place anything on top of the appliance.
- Use only original accessories provided by the manufacturer.
- Exercise extreme caution when removing the hot basket and disposing of hot grease.

PRODUCT OVERVIEW

The B. WEISS Air Fryer XL features a generous 5.2 Liters capacity, ideal for family-sized meals. It comes with several useful accessories to enhance your cooking experience.

Components and Accessories

- Air Fryer Unit (main body with digital display and control knob)
- Cooking Basket (non-stick, detachable)

- Pizza Pan
- Toaster Rack
- Cooking Divider



The B. WEISS Air Fryer XL Extreme Model, showcasing its sleek black design and digital display.

Accessories included



Food Divider

Cook up to 2 different foods at the same time



Pizza Pan

Make pizza, cookies and pies



Grill Rack

Skewers your favorite food with ease on the durable stainless steel racks



B. WEISS™

Included accessories: Food Divider, Pizza Pan, and Grill Rack, designed to expand cooking versatility.

SETUP

1. Unpack all components and accessories from the packaging.
2. Remove any packaging materials, stickers, or labels from the appliance.
3. Clean the cooking basket, pizza pan, toaster rack, and cooking divider with warm soapy water. Rinse thoroughly and dry completely.
4. Wipe the exterior of the air fryer unit with a damp cloth.
5. Place the air fryer on a stable, heat-resistant surface, ensuring adequate ventilation around the unit.
6. Insert the clean cooking basket into the main unit until it clicks securely into place.
7. Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Basic Operation

1. Place ingredients into the cooking basket. For optimal results and even cooking, do not overfill the basket.
2. Slide the cooking basket back into the air fryer unit until it clicks into place. The appliance will not operate if the basket is not properly inserted.
3. Turn on the appliance using the power button on the digital display.
4. Use the digital touch screen and control knob to set the desired temperature (ranging from 180°F to 400°F) and cooking time (from 1 to 60 minutes). You can also select from pre-programmed settings for common food options.
5. Press the start button to begin cooking.
6. Some recipes may require shaking or flipping ingredients halfway through cooking to ensure even crisping.
7. Once cooking is complete, the timer will alert you. Carefully remove the basket using the handle and transfer the cooked food to a serving dish.

Healthier Cooking

Up to 80% Less fat.
Same dish, lesser Calories

The image is a side-by-side comparison of two cooking methods for fried chicken. On the left, a black B. WEISS Air Fryer is shown with its basket open, containing golden-brown fried chicken. A green callout bubble above the basket indicates '280 calories fried chicken'. The air fryer's digital control panel is visible, showing a temperature of 360°F and a timer of 15 minutes. On the right, a deep fryer is shown with a basket of fried chicken being lifted from a tray of bubbling oil. A red callout bubble above the basket indicates '549 calories'. The B. WEISS logo is visible on the top left of the air fryer. At the bottom of the image, the text 'B. WEISS™ Air Fryer' is on the left and 'Deep Fryer' is on the right.

280 calories
fried chicken

549 calories

B. WEISS™ Air Fryer

Deep Fryer

The user-friendly digital control panel of the B. WEISS Air Fryer, allowing for easy selection of presets.



SMART TOUCH SCREEN & 7 COOKING PRESETS

PUSH BUTTON ALLOW YOU SET
YOUR OWN TEMP & TIME

- ROTATE TO ADJUST TEMP&TIME AND PUSH TO START •



180°F - 400°F



0 MIN - 60 MIN



PUSH

Detailed view of the smart touch screen and control knob, illustrating how to adjust temperature and time manually or select from 7 cooking presets.


COOKING GUIDE AND RECIPES

The B. WEISS Air Fryer XL uses rapid air technology for healthier cooking with up to 80% less fat compared to traditional deep frying methods. This allows you to enjoy crispy, delicious results with significantly reduced oil.

Easy Cleanup

Nonstick, detachable, and dishwasher-safe baskets make tidying up quick and easy.

Detachable & Nonstick

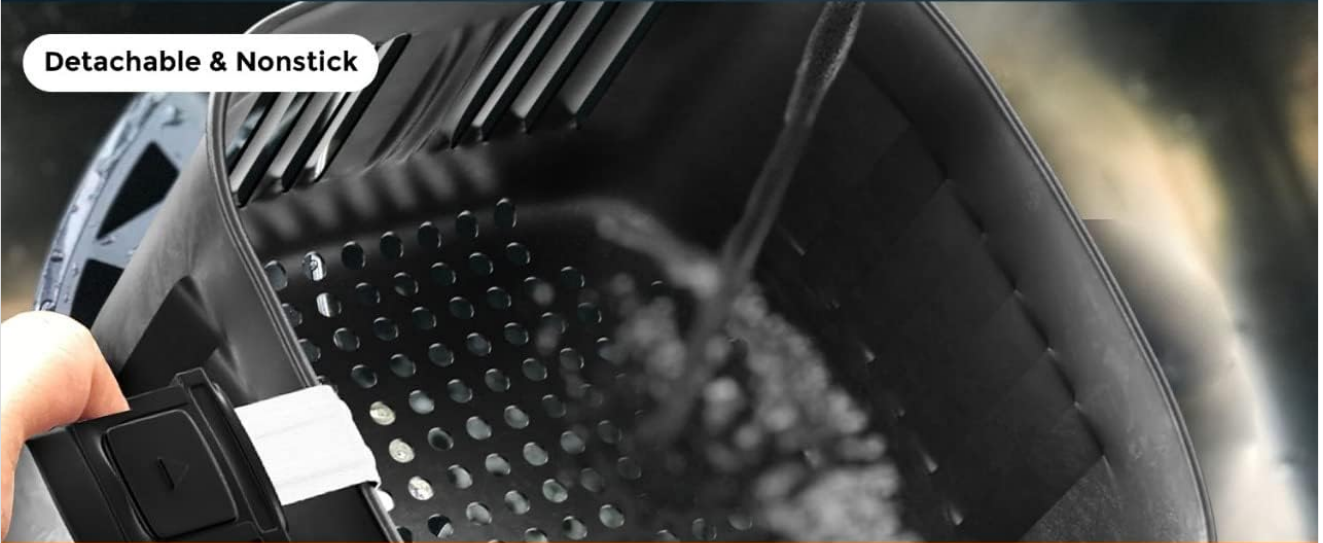

Dishwasher-Safe



Comparison illustrating healthier cooking with the B. WEISS Air Fryer, showing significantly fewer calories than deep-fried alternatives.

A comprehensive cookbook with 50 recipes is included to help you explore various dishes, from classic French fries and fried chicken to exotic recipes and desserts. This cookbook provides detailed instructions and cooking times to guide your culinary adventures.



The included B. WEISS Air Fryer Cookbook, featuring 50 recipes for daily use.

To remove the basket and access your cooked food, follow these simple steps:



Instructions on how to safely remove the air fryer basket: push button cover, press release button, lift the basket, and enjoy your food.

CLEANING AND MAINTENANCE

The non-stick inner surface of the cooking basket and other accessories are designed for easy cleaning, ensuring a hassle-free experience after cooking.

- Unplug the air fryer and allow it to cool completely before cleaning.
- The cooking basket and tray are dishwasher safe for your convenience.
- For manual cleaning, wash the pot and tray with warm soapy water and a soft wet cloth or non-abrasive sponge.
- Wipe the exterior of the unit with a damp cloth. Do not immerse the main unit in water.
- Ensure all parts are completely dry before reassembling and storing the air fryer.

User Friendly

Choose the desired preset and let the fryer do the rest.



Easy cleanup features: detachable and non-stick baskets, shown being rinsed and placed in a dishwasher.

TROUBLESHOOTING

Common Issues

- **Plastic Smell During Initial Use:** A slight plastic smell may occur during the first few uses. This is normal and will dissipate after a couple of uses. Ensure good ventilation during initial operation.
- **Food Not Crispy:** Ensure the basket is not overcrowded. Cook in smaller batches if necessary. Lightly baste food with olive oil for enhanced crispiness.
- **Uneven Cooking:** Shake or flip ingredients halfway through the cooking cycle.
- **Appliance Not Turning On:** Check if the power cord is securely plugged into a grounded outlet. Ensure the cooking basket is fully inserted into the unit.

SPECIFICATIONS

Feature	Detail
Special Feature	Temperature Control, Timer
Color	Black
Capacity	5.2 Liters
Material	Plastic
Recommended Uses For Product	Roast, Bake
Output Wattage	1800 Watts
Brand	B. WEISS
Wattage	1800 watts
Voltage	120 Volts
Control Method	Touch
Model Name	Extreme Model
Has Nonstick Coating	Yes
Inner Material	Metal
Outer Material	Plastic
Is Dishwasher Safe	Yes
Manufacturer	B. WEISS products
Package Dimensions	16.6 x 14.4 x 14.2 inches
Item Weight	15.02 pounds
ASIN	B07D2482W5
Date First Available	May 13, 2018

WARRANTY AND CUSTOMER SUPPORT

B. WEISS provides a continuance warranty on this product to ensure your satisfaction. For any concerns, questions, or assistance with your Air Fryer XL Extreme Model, please do not hesitate to contact our dedicated world-class customer service team. We are committed to providing prompt and helpful support to address any inquiries you may have.