

Nintendo Nintendo Classic Mini Family Computer Jump 50th Anniversary Edition

Nintendo Classic Mini Family Computer Jump 50th Anniversary Edition

Instruction Manual

1. INTRODUCTION

Thank you for purchasing the Nintendo Classic Mini Family Computer Jump 50th Anniversary Edition. This compact console allows you to enjoy a curated selection of classic games from the Famicom era, celebrating the 50th anniversary of Jump magazine. Please read this manual thoroughly before use to ensure proper setup and operation.

2. SAFETY INFORMATION

- **Power Source:** Use only the specified power adapter (not included) or a compatible USB power source (5V/1.0A).
- **Placement:** Place the console on a stable, flat surface. Avoid extreme temperatures, direct sunlight, and high humidity.
- **Ventilation:** Do not block ventilation openings. Ensure adequate airflow around the console to prevent overheating.
- **Liquid Exposure:** Keep the console and accessories away from liquids.
- **Cleaning:** Use a soft, dry cloth for cleaning. Do not use liquid cleaners or solvents.
- **Children:** This product contains small parts and is not suitable for children under 3 years old. Adult supervision is recommended during use.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Nintendo Classic Mini Family Computer Jump 50th Anniversary Edition Console
- Two (2) Wired Controllers
- HDMI Cable

- USB Power Cable (AC adapter not included)
- Instruction Manual (this document)

4. SETUP

Follow these steps to set up your Nintendo Classic Mini Family Computer:

1. **Connect to TV:** Connect one end of the included HDMI cable to the HDMI OUT port on the console and the other end to an HDMI input port on your television.
2. **Connect Controllers:** Plug the controller cables into the controller ports on the front of the console. Controller I is for player 1, and Controller II is for player 2.
3. **Connect Power:** Connect the USB power cable to the console's USB port. Plug the other end into a compatible USB AC adapter (5V/1.0A, sold separately) or a USB port on your TV that provides sufficient power.
4. **Power On:** Turn on your television and select the correct HDMI input. Press the POWER button on the console to turn it on. The console's main menu should appear on your screen.



Figure 1: Console with controllers connected.

5. OPERATING INSTRUCTIONS

5.1 Navigating the Menu

Use the D-Pad on Controller I to navigate through the game selection menu. Press the A button to select a game.

ニンテンドークラシックミニ
FAMILY COMPUTER™
ファミリーコンピュータ™
週刊少年ジャンプ創刊50周年記念バージョン



Figure 2: Front view of the console.

5.2 Starting a Game

From the game selection menu, highlight the desired game and press the A button to start. The game will load automatically.

5.3 Saving and Loading Game Progress

To save your game progress, press the RESET button on the console during gameplay. This will return you to the main menu and create a suspend point for the game you were playing. To resume, select the game from the menu and choose to load the suspend point.

5.4 Resetting the Console

Press the RESET button on the console to return to the main game selection menu at any time during gameplay.

5.5 Powering Off

To turn off the console, press the POWER button. It is recommended to save your game progress before powering off.

6. MAINTENANCE

- **Cleaning:** Wipe the console and controllers with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the console in a clean, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid bending or twisting cables excessively. Disconnect cables by pulling the plug, not the cord.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected properly; faulty power adapter; insufficient USB power.	Ensure USB power cable is securely connected. Try a different USB AC adapter (5V/1.0A) or a different USB port.

Problem	Possible Cause	Solution
No video/audio on TV	HDMI cable not connected properly; incorrect TV input selected.	Check HDMI cable connections. Ensure your TV is set to the correct HDMI input. Try a different HDMI cable or TV port.
Controller not responding	Controller cable not connected properly; faulty controller.	Ensure controller cable is securely plugged into the console. Try the other controller to see if it works.
Game freezes or crashes	Temporary software glitch.	Press the RESET button on the console to return to the main menu. If the issue persists, power off and restart the console.

8. SPECIFICATIONS

- **Model:** Nintendo Classic Mini Family Computer Jump 50th Anniversary Edition
- **ASIN:** B07D2HMM6Q
- **Package Dimensions:** 10.16 x 7.17 x 1.85 inches
- **Item Weight:** 1.1 pounds
- **Power Requirement:** 1 Lithium Ion battery (internal, for clock/memory) and external USB power (5V/1.0A)
- **Video Output:** HDMI
- **Date First Available:** May 14, 2018

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the official Nintendo website or contact Nintendo customer support in your region. Keep your proof of purchase for warranty claims.