



Manuals.plus /

› TechniSat /

› TechniSat Digitradio 1 BR Home Edition Portable DAB+ FM Radio User Manual

TechniSat 0025/4997

TechniSat Digitradio 1 BR Home Edition Portable DAB+ FM Radio User Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your TechniSat Digitradio 1 BR Home Edition portable radio. This device offers high-quality digital radio reception via DAB+ and traditional FM radio, along with a powerful, interchangeable battery for portable use. Please read these instructions carefully before using the device.



Figure 1: Front view of the TechniSat Digitradio 1 BR Home Edition, showing the display, control knob, and speaker grille.

SETUP

1. Power Supply

- **Battery Installation/Charging:** The Digitradio 1 includes a powerful, interchangeable Lithium-ion battery. Before first use, fully charge the battery using the provided AC adapter and USB cable. Connect the USB cable to the radio's DC IN 5V port and the AC adapter to a power outlet. The charging indicator on the display will show the charging status.
- **AC Operation:** The radio can also be operated directly from the mains power using the supplied AC adapter, even without the battery installed or while the battery is charging.

2. Antenna

- For optimal reception, fully extend the telescopic antenna located on the top of the device. Adjust its position for the best signal quality.

3. Initial Scan

- Upon first power-on, the radio will automatically perform a scan for available DAB+ and FM stations. This process may take a few minutes. Once complete, the radio will tune to the first available station.

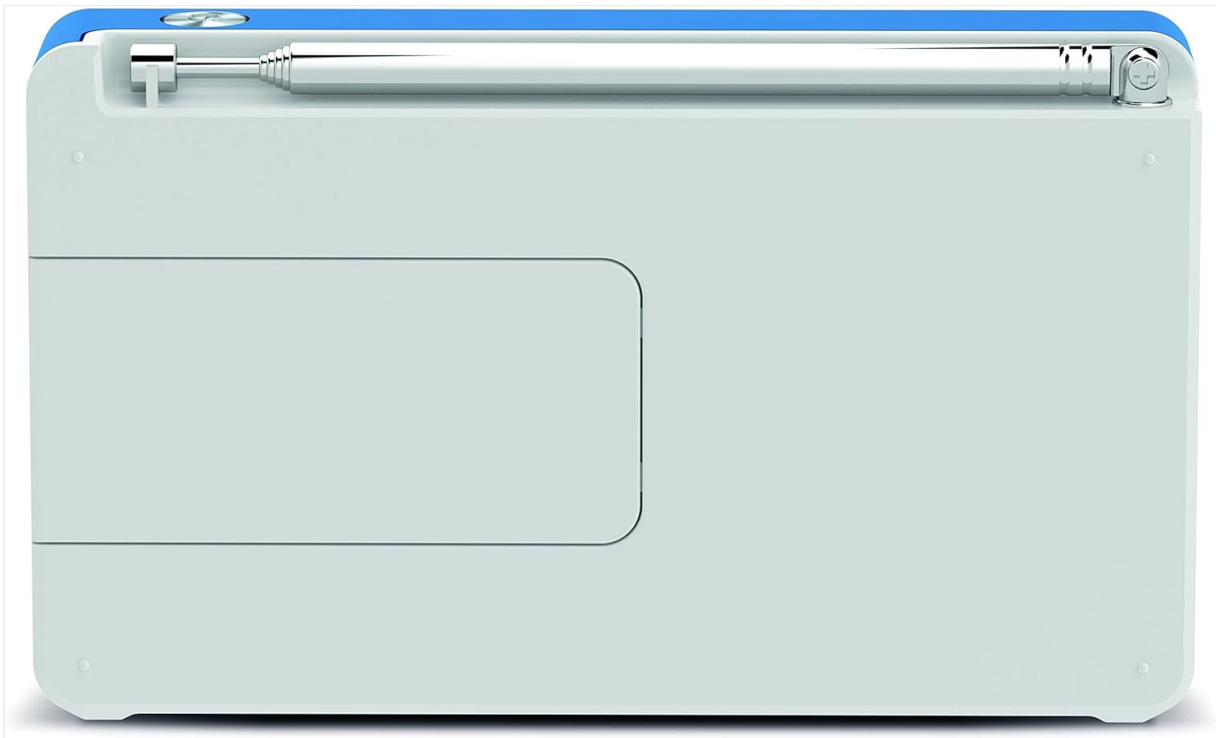


Figure 2: Back view of the TechniSat Digitradio 1 BR Home Edition, highlighting the DC IN 5V port and headphone jack.

OPERATING INSTRUCTIONS



Figure 3: Angled view of the TechniSat Digitradio 1 BR Home Edition, illustrating the control panel with menu, DAB/FM, favorite, and navigation buttons.

1. Power On/Off

- Press the **Power** button (usually integrated with the volume knob) to turn the radio on or off.

2. Mode Selection (DAB+/FM)

- Press the **DAB/FM** button to switch between DAB+ digital radio and FM analog radio modes.

3. Station Tuning

- **DAB+ Mode:** Use the navigation buttons (left/right arrows on the control knob) to browse through available DAB+ stations. Press **OK** to select a station.
- **FM Mode:** Use the navigation buttons (left/right arrows) to manually tune to frequencies. A long press on the left/right arrows will initiate an automatic scan to the next available station.

4. Favorite Stations

- **Saving Favorites:** While listening to a station, press and hold the **FAV** button. Use the navigation buttons to select a preset number (1-20) and press **OK** to save.
- **Recalling Favorites:** Briefly press the **FAV** button. Use the navigation buttons to select your desired preset and press **OK**.
- **BR Heimat Direct Selection:** The BR Home Edition features a dedicated direct selection button for BR Heimat via DAB+. Press this button for instant access.

5. Volume Control

- Rotate the main control knob to adjust the volume level.

6. Display Information

- The OLED display shows station name, program information, time, and battery status. Use the **MENU** button to access additional settings and display options.

MAINTENANCE

1. Cleaning

- Wipe the radio with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the surface.

2. Battery Care

- To prolong battery life, avoid fully discharging the battery frequently. Recharge the battery when the low battery indicator appears.
- If storing the radio for an extended period, ensure the battery is partially charged (around 50%) and store in a cool, dry place.

TROUBLESHOOTING

1. No Power

- Ensure the AC adapter is securely connected to both the radio and a working power outlet.
- If operating on battery, check if the battery is charged. Recharge if necessary.

2. No Signal/Poor Reception

- Fully extend and adjust the telescopic antenna.
- Move the radio to a different location, away from potential interference sources (e.g., other electronic devices, thick walls).
- Perform a full station scan in DAB+ mode to update the station list.

3. No Sound

- Check the volume level and increase if necessary.
- Ensure no headphones are connected to the headphone jack, or if they are, check their connection and functionality.

SPECIFICATIONS

Technical Data

Model Number	0025/4997
Tuning Technology	DAB+/FM (with RDS and PLL)
Display Type	OLED
Power Source	AC Adapter / Battery
Battery Type	1 Lithium-ion (included)
Battery Life	Up to 10 hours (mobile radio playback)
Max Product Power	1 Watt (RMS)
Connectivity Technology	Auxiliary (Headphone Jack)
Product Dimensions (L x W x H)	15.5L x 3.1W x 9.1H centimeters
Material	Plastic
Water Resistance Level	Not waterproof



Figure 4: TechniSat Digitradio 1 BR Home Edition showing its dimensions: 15.5 cm length, 3.1 cm width, and 9.1 cm height.

WARRANTY AND SUPPORT

Warranty Information

Specific warranty details for the TechniSat Digitradio 1 BR Home Edition are typically provided with the product packaging or can be found on the manufacturer's official website. Please refer to these sources for comprehensive warranty terms and conditions.

Customer Support

For further assistance, technical support, or service inquiries, please visit the official TechniSat website or contact their customer service department. Contact information can usually be found on the TechniSat website or in the product's original documentation.