

manuals.plus /

- › [Arteck](#) /
- › [Arteck 2.4G Wireless Keyboard User Manual](#)

Arteck

Arteck 2.4G Wireless Keyboard

USER MANUAL

Model: HW192

1. Introduction

Thank you for choosing the Arteck 2.4G Wireless Keyboard. This ultra-slim, full-size keyboard with a numeric keypad is designed for comfortable and quiet typing, offering seamless connectivity and a long-lasting rechargeable battery. This manual provides detailed instructions to help you set up, operate, and maintain your new keyboard.



Figure 1: Arteck 2.4G Wireless Keyboard and USB receiver.

2. Package Contents

- Arteck Stainless 2.4G Wireless Keyboard
- Nano USB Receiver
- USB Charging Cable
- Welcome Guide

3. Setup Instructions

1. **Charge the Keyboard:** Before first use, connect the keyboard to a USB power source using the provided USB charging cable. The charging indicator light will illuminate. Once fully charged, the light will change or turn off.
2. **Insert USB Receiver:** Locate the nano USB receiver. Insert the receiver into an available USB port on your computer, desktop, PC, laptop, Surface, or Smart TV.
3. **Power On:** Locate the ON/OFF switch on the keyboard, typically on the top right edge. Slide the switch to the 'ON' position.
4. **Automatic Connection:** The keyboard should automatically connect to your device within a few seconds. No additional drivers are usually required.

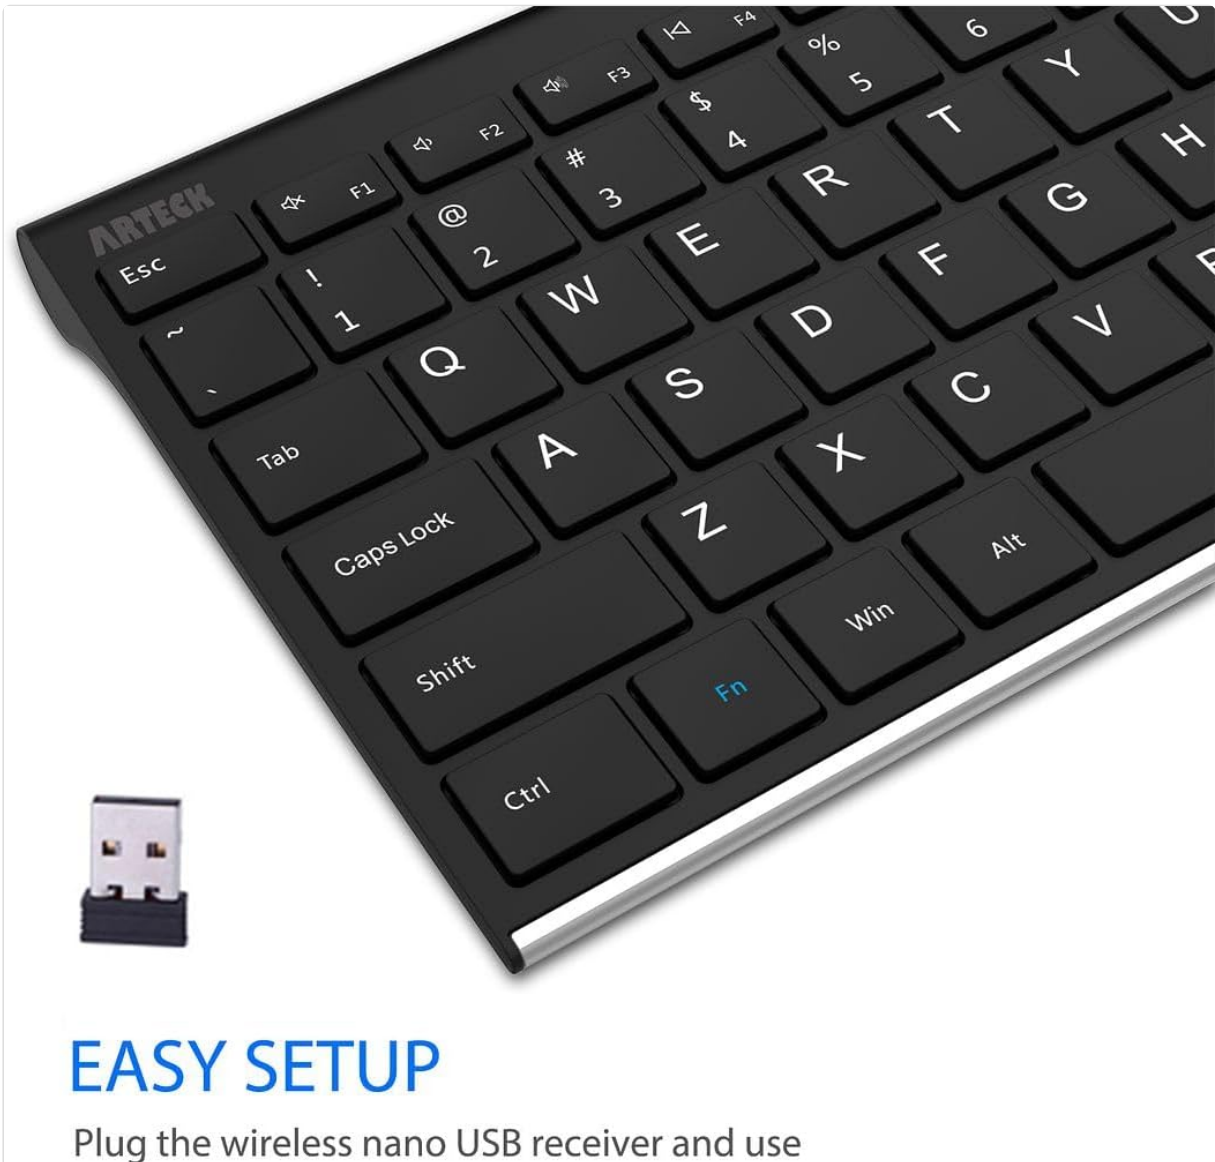


Figure 2: Easy setup by plugging in the nano USB receiver.

4. Operating Instructions

The Artech 2.4G Wireless Keyboard offers a comfortable and efficient typing experience with its low-profile keys and full-size layout.

- **Typing:** The keyboard features a standard QWERTY layout with full-size keys, arrow keys, and a dedicated numeric keypad for comfortable and accurate typing.
- **Function Keys:** Utilize the function keys (F1-F12) for various shortcuts. Some keys may require

pressing the 'Fn' key simultaneously for their secondary function (e.g., media controls, volume adjustment).

- **Quiet Keystrokes:** The X-structure design of the keys ensures equal pressure distribution and lower keystrokes, resulting in a quiet and comfortable typing experience.



COMFORTABLE KEYSTROKES

X structure, exert equal pressure and lower keystrokes in comparison with the clickety keyboard.

Figure 3: Comfortable keystrokes with X-structure design.



Figure 4: Keyboard in a typical desktop setup.

5. Battery and Charging

The Artek keyboard is equipped with a built-in rechargeable lithium battery, offering extended usage on a single charge.

- **Battery Life:** A single charge can last for approximately 6 months, based on 2 hours of non-stop use per day.
- **Charging:** When the battery is low, connect the keyboard to a USB power source using the provided USB charging cable. The charging indicator will show the charging status.
- **Power Saving:** To conserve battery life, you can switch the keyboard to the 'OFF' position when not in use for extended periods.

Long Battery Life

Use for 6 months per charge, based on 2 hours per day



Figure 5: The keyboard offers long battery life.

6. Maintenance

To ensure the longevity and optimal performance of your Artek Wireless Keyboard, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to wipe the surface of the keyboard. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid excessive moisture.
- **Avoid Liquids:** Do not spill liquids directly onto the keyboard. In case of accidental spills, immediately power off the keyboard and disconnect it from any power source. Allow it to dry completely before attempting to use it again.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handle with Care:** While the stainless steel material provides durability, avoid dropping the keyboard or subjecting it to strong impacts.

7. Troubleshooting

If you encounter issues with your Artek Wireless Keyboard, please refer to the following common solutions:

Problem	Possible Cause	Solution
Keyboard not responding / No connection	Low battery; USB receiver not properly inserted; Receiver interference; Keyboard not powered on.	Ensure keyboard is charged and powered on. Re-insert the USB receiver firmly into a different USB port. Move the keyboard closer to the receiver. Avoid placing the receiver near other wireless devices.

Problem	Possible Cause	Solution
Keys are unresponsive or typing intermittently	Low battery; Software issue; Physical obstruction under key.	Charge the keyboard fully. Restart your computer. Gently clean around the affected keys to remove any debris.
Short battery life	Frequent usage; Keyboard left on when not in use.	Ensure the keyboard is fully charged. Turn off the keyboard when not in use for extended periods.

8. Specifications

Feature	Detail
Product Dimensions	16.9"L x 4.9"W x 0.6"H (43 cm x 12.5 cm x 1.5 cm)
Item Weight	14.9 oz (422 g)
Model Number	HW192
Batteries	1 Lithium Ion battery (included)
Material	Stainless Steel
Connectivity Technology	USB Wireless (2.4G)
Keyboard Description	Wireless, Ergonomic, Full Size with Numeric Keypad
Compatible Devices	Computer, Desktop, PC, Laptop, Surface, Smart TV (Windows 10/8/7)
Number of Keys	113



Figure 6: Keyboard dimensions and weight.

9. Warranty and Support

Arteck provides a **24-month warranty** for this product, ensuring peace of mind and reliable performance. In case of any issues or questions, please contact Arteck customer service for friendly and prompt assistance. Refer to the contact information provided in your welcome guide or visit the official Arteck website for support details.