

[Manuals.plus](#) /

› [GE](#) /

› GE JES1072DMWW 0.7 Cu. Ft. 700W Countertop Microwave Oven User Manual

GE JES1072DMWW

GE JES1072DMWW 0.7 Cu. Ft. 700W Countertop Microwave Oven User Manual

Model: JES1072DMWW

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new GE 0.7 Cu. Ft. 700W Countertop Microwave Oven. Please read all instructions thoroughly before use and retain this manual for future reference.



Image: Front view of the GE 0.7 Cu. Ft. 700W Countertop Microwave Oven, white finish, on a kitchen counter.

2. IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not allow children to use the microwave without close supervision.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Do not operate the microwave if the door or door seals are damaged.
- Ensure proper ventilation around the appliance.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, visit www.P65Warnings.ca.gov.

Child Lock Feature

The microwave is equipped with a two-step child lock safety feature. To activate or deactivate, refer to the operating instructions for your specific model. This feature helps prevent unintended operation by children.



Image: A graphic highlighting the Child Lock Technology feature on a microwave control panel.

3. PRODUCT FEATURES

The GE JES1072DMWW microwave oven is designed for convenience and efficiency in compact spaces. Key features include:

- **Compact Design:** 0.7 cubic feet capacity, ideal for countertops, dorm rooms, or small apartments.
- **700 Watts Power:** Provides effective cooking and reheating.
- **Glass Turntable:** Rotates for even cooking results.
- **Convenience Cooking Controls:** One-touch operation for popular foods like popcorn, beverages, and potatoes.
- **Defrost Controls:** Easy auto or manual defrosting by weight or time.
- **Instant On:** Express cooking controls for quick starts.
- **Electronic Keypad:** User-friendly interface for setting time and functions.
- **Child Lock:** Safety feature to prevent accidental use.

4. SETUP

Follow these steps to set up your microwave oven:

1. **Unpack:** Carefully remove all packaging materials and accessories. Check for any damage.
2. **Placement:** Place the microwave on a flat, stable surface that is strong enough to hold its weight. Ensure there is adequate space around the unit for ventilation (at least 3 inches on sides and back, 12 inches above). Do not block air vents.
3. **Power Connection:** Plug the microwave into a grounded 120V, 60Hz electrical outlet. The power cord is approximately 39 inches long.
4. **Turntable Installation:** Place the turntable ring in the center of the microwave cavity, then place the glass turntable plate securely on top of the ring.

Save Space

17-5/16" W

10-3/16" H

12-3/4" D

Image: A diagram illustrating the external dimensions of the microwave: 17-5/16" W x 10-3/16" H x 12-3/4" D.

5. OPERATING INSTRUCTIONS

Your microwave oven features an intuitive control panel for various cooking needs.



Image: A detailed view of the microwave's electronic keypad and display, showing various cooking and function buttons.

Basic Operation

1. **Setting the Clock:** Press the 'Clock' button. Use the number pad to enter the current time. Press 'Clock' again to confirm.
2. **Express Cook:** For quick cooking, press any number from 1 to 6 for 1 to 6 minutes of cooking time at 100% power. For example, press '1' for 1 minute.
3. **Manual Cooking:** Press 'Time Cook'. Enter the desired cooking time using the number pad. Press 'Power Level' and select a power level (1-10, 10 being 100%). Press 'Start/Pause'.
4. **Add 30 Seconds:** Press the 'Add 30 Sec' button to instantly start cooking for 30 seconds at 100% power, or to add 30 seconds to an ongoing cooking cycle.

Pre-set Functions (Sensor Cooking)

The microwave includes one-touch buttons for common food items:

- **Popcorn:** Press 'Popcorn'. The microwave will automatically set the optimal cooking time.
- **Beverage:** Press 'Beverage'. Ideal for heating drinks.

- **Potato:** Press 'Potato'. Suitable for cooking potatoes.
- **Reheat:** Press 'Reheat' to warm up leftovers.

Defrosting

- **Auto Defrost:** Press 'Auto Defrost'. Enter the weight of the food using the number pad. The microwave will calculate the defrosting time.
- **Time Defrost:** Press 'Time Defrost'. Enter the desired defrosting time using the number pad.

Video Demonstration: Convenience Cooking

Your browser does not support the video tag.

Video: This video demonstrates the convenience cooking controls of the GE 0.7 Cu. Ft. Capacity Countertop Microwave Oven, showing how to use Express Cook and pre-set functions for items like popcorn.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Interior Cleaning:** Wipe the interior with a damp cloth after each use. For stubborn stains, use a mild detergent or a microwave-safe cleaner. Do not use abrasive cleaners or scouring pads.
- **Exterior Cleaning:** Clean the exterior surfaces with a soft, damp cloth. Avoid spraying cleaners directly onto the control panel.
- **Glass Turntable:** The glass turntable and turntable ring can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the microwave.

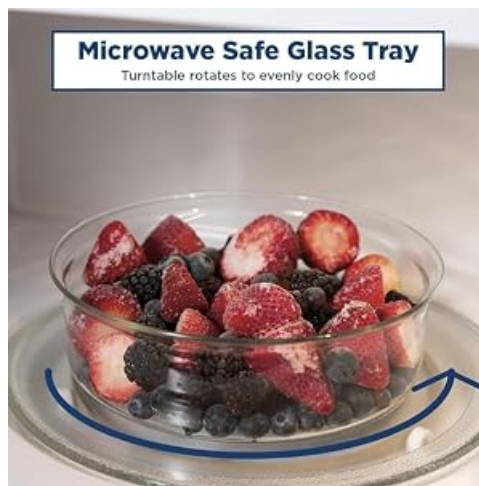


Image: A close-up of the removable glass turntable inside the microwave, shown with frozen berries, highlighting its rotating function for even cooking.

7. TROUBLESHOOTING

If you encounter issues with your microwave, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Microwave does not start	Door not closed properly; Power cord unplugged; Blown fuse/tripped circuit breaker.	Ensure door is securely closed; Check power cord connection; Check household fuse/circuit breaker.

Problem	Possible Cause	Solution
Food not heating evenly	Food not stirred/rotated; Turntable not rotating.	Stir or rearrange food during cooking; Ensure turntable and ring are correctly placed and free of obstructions.
Unusual noises during operation	Turntable/ring not correctly positioned; Foreign object in cavity.	Re-position turntable and ring; Inspect cavity for any foreign objects.

8. SPECIFICATIONS

Specification	Detail
Brand	GE
Model Name	JES1072DMWW
Capacity	0.7 Cubic Feet
Wattage	700 Watts
Product Dimensions (D x W x H)	0.04"D x 0.03"W x 0.04"H (Note: These dimensions appear to be placeholders or incorrect in the source data. Please refer to the product diagram for accurate measurements.)
Color	White
Material	Glass (turntable)
Number of Power Levels	10
Voltage	120 Volts
Frequency	60 Hz
Item Weight	21 Pounds
UPC	084691829812

9. WARRANTY AND SUPPORT

This GE microwave oven comes with a Limited 1-year warranty. For detailed warranty information, service, or support, please refer to the warranty card included with your product or visit the official GE Appliances website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07D375YPT>

More documents and user manuals: <https://manuals.plus/>