



[Manuals.plus](#) /

› [Outsunny](#) /

› Outsunny 11' x 11' Pop Up Canopy Gazebo with Removable Netting (Model 840-166)

## Outsunny 840-166

# Outsunny 11' x 11' Pop Up Canopy Gazebo with Removable Netting (Model 840-166)

## INTRODUCTION

---

This manual provides comprehensive instructions for the assembly, operation, maintenance, and troubleshooting of your Outsunny 11' x 11' Pop Up Canopy Gazebo. Please read this guide thoroughly before setup and retain it for future reference. This gazebo is designed to provide temporary shade and shelter for outdoor activities.



The Outsunny 11' x 11' Pop Up Canopy Gazebo with its khaki canopy and brown mesh sidewalls, providing shade over an outdoor seating area.

## SAFETY INFORMATION

---

Adhere to the following safety guidelines to ensure safe use and prevent damage to the product or injury.


- **Weather Conditions:** This product is not designed to withstand adverse or inclement weather conditions, including heavy rain, snow, sleet, hail, or strong winds. Disassemble and store the gazebo during such conditions to prevent structural damage or collapse.
- **California Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.
- **Assembly:** Assembly typically requires multiple individuals. Do not attempt to set up the gazebo alone.
- **Anchoring:** Always use the provided ground stakes and guy ropes to secure the gazebo firmly to the ground.
- **Clearance:** Ensure adequate clearance from heat sources, open flames, and sharp objects.

## PACKAGE CONTENTS

---

Verify that all components are present before beginning assembly:

- Pop-up frame
- Canopy top (two-tier)
- Mesh sidewalls with zipper doors (4 panels)
- Ground stakes (8 pieces)
- Pull ropes (4 pieces)
- Carry bag



A composite image detailing various components and features of the gazebo, including the roof structure, water drainage, and securing mechanisms.

## SETUP INSTRUCTIONS

---

The Outsunny Pop Up Canopy Gazebo is designed for quick and easy assembly. It is recommended that at least two to four people assist with the setup process.

Your browser does not support the video tag.

This video provides an overview of the Outsunny 11' x 11' Pop Up Canopy Gazebo, showcasing its features and ease of setup. It demonstrates the canopy's structure, mesh netting, and overall appearance in an outdoor setting.

### Step-by-Step Assembly

1. **Unpack and Position:** Remove the folded frame from the carry bag. Place the frame in the desired setup location.
2. **Partially Expand Frame:** With at least two people, grasp opposite corners of the frame and slowly pull outwards to partially expand it.
3. **Attach Canopy Top:** Drape the canopy top over the partially expanded frame. Ensure the two-tier roof is correctly oriented. Secure the canopy to the frame using any attached Velcro straps or clips.
4. **Fully Expand Frame:** Continue pulling the frame outwards until it is fully extended and the locking mechanisms engage. You may need to push up on the center hub to fully extend the roof.
5. **Adjust Height:** Locate the height adjustment buttons on each leg. Press the buttons and slide the legs to the desired height. Ensure all legs are locked at the same height for stability.
6. **Attach Mesh Sidewalls:** Attach the mesh sidewalls to the frame using the integrated zippers or Velcro fasteners. Ensure the zipper doors are accessible for entry and exit.
7. **Secure with Stakes and Ropes:** Insert the ground stakes through the footplates of each leg and into the ground. Attach the pull ropes to the canopy corners and stake them into the ground at a 45-degree angle, ensuring tension for added stability.

# POP UP DESIGN

Take out of  
a carry bag



Add  
the canopy




Open  
the frame



Add  
mesh sidewalls



A visual guide detailing the quick assembly process of the gazebo, from unpacking to attaching the mesh sidewalls.

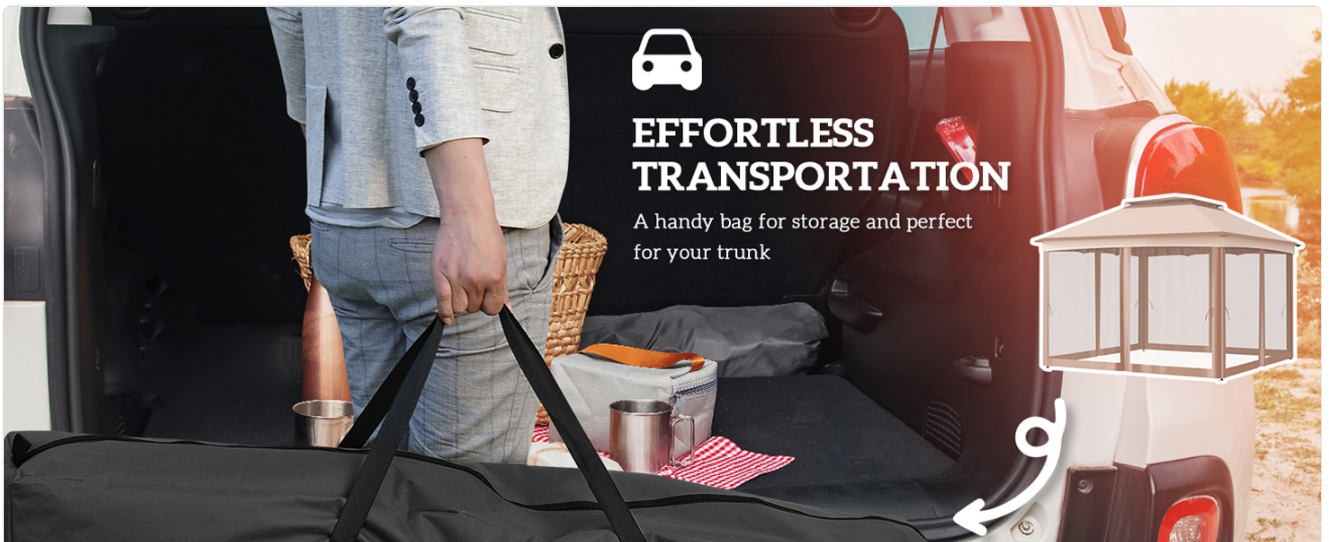

Another visual representation of the simplified assembly process, emphasizing the adjustable height feature.

## STABLE STANDING



Guy ropes

Ground stakes

Demonstrates the use of guy ropes and ground stakes to ensure the gazebo remains stable and securely anchored to the ground.

## OPERATING INSTRUCTIONS

Your Outsunny Pop Up Canopy Gazebo provides a comfortable and shaded area for various outdoor activities.

Your browser does not support the video tag.

This video highlights the Outsunny 11' x 11' Pop Up Canopy Gazebo in various outdoor environments, demonstrating its versatility and aesthetic appeal. It shows the gazebo providing shade and a comfortable space for relaxation or gatherings.

### Netting Usage

- The removable mesh sidewalls can be zipped closed to provide protection from insects while allowing airflow.
- When not needed, the mesh sidewalls can be tied back to the legs using the integrated ties for an open-air feel.
- The zipper doors allow for easy entry and exit.

## MAINTENANCE

Proper maintenance will extend the life of your gazebo.

- **Cleaning:** Clean the canopy and mesh sidewalls with a mild soap solution and a soft cloth. Rinse thoroughly with water and allow to air dry completely before storage. Do not use harsh chemicals or abrasive cleaners.
- **Frame Care:** Inspect the metal frame periodically for any signs of rust or damage. Clean any dirt or debris from the frame.
- **Storage:** When not in use, especially during off-seasons or adverse weather, disassemble the gazebo and store it in its carry bag in a dry, protected area.
- **Water Drainage:** The vented roof design includes drainage holes to prevent water buildup. Regularly check these holes to ensure they are clear of debris.



This image highlights the two-tier vented roof design, which allows air and heat to escape, and shows a drainage hole to prevent water accumulation.

## TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Gazebo is unstable or wobbly.	Not properly anchored; uneven ground; legs not locked at same height.	Ensure all ground stakes and guy ropes are securely fastened. Set up on level ground. Verify all leg height adjustments are locked evenly.
Water pooling on canopy.	Drainage holes blocked; canopy not taut.	Clear any debris from drainage holes. Ensure canopy is stretched tightly over the frame. Do not leave up in heavy rain.
Difficulty expanding/collapsing frame.	Frame joints are stiff; not enough people assisting.	Apply a silicone-based lubricant to moving parts if necessary. Ensure at least two to four people are assisting with the process.
Mesh sidewalls do not close properly.	Zippers are stuck or damaged; sidewalls not aligned.	Check zippers for obstructions. Ensure sidewalls are correctly attached and aligned with the frame.

## PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Outsunny
Model Number	840-166
Material	Metal (Frame), Polyester (Canopy)
Overall Dimensions	128" L x 128" W x 106.25" H
Eaves Height	77.5" H
Folded Size	47.25" L x 7.75" W x 7.75" H
Item Weight	33 Pounds
Water Resistance Level	Water Resistant
Assembly Required	Yes
Occupancy	6 people
Color	Khaki



A clear diagram providing the overall length, width, height, and eaves height of the assembled gazebo.

## WARRANTY AND SUPPORT

For warranty information, replacement parts, or technical support, please contact the manufacturer, Aosom LLC, directly. Refer to your purchase documentation for specific contact details and warranty terms.



The gazebo folds compactly into its carry bag for effortless transportation and storage.