

ZenStyle S0051

ZenStyle Small Washing Machine Twin Tub Top Load Washer/Spinner (Model S0051) Instruction Manual

Your guide to efficient and convenient laundry.

INTRODUCTION

Thank you for choosing the ZenStyle Twin Tub Portable Washing Machine. This compact and efficient appliance is designed for small living spaces, offering a convenient solution for your laundry needs. Please read this manual thoroughly before operation to ensure safe and optimal performance.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the machine is placed on a stable, flat surface to prevent tipping.
- Do not overload the washer or spinner tubs. Refer to capacity guidelines.
- Keep children and pets away from the machine during operation.
- Ensure proper drainage to avoid water damage.
- Unplug the machine from the power outlet when not in use or before cleaning.
- Do not immerse the electrical components in water.

PACKAGE CONTENTS

- ZenStyle Twin Tub Portable Washing Machine
- Water Inlet Hose
- Drain Hose
- Instruction Manual

PRODUCT OVERVIEW

The ZenStyle S0051 features a dual-tub design for simultaneous washing and spin-drying. Its compact size makes it ideal for various environments.



Image: Front view of the ZenStyle Twin Tub Washing Machine, highlighting its compact dimensions of 14.96"D x 23.62"W x 27.17"H.



Image: Top view of the washing machine, showing the three control knobs for Wash Timer, Select Switch (Standard/Soft/Drain), and Spin Timer.

SETUP

1. **Placement:** Place the washing machine on a firm, level surface. Ensure it is close to a water source and a drain. Common locations include bathrooms, utility sinks, or shower stalls.
2. **Connect Water Inlet Hose:** Attach one end of the water inlet hose to a faucet and the other end to the 'Water Inlet' port on the top of the washing machine. Ensure connections are secure to prevent leaks.
3. **Position Drain Hose:** The built-in gravity pump requires the drain hose to be positioned lower than the machine's water level for effective drainage. Place the drain hose into a sink, bathtub, or floor drain. Ensure the hose is not kinked or obstructed.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

Easy To Operate

#1



Put in your load
of clothes

#2



Fill with water

#3



Set the timer and
start washing

Image: Visual guide demonstrating the three easy steps to operate the machine: 1) Put in your load of clothes, 2) Fill with water, 3) Set the timer and start washing.

OPERATION

Washing Cycle

1. **Load Clothes:** Open the lid of the washer tub (left side). Place your clothes loosely into the tub. Do not exceed the 8-pound wash capacity.
2. **Add Water:** Fill the washer tub with water to the desired level. You can use the water inlet hose or manually fill it.
3. **Add Detergent:** Add the appropriate amount of laundry detergent.
4. **Set Wash Timer:** Turn the 'Wash Timer' knob to select the desired wash time (up to 15 minutes).
5. **Select Wash Mode:** Turn the 'Select Switch' knob to 'Standard' for regular clothes or 'Soft' for delicate items.
6. **Start Washing:** The machine will begin agitating. Close the lid during operation.

Draining Water

After the wash cycle is complete, turn the 'Select Switch' knob to 'Drain'. The machine will automatically drain the water through the drain hose. Ensure the drain hose is positioned correctly for gravity drainage.

Spin Drying Cycle

1. **Transfer Clothes:** Carefully transfer the washed clothes from the washer tub to the spin dryer tub (right side). Do not exceed the 5-pound spin capacity. Distribute clothes evenly to prevent imbalance.
2. **Secure Spin Lid:** Place the spin cap/lid over the clothes in the spin tub and close the main lid.
3. **Set Spin Timer:** Turn the 'Spin Timer' knob to select the desired spin time (up to 5 minutes).
4. **Start Spin Drying:** The spin dryer will begin. The spin cycle removes excess water, making clothes damp, not fully dry. Air drying is required afterward.



Image: The twin tub washing machine in operation, showing clothes being washed in one tub and spun in the other, demonstrating its dual functionality.

**Compact Size
Perfect for Most Areas**

Closet

Bathroom

Dorms

RV-camping

Image: A detailed view of the spin dryer tub, showing the internal basket and the protective lid used during the spin cycle.



Image: A close-up of the control panel, clearly showing the Wash Timer, Select Switch, and Spin Timer knobs for easy operation.

MAINTENANCE

- **Cleaning:** After each use, wipe down the interior and exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners.
- **Drainage:** Ensure the drain hose is clear of debris and kinks to maintain proper drainage.
- **Storage:** Store the machine in a dry, well-ventilated area when not in use.

TROUBLESHOOTING

- **Machine not starting:** Ensure the power cord is securely plugged in and the timer knobs are set correctly.
- **Poor drainage:** Verify the drain hose is positioned lower than the machine's water level and is not kinked or blocked. The machine uses a gravity pump for drainage.

- **Clothes not clean:** Avoid overloading the washer tub. Reduce the load size and ensure adequate water and detergent are used.
- **Clothes still very wet after spin:** Ensure the spin tub is not overloaded and clothes are distributed evenly. The spin cycle removes excess water, but clothes will remain damp and require air drying.
- **Unusual noise/vibration:** Check that the machine is on a stable, level surface. Ensure clothes are evenly distributed in the spin tub to prevent imbalance.

SPECIFICATIONS

Feature	Specification
Brand	ZenStyle
Model Number	S0051
Item Weight	28.6 pounds
Product Dimensions	14.96"D x 23.62"W x 27.17"H
Capacity	13 Pounds (8 lbs wash, 5 lbs spin)
Material Type	Plastic
Controller Type	Knob
Voltage	110 Volts
Maximum Rotational Speed	1300 RPM
Special Features	Lightweight, Portable, Built-In Gravity Pump

WARRANTY AND SUPPORT

For any product inquiries, technical support, or warranty information, please refer to the contact details provided with your purchase documentation or visit the official ZenStyle website. Keep your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07D3Q3X2Y>

More documents and user manuals: <https://manuals.plus/>