

[Manuals.plus](#) /

› [SOS ACCESSOIRE](#) /

› Lower Door Seal for Dishwashers - Beko, Blomberg, Grundig Instruction Manual

SOS ACCESSOIRE 1887560500

Lower Door Seal for Dishwashers Instruction Manual

Model: 1887560500

PRODUCT OVERVIEW

This manual provides essential information for the installation, operation, and maintenance of your **SOS ACCESSOIRE Lower Door Seal** for dishwashers. This part is compatible with specific Beko, Blomberg, and Grundig dishwasher models. Please read this manual thoroughly before proceeding with installation to ensure proper function and safety.



Image: The lower door seal, a flexible grey gasket designed to prevent water leakage from the bottom of a dishwasher door.

SAFETY INFORMATION

Always disconnect the dishwasher from the power supply before attempting any installation or maintenance. Wear appropriate personal protective equipment, such as gloves, to prevent injury. If you are unsure about any step, consult a qualified technician.

SETUP AND INSTALLATION

This section outlines the general steps for replacing the lower door seal. Specific procedures may vary slightly depending on your dishwasher model. Refer to your dishwasher's original service manual for detailed instructions if available.

1. **Preparation:** Ensure the dishwasher is empty and clean. Disconnect the appliance from the main power supply and turn off the water supply.

- 2. **Access the Seal:** Open the dishwasher door fully. The lower door seal is typically located along the bottom edge of the dishwasher tub opening.
- 3. **Remove Old Seal:** Carefully pull the old seal out of its groove. It may be held in place by friction or small clips. Note its orientation for correct installation of the new seal.
- 4. **Clean Groove:** Clean the groove thoroughly to remove any debris, food particles, or detergent residue. A clean groove ensures a proper seal.
- 5. **Install New Seal:** Align the new SOS ACCESSOIRE lower door seal (Model 1887560500) with the groove. Gently push it into place, ensuring it is seated firmly and evenly along the entire bottom edge. Start from one end and work your way across.
- 6. **Test:** Once the new seal is installed, close the dishwasher door and reconnect the power and water supply. Run a short cycle (e.g., rinse cycle) and check for any leaks around the door.

OPERATING CONSIDERATIONS

After installation, ensure the dishwasher door closes completely and latches securely. A properly installed seal will create a tight barrier, preventing water from escaping during operation. Avoid forcing the door shut if it feels obstructed, as this could damage the new seal.

MAINTENANCE

To prolong the life of your lower door seal and maintain optimal dishwasher performance:

- **Regular Cleaning:** Periodically wipe down the seal with a damp cloth to remove food particles, grease, and detergent residue. This prevents buildup that can compromise the seal's effectiveness.
- **Inspect for Damage:** Routinely inspect the seal for any signs of wear, cracks, tears, or hardening. Replace the seal if any damage is observed to prevent leaks.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners or harsh chemicals on the seal, as these can degrade the material.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Water leaking from bottom of door	Seal not seated correctly; Seal damaged; Debris on seal.	Re-seat the seal firmly; Inspect for damage and replace if necessary; Clean the seal and groove.
Door not closing properly	Seal twisted or improperly installed.	Re-install the seal, ensuring it is not twisted and is fully seated in the groove.

If troubleshooting steps do not resolve the issue, contact a qualified appliance repair technician.

SPECIFICATIONS

- **Product Type:** Lower Door Seal / Gasket
- **Model Number:** 1887560500
- **Brand:** SOS ACCESSOIRE

- **Compatibility:** Beko, Blomberg, Grundig Dishwashers (specific models)
- **Material:** Flexible rubber or similar polymer
- **Color:** Grey
- **Part Number:** 1887560500

WARRANTY AND SUPPORT

For warranty information regarding this SOS ACCESSOIRE product, please refer to the seller's policy or contact SOS ACCESSOIRE directly. Keep your proof of purchase for any warranty claims.

For technical support or further assistance, please contact the retailer where the product was purchased or visit the [SOS ACCESSOIRE Store on Amazon](#).

© 2024 SOS ACCESSOIRE. All rights reserved.

This manual is for informational purposes only. SOS ACCESSOIRE is not responsible for any damage or injury resulting from improper installation or use.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07D3YRFB9>

More documents and user manuals: <https://manuals.plus/>