

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TOSHIBA](#) /

› [Toshiba 50LF621U19 50-inch Smart 4K UHD TV - Fire TV Edition User Manual](#)

TOSHIBA TF-50A810U19

Toshiba 50LF621U19 50-inch Smart 4K UHD TV - Fire TV Edition User Manual

Model: TF-50A810U19

1. INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Toshiba 50LF621U19 50-inch Smart 4K UHD TV - Fire TV Edition. This television delivers a true-to-life 4K Ultra HD picture quality with over 8 million pixels, offering stunning clarity, deep contrast, and vivid colors. It features the Fire TV experience built-in, providing access to a vast array of channels, apps, and Alexa skills.



Figure 1: Front view of the Toshiba 50LF621U19 50-inch Smart 4K UHD TV.

2. SETUP

2.1 Unboxing and Included Components

Carefully remove the television and its components from the packaging. Ensure all items are present:

- Toshiba 50LF621U19 50-inch Smart 4K UHD TV
- Voice Remote with Alexa
- TV Stand (2 pieces)
- AAA Batteries (2) for remote
- Power Cord

2.2 Physical Installation

You can install your TV using the included stand or by mounting it on a wall (wall mount sold separately).

Attaching the TV Stand:

1. Place the TV face-down on a soft, clean surface to prevent scratches.
2. Align the stand pieces with the screw holes on the bottom of the TV.
3. Secure the stand pieces using the provided screws.

Wall Mounting:

If wall mounting, refer to the instructions provided with your wall mount kit. The TV is compatible with standard VESA mounting patterns. Ensure proper ventilation around the TV.

2.3 Connecting Devices

Connect your external devices to the appropriate ports on the back and side of the TV.



Figure 2: Rear view of the TV with input ports.



Figure 3: Close-up of side input ports.

- **HDMI:** Connect Blu-ray players, game consoles, or other HDMI devices. There are 3 HDMI ports, including 1 with ARC (Audio Return Channel) for simplified audio connections.
- **USB:** For connecting USB storage devices.
- **Composite Input:** For older devices using RCA cables.
- **Digital Optical Output:** For connecting to a soundbar or audio receiver.
- **Antenna/Cable Input:** Connect an HD antenna for over-the-air channels or a cable TV connection.
- **Ethernet:** For a wired internet connection.

2.4 Initial Power-On and Network Setup

1. Plug the power cord into the TV and then into a power outlet.
2. Press the power button on the TV or remote control.
3. Follow the on-screen instructions to select your language, connect to your Wi-Fi network (or use Ethernet), and sign in to your Amazon account to activate the Fire TV experience.

3. OPERATING THE TV

3.1 Fire TV Interface

The Fire TV interface provides a unified home screen for live TV and streaming content. Navigate using the directional pad on your remote control.

3.2 Alexa Voice Remote

The included Voice Remote with Alexa allows for convenient control of your TV and smart home devices.





Figure 4: Alexa Voice Remote.

- Press and hold the **Alexa button** (microphone icon) and speak your command.
- Use voice commands to:
 - Launch apps (e.g., "Open Netflix")
 - Search for titles (e.g., "Find action movies")
 - Play music (e.g., "Play pop music")
 - Switch inputs (e.g., "Switch to HDMI 1")
 - Control smart home devices (e.g., "Turn off the lights")

3.3 Accessing Streaming Services

The Fire TV interface provides direct access to popular streaming services such as Netflix, Prime Video, Hulu, HBO, SHOWTIME, and STARZ. You can also download additional apps from the Amazon Appstore.

3.4 Live TV

Connect an HD antenna to the Antenna/Cable input to access live over-the-air television channels. The Fire TV interface seamlessly integrates these channels into your home screen.

3.5 Picture and Sound Settings

Access the TV's settings menu to adjust picture and sound preferences. The 4K UHD resolution and HDR support ensure a high-quality visual experience. The built-in speakers provide clear audio.

4. MAINTENANCE

To ensure the longevity and optimal performance of your Toshiba TV, follow these maintenance guidelines:

- **Cleaning the Screen:** Gently wipe the screen with a soft, dry microfiber cloth. For stubborn marks, slightly dampen the cloth with water or a screen-cleaning solution specifically designed for electronics. Avoid harsh chemicals.
- **Cleaning the Frame:** Use a soft, dry cloth to wipe the TV frame and stand.
- **Ventilation:** Ensure the ventilation openings on the back of the TV are not blocked to prevent overheating.
- **Power:** Unplug the TV from the power outlet during lightning storms or when it will be left unattended for long periods.

5. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common troubleshooting steps:

- **No Power:** Check if the power cord is securely plugged into both the TV and the wall outlet. Try a different outlet.
- **No Picture/Sound:** Ensure the correct input source is selected. Check all cable connections (HDMI, audio, etc.) for looseness or damage.
- **Remote Not Responding:** Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV's IR sensor.
- **Network Connection Issues:** Restart your Wi-Fi router and modem. Go to the TV's network settings to reconnect to your Wi-Fi network or check the Ethernet cable connection.
- **App Not Working:** Try restarting the app. If the issue persists, clear the app's cache or reinstall it from the Amazon Appstore.
- **Picture Quality Issues:** Adjust picture settings (brightness, contrast, color) in the TV's menu. Ensure the content you are viewing is of high resolution.

For more complex issues, consult the online support resources or contact Toshiba customer service.

6. SPECIFICATIONS

Feature	Specification
Brand	TOSHIBA
Model Number	TF-50A810U19
Screen Size	49.5 Inches
Display Technology	LED
Resolution	4K Ultra HD
Refresh Rate	60 Hz
Aspect Ratio	16:9
Speaker Type	Built-In
Connectivity Technology	Built-in Wi-Fi, Ethernet
HDMI Ports	3 (including 1 with ARC)
USB Ports	1
Product Dimensions (with stand)	44.6" W x 27.8" H x 10.7" D
Item Weight	30.6 Pounds

7. WARRANTY AND SUPPORT

Your Toshiba TV is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions. For technical support, service, or additional information, please visit the official Toshiba support website or contact their customer service department.

© 2026 TOSHIBA. All rights reserved.