

[Manuals.plus](#) /

› [Lighting EVER](#) /

› Lepro LED Camping Lantern User Manual

Lighting EVER 3300002-2

Lepro LED Camping Lantern User Manual

Model: 3300002-2

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Lepro LED Camping Lantern. Please read this manual thoroughly before operating the device and retain it for future reference.

SAFETY INFORMATION

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Ensure batteries are inserted with correct polarity (+ and -).
- Remove batteries if the lantern will not be used for an extended period.
- Keep out of reach of children.
- Do not disassemble or modify the lantern.
- Avoid direct eye exposure to the LED light.

PACKAGE CONTENTS

- 1 x Lepro LED Camping Lantern (D batteries not included)

PRODUCT OVERVIEW

The Lepro LED Camping Lantern is designed for versatile lighting needs, offering multiple modes and adjustable brightness. It features a durable, waterproof design suitable for various outdoor and indoor activities.



Image: Two Lepre LED Camping Lanterns, showcasing their compact and robust design.



Image: Diagram showing the dimensions of the lantern (88mm width, 184mm height) and indicating it requires 3 x D size batteries (not included).

SETUP

Battery Installation

1. Twist the bottom cap of the lantern counter-clockwise to open the battery compartment.
2. Insert 3 D-size alkaline batteries into the compartment, ensuring correct polarity (+ and -) as indicated inside.
3. Align the protruding pole on the bottom cap with the corresponding hole in the battery compartment.
4. Twist the bottom cap clockwise to securely close the compartment.



PROTRUDING POLE

Insert the protruding pole into the corresponding hole accurately.

HOLE



Image: Step-by-step visual guide for battery installation, showing the counter-clockwise twist to open, battery placement, and aligning the protruding pole before closing.

OPERATING INSTRUCTIONS

Power On/Off and Mode Selection

The lantern features a single power button for control.

- **To Power On:** Press the power button once. The lantern will turn on in the last used mode.
- **To Change Modes:** Press the power button repeatedly to cycle through the 4 lighting modes:
 - a. **Daylight White (3000K):** Bright, cool white light.
 - b. **Warm White (6000K):** Softer, warm light.
 - c. **Combined:** A mix of daylight and warm white for balanced illumination.

d. **Flashing:** Strobe light for emergency signaling.

- **To Power Off:** After cycling through all modes, press the button one more time to turn off the lantern. Alternatively, if the lantern stays in one mode for more than 5 seconds, a single press will turn it off.

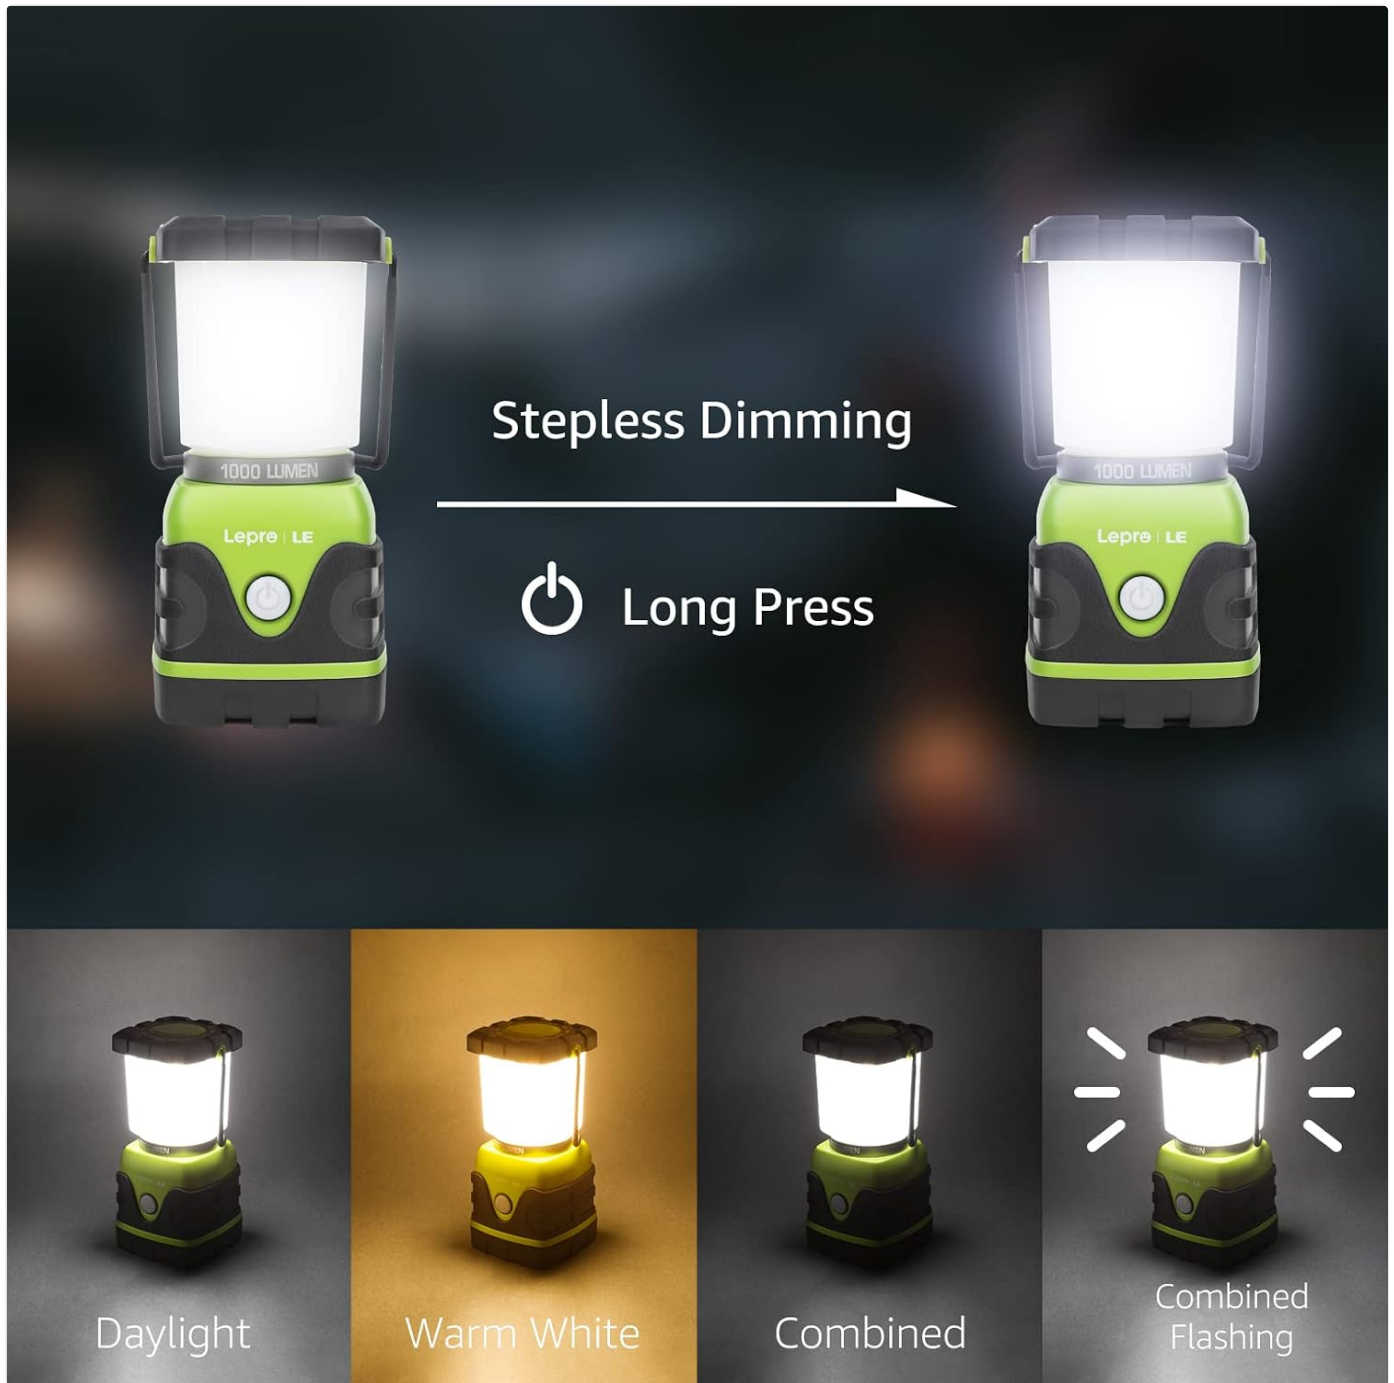


Image: Illustrates the stepless dimming function by long-pressing the power button, and shows the four distinct lighting modes: Daylight White, Warm White, Combined, and Flashing.

Brightness Adjustment (Stepless Dimming)

To adjust the brightness within any mode:

- While the lantern is on, press and hold the power button. The brightness will gradually increase or decrease.
- Release the button when the desired brightness level is reached.

Versatile Usage


The lantern is designed with multiple hanging options:

- **Top Handle:** Use the metal handle on top to carry the lantern or hang it from a hook, branch, or tent ceiling.

- **Bottom Hook:** A hook is integrated into the base, allowing the lantern to be hung upside down for downward illumination, useful for lighting a table or work area.



Bottom Hook

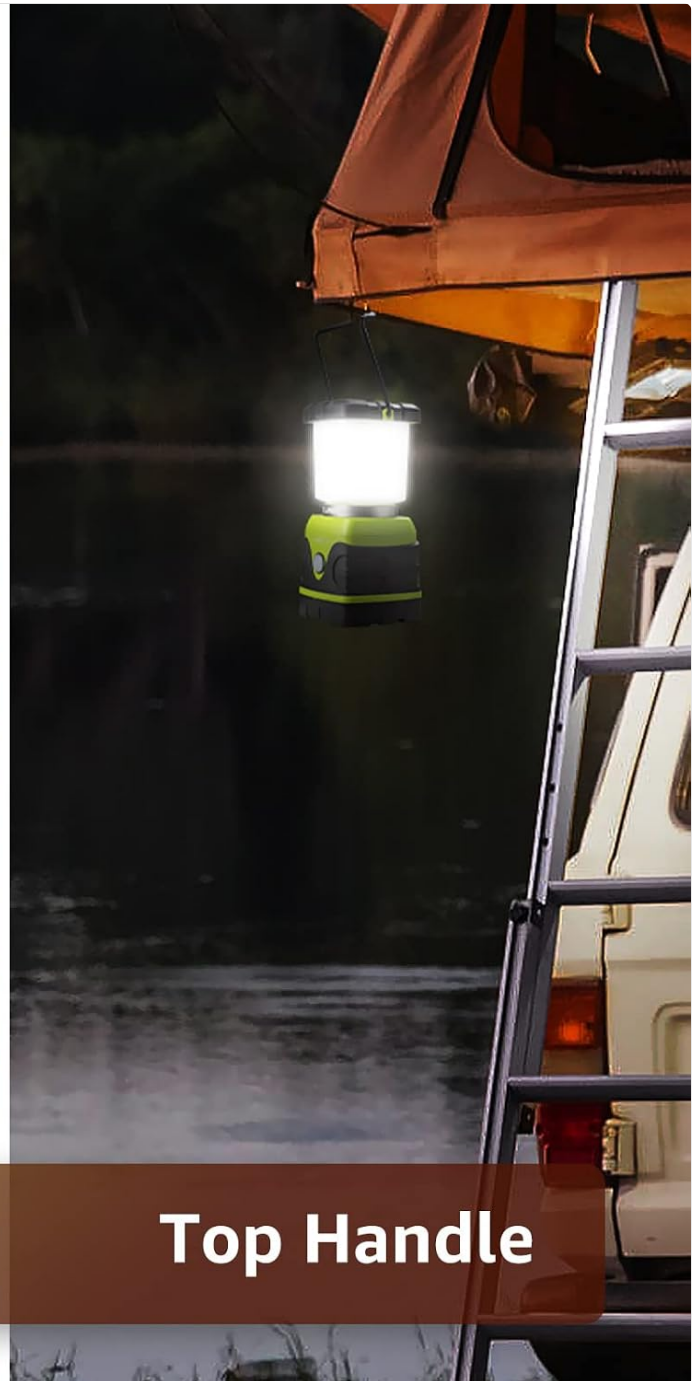

Top Handle

Image: Demonstrates the practical design features, showing the lantern hanging inside a tent using the bottom hook and hanging from a vehicle's roof rack using the top handle.



Image: Collage of four images showing the lantern in different settings: illuminating a campfire, lighting a BBQ grill, providing light for reading indoors, and being carried during a hike.

MAINTENANCE

- **Cleaning:** Wipe the lantern with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the lantern in a cool, dry place when not in use. Remove batteries if storing for extended periods to prevent leakage.
- **Water Resistance:** The lantern is IPX4 water-resistant, meaning it is protected against splashing water from any direction. Do not submerge the lantern in water.



Image: The lantern being held in the rain, with water droplets visible on its surface, illustrating its IPX4 water resistance rating.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lantern does not turn on.	Batteries are dead or incorrectly installed.	Replace batteries with new D-size alkaline batteries. Ensure correct polarity.
Light is dim.	Low battery power.	Replace batteries.
Cannot change light modes.	Button malfunction or low battery.	Ensure batteries are fresh. If issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	3300002-2
Brand	Lighting EVER
Light Source Type	LED (Light Emitting Diode)
Luminosity	1000 lumens
Power Source	Battery Powered
Battery Type	3 x D size batteries (not included)
Battery Life	Up to 12 hours (at 1000 lumens)
Voltage	4.5 Volts
Power	10 Watts
Dimensions (L x W x H)	8.8 x 8.8 x 18.4 cm (3.46 x 3.46 x 7.24 inches)
Weight	800 grams (1.76 lbs)
Material	Metal
Water Resistance Level	IPX4 (Splash-proof)
Features	Adjustable color temperature, Stepless dimming

WARRANTY AND SUPPORT

Your Lepro LED Camping Lantern comes with a 24-month return policy from the date of purchase. For any product-related inquiries, technical support, or warranty claims, please contact Lighting EVER customer service through the retailer where you purchased the product.

Please retain your proof of purchase for warranty purposes.

© 2025 Lighting EVER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question