

**Jensen JCR-315**

## **Jensen Digital AM/FM Dual Alarm Clock Radio Instruction Manual**

Model: JCR-315

Brand: Jensen

### **PRODUCT OVERVIEW**

---

The JENSEN JCR-315 Digital AM/FM Dual Alarm Clock Radio is designed for convenience and functionality. It features a classic wooden exterior with a blue backlit digital LCD display. Key features include dual alarms, selectable wake-up options (radio or alarm), calendar display, sleep/snooze functions, and a built-in 1-amp USB charging port. The unit also offers a 3-setting dimmer switch for display brightness adjustment and a digital tuner with 10 AM and 10 FM station presets. An auxiliary input jack allows connection of external audio devices.



Image: Front view of the Jensen JCR-315 Digital AM/FM Dual Alarm Clock Radio, showcasing its wooden finish, fabric speaker grille, blue LCD display, and control buttons.

## SETUP AND INITIAL USE

---

### Power Connection

Connect the AC power cord to a standard 120-volt AC wall outlet. The unit is designed to operate on AC power.

### Battery Backup Installation

For battery backup, install 2 AAA batteries (not included) into the battery compartment located on the bottom of the unit. This ensures that your time and alarm settings are retained during a power outage.

### Antenna Setup

Extend the telescopic antenna fully for optimal FM radio reception. For AM reception, the unit has a built-in antenna; try rotating the unit for better signal.

### Setting the Time

1. Press and hold the **SET** button until the time display flashes.
2. Use the **UP** or **DOWN** buttons to adjust the hour. Press **SET** to confirm.
3. Use the **UP** or **DOWN** buttons to adjust the minute. Press **SET** to confirm.
4. Continue pressing **SET** to cycle through and set the year, month, and date using the **UP** or **DOWN** buttons.

5. Press **SET** again to exit time/date setting mode.



Image: Front view of the Jensen JCR-315 showing the digital display with the time set to 1:04, indicating the clarity of the blue backlit LCD.

## OPERATING INSTRUCTIONS

---

### Turning On/Off and Volume Control

- Press the **ON/OFF** button to turn the unit on or off.
- Rotate the **VOLUME** knob to adjust the sound level.

### Radio Operation (AM/FM)

- Press the **AM/FM** button to switch between AM and FM bands.
- Use the **TUNE +** or **TUNE -** buttons to manually tune to a desired frequency.
- To auto-scan for the next available station, press and hold **TUNE +** or **TUNE -**.

### Setting Radio Presets

- Tune to the desired station.

- Press and hold the **M+** button until the preset number flashes.
- Use the **UP** or **DOWN** buttons to select the desired preset number (1-10 for AM, 1-10 for FM).
- Press **M+** again to save the station to the selected preset.
- To recall a preset station, short press the **M+** button to cycle through saved stations.

## Setting Dual Alarms

- Press the **ALARM** button once for Alarm 1, or twice for Alarm 2. The alarm time will flash.
- Use the **UP** or **DOWN** buttons to set the alarm hour, then press **ALARM** to confirm.
- Use the **UP** or **DOWN** buttons to set the alarm minute, then press **ALARM** to confirm.
- Select wake mode (Radio or Alarm Tone) using **UP** or **DOWN**, then press **ALARM** to confirm and activate the alarm. An alarm icon will appear on the display.

## Snooze and Sleep Functions

- When the alarm sounds, press the **SLEEP / SNOOZE / DIMMER** button to activate snooze, which will silence the alarm for approximately 9 minutes.
- To set the sleep timer, press the **SLEEP / SNOOZE / DIMMER** button repeatedly while the radio is playing to cycle through sleep times (e.g., 90, 60, 30, 15 minutes, OFF). The radio will turn off automatically after the selected time.

## Display Dimmer

- Press the **SLEEP / SNOOZE / DIMMER** button (when the unit is off or not in snooze/sleep mode) to cycle through the display brightness settings: Hi, Mid, Low.

## USB Charging Port

Connect your smartphone or other USB-powered device to the built-in 1-amp USB charging port on the back of the unit to charge it while you sleep or use the radio.



Image: Side view of the Jensen JCR-315 showing a smartphone connected to its USB charging port, illustrating the charging capability.

## Auxiliary Input

Connect an external audio device (e.g., MP3 player, smartphone) to the AUX IN jack on the back of the unit using a 3.5mm audio cable (not included). The unit will automatically switch to AUX mode when a cable is inserted. Control playback from your connected device.

## MAINTENANCE

---

### Cleaning the Unit

Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the unit is unplugged before cleaning.

### Battery Replacement

If the unit experiences frequent power interruptions or if the time/alarm settings are not retained during power outages, replace the 2 AAA backup batteries. Ensure correct polarity when inserting new batteries.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Power cord not properly connected.	Ensure AC power cord is securely plugged into a working outlet.
Display is dim or hard to read.	Dimmer setting is too low.	Press the <b>SLEEP / SNOOZE / DIMMER</b> button repeatedly to adjust brightness (Hi/Mid/Low).
Poor radio reception.	Antenna not extended or unit position.	Fully extend the telescopic antenna for FM. For AM, rotate the unit for better signal.
Alarm does not sound.	Alarm not set or volume too low.	Verify alarm is set and activated (alarm icon visible). Ensure volume is not at minimum if waking to radio.
Time/settings lost after power outage.	Backup batteries are dead or missing.	Install or replace 2 AAA backup batteries.

## SPECIFICATIONS

Feature	Detail
Model Number	JCR-315
Power Source	120V AC, 60Hz
Battery Backup	2 x 'AAA' size batteries (not included)
Radio Bands Supported	AM, FM
Tuner Technology	Digital PLL
Preset Stations	10 AM, 10 FM
Connectivity	Auxiliary Input, USB Charging Port (1 Amp)
Product Dimensions (L x W x H)	7.68" x 4.53" x 4.53" (19.5 cm x 11.5 cm x 11.5 cm)
Item Weight	2.1 Pounds (0.95 kg)



Image: The Jensen JCR-315 shown with its length (7.68"), width (4.53"), and height (4.53") dimensions clearly indicated.


## WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries regarding your Jensen JCR-315 Digital AM/FM Dual Alarm Clock Radio, please refer to the warranty card included with your product or visit the official Jensen website. You may also find additional support resources by visiting the [Jensen Store on Amazon](#).

Please retain your purchase receipt as proof of purchase for any warranty claims.

 <p>Jensen JCR-255 AM/FM Digital Dual Alarm Clock Radio with Under Pillow Vibrator User Manual</p> <p>Model: JCR-255 User Manual Please read this user manual completely before operating this unit. Retain for future reference.</p>	<p><a href="#">Jensen JCR-255 AM/FM Digital Dual Alarm Clock Radio with Under Pillow Vibrator User Manual</a></p> <p>Comprehensive user manual for the Jensen JCR-255 AM/FM Digital Dual Alarm Clock Radio with Under Pillow Vibrator, covering setup, operation, safety, and troubleshooting.</p>
 <p>Jensen JCR-370 Mood Lamp Digital Dual Alarm Clock Radio User Manual</p> <p>Model: JCR-370 User Manual Please read this user manual completely before operating this unit. Retain for future reference.</p>	<p><a href="#">Jensen JCR-370 Mood Lamp Digital Dual Alarm Clock Radio User Manual</a></p> <p>Discover the Jensen JCR-370 Mood Lamp Digital Dual Alarm Clock Radio. This user manual details setup, dual alarms, mood lighting, FM radio, nature sounds, AUX input, and USB charging for optimal use.</p>
 <p>JENSEN® audio MODEL: JCR-255 AM/FM DUAL ALARM AUTO TIME SET CLOCK RADIO INSTRUCTION MANUAL Please read and follow this instruction manual carefully before using the unit and retain it for future reference.</p>	<p><a href="#">Jensen JCR-255 AM/FM Dual Alarm Auto Time Set Clock Radio Instruction Manual</a></p> <p>Instruction manual for the Jensen JCR-255 AM/FM Dual Alarm Auto Time Set Clock Radio, covering setup, operation, safety instructions, and specifications.</p>
 <p>JENSEN® AM/FM DUAL ALARM CLOCK RADIO WITH NATURE SOUNDS USER MANUAL JCR-210 Please read and follow this instruction manual carefully before using the unit and retain it for future reference.</p>	<p><a href="#">Jensen JCR-210 AM/FM Dual Alarm Clock Radio with Nature Sounds - User Manual</a></p> <p>Comprehensive user manual for the Jensen JCR-210 AM/FM Dual Alarm Clock Radio with Nature Sounds. Learn how to set the clock, use the radio, nature sounds, alarms, and sleep timer. Includes safety instructions and specifications.</p>

Documents - Jensen – JCR-315

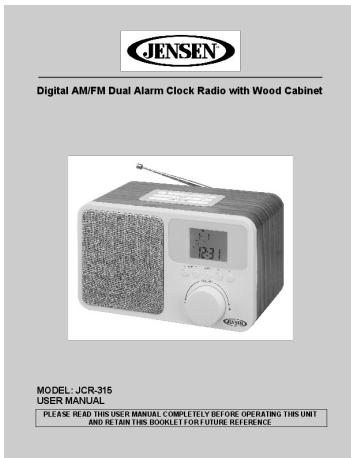


Digital AM/FM Dual Alarm Clock Radio with Wood Cabinet

[\[pdf\]](#) User Manual Installation Guide Instructions

Provided by ManualsAndMore Download User Manual Jensen JCR 315 JCR315 manualsandmore ||| Digital AM/FM Dual Alarm Clock Radio with Wood Cabinet MODEL:**JCR-315** USER MANUAL PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE WARNING TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHE...

lang:en score:39 filesize: 1.91 M page\_count: 13 document date: 2019-07-24

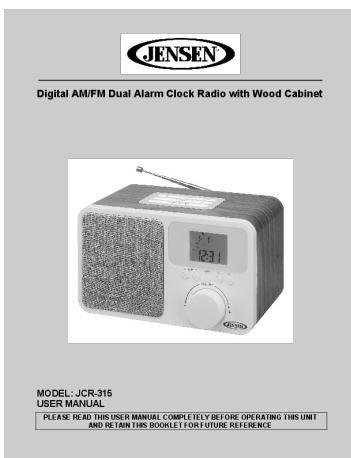

Digital AM/FM Dual Alarm Clock Radio with Wood Cabinet

[\[pdf\]](#) User Manual Owner's Manual Installation Guide Instructions

Microsoft Word JCR 315 English UM USA 0118 CWL Owner Manual Modern Contemporary Digital Mahogany Wood Electric Tabletop Clock with Alarm in Brown White Jensen jnsn1003 315Jensen 315owner manualsecure img1 ag wfcdn dm document ba25f05b 948b 453b 8a0f db0f3a0c3918 owner manual |||

Digital AM/FM Dual Alarm Clock Radio with Wood Cabinet MODEL:**JCR-315** USER MANUAL PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE WARNING TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHE...

lang:en score:32 filesize: 1.89 M page\_count: 13 document date: 2018-01-20




Digital AM/FM Doble Despertador Radio con Gabinete de Madera

[\[pdf\]](#) User Manual Owner's Manual

Microsoft Word JCR 315 Spanish UM USA 0118 CWL Owner Manual Modern Contemporary Digital Mahogany Wood Electric Tabletop Clock with Alarm in Brown White Jensen jnsn1003 315Jensen 315owner manualsecure img1 ag wfcdn dm document 5d1ce51a 70f8 4407 9574 eaa4e452f992 owner manual |||

Digital AM/FM Doble Despertador Radio con Gabinete de Madera MODEL:**JCR-315** MANUAL DEL PROPIETARIO Por favor lea y observe este Manual de Instrucciones cuidadosamente antes de utilizar la unidad y retengalo como futura referencia ADVERTENCIA IPARA PREVENIR EL RIESGO DE INCENDIO O DESCARGA ELCTRICA,...

lang:es score:32 filesize: 1.81 M page\_count: 14 document date: 2018-01-20

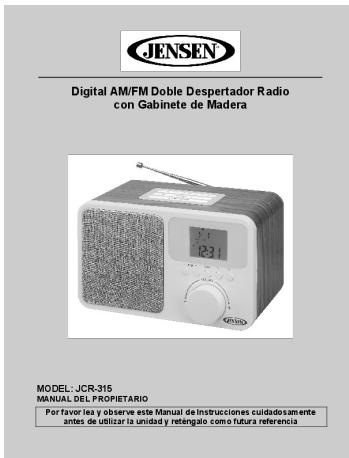


## [pdf] User Manual

Microsoft Word JCR 315 Spanish UM USA 0118 CWL Digital AM FM Doble Despertador Radio con Gabinete de MODEL MANUAL DEL PROPIETARIO Por favor lea y observe este Manual Instrucciones cuidadosamente antes utilizar la unidad reténgalo SIB spectraintl images stories in

Digital AM/FM Doble Despertador Radio con Gabinete de Madera MODEL:**JCR-315**  
MANUAL DEL PROPIETARIO Por favor lea y observe este Manual de Instrucciones  
cuidadosamente antes de utilizar la unidad y retengalo como futura referencia  
ADVERENCIA IPARA PREVENIR EL RIESGO DE INCENDIO O DESCARGA  
ELCTRICA....

lang:es score:28 filesize: 1.81 M page\_count: 14 document date: 2018-01-20

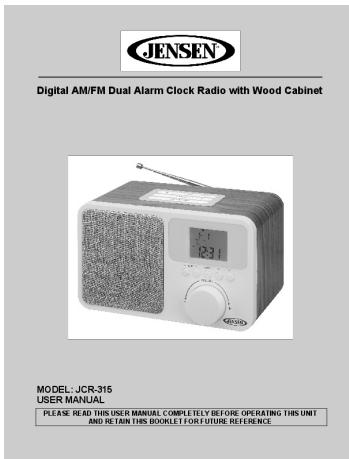

[\[pdf\]](#) User Manual Installation Guide Instructions

Microsoft Word JCR 315 English UM USA 0118 CWL Digital AM FM Dual Alarm Clock Radio with Wood Cabinet PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING UNIT AND RETAIN BOOKLET FOR FUTURE REFERENCE EIB spectraintl images stories in

Digital AM/FM Dual Alarm Clock Radio with Wood Cabinet **MODEL:JCR-315** USER  
MANUAL PLEASE READ THIS USER MANUAL COMPLETELY BEFORE  
OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE  
REFERENCE WARNING TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE  
THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHE...

lang:en score:27 filesize: 1.89 M page\_count: 13 document date: 2018-01-20



## [\[pdf\]](#) Specifications Accessories

JCR 315 model sheet 050318 cdr Spectra Merchandising DIGITAL AM FM DUAL ALARM CLOCK RADIO  
WITH WOOD CABINET Digital PLL Receiver 10AM 10FM Preset Stations LCD Display with Backlight  
spectraintl images stories jn SPEC SHEET International Inc Product Details Download Title Created Date  
5 3 2018 10 37 43 Sell Spec Sheet JENSEN® Dual Alarm Clock Radio Wood Cabinet

c2e8cd59555f65f9205b74f2c4c35da6a9032b4b spec 1 JENJCR315 petra attachment 9689025

65f4523cad0dc883357364 MerchandisingDIGITAL BacklightTitle AMJENSENÂ® CabinetSpectra  
DetailsSpectra 315Spectra 315spectraintl 315petra JENJCR315spectraintl Specifications Modern  
Contemporary Mahogany Electric Tabletop in Brown White ,lensen insn1003 315.ICR

Merchandising-lens-315DIGITAL\_315specificationssecure img1\_aq\_wfcnd dm\_document

4090 a24a 236c5d698e5f specificationsspectraintl ||| ICD-215 DIGITAL AM/FM DUAL ALARM CLOCK RADIO WITH WOOD CABINET

AM/FM Digital PLL Receiver 10AM 10FM Preset Stations Digital LCD Display with Backlight Auxiliary Input Jack for Connecting Your iPod, MP3 or other Digital Audio Players Dual Alarm Clock with Snooze Function Wake to Radio or Al...

lang:en score:16 filesize: 820.74 K page\_count: 1 document\_date: 2018-05-03