

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Brunner](#) /

› [BRUNNER Vida 1 NG Kitchen Tent User Manual](#)

Brunner FRA070556

BRUNNER Vida 1 NG Kitchen Tent User Manual

INTRODUCTION

Thank you for choosing the BRUNNER Vida 1 NG Kitchen Tent. This manual provides essential information for the safe and efficient setup, operation, and maintenance of your tent. Please read these instructions carefully before assembly and retain them for future reference. The Vida 1 NG is designed as an ideal cooking and side tent, featuring a simple pent roof, three large opaque gauze windows, and a rollable entrance door, complete with ground strips for stability.

SAFETY INSTRUCTIONS

- **Fire Safety:** Keep all flame and heat sources away from the tent fabric. The tent material is not fireproof.
- **Ventilation:** Ensure adequate ventilation, especially when cooking inside the tent, to prevent carbon monoxide buildup.
- **Anchoring:** Always secure the tent properly with all provided pegs and guy ropes to prevent damage from wind.
- **Weather Conditions:** Avoid setting up the tent in extreme weather conditions such as strong winds, heavy rain, or snow.
- **Children:** Do not allow children to play unsupervised with the tent or its components.

PACKAGE CONTENTS

Please check that all components are present before beginning assembly:

- BRUNNER Vida 1 NG Kitchen Tent fabric
- Frame poles (various lengths, typically color-coded)
- Pegs and guy ropes
- Pack sack
- Instruction manual (this document)

SETUP INSTRUCTIONS

Follow these steps for proper assembly of your Vida 1 NG Kitchen Tent:

1. **Unpack and Lay Out:** Remove all components from the pack sack. Lay the tent fabric flat on a clean, level surface, ensuring the ground strips are spread out.
2. **Assemble the Frame:** Connect the frame poles according to their color coding or markings. Ensure all sections are fully inserted and locked into place.
3. **Attach Tent to Frame:** Drape the tent fabric over the assembled frame. Begin by securing the corners, then work your way around, attaching the fabric to the frame using clips, ties, or sleeves as provided.
4. **Raise the Tent:** Once the fabric is loosely attached, carefully lift the frame to its full height, ensuring the tent fabric settles correctly. Adjust as needed to remove any slack.
5. **Secure the Tent:** Peg down all ground strips and attach guy ropes to the designated points. Extend the guy ropes outwards at a 45-degree angle and secure them firmly with pegs. Adjust tension to ensure stability.
6. **Final Adjustments:** Check all zippers, windows, and doors to ensure they operate smoothly and are properly aligned.



Image: The BRUNNER Vida 1 NG Kitchen Tent fully assembled, showcasing its structure and features.

OPERATING THE TENT

Entrance Door

The Vida 1 NG features a rollable entrance door. To open, unzip the door completely, then roll it upwards or to the side and secure it with the attached toggles or straps. This keeps the entrance clear and allows for easy access.

Gauze Windows

The three large windows are equipped with opaque gauze. These windows provide ventilation while maintaining privacy and protection from insects. They can be opened or closed using their respective

zippers or fasteners.

MAINTENANCE AND CARE

Cleaning

- Clean the tent fabric with mild soap and lukewarm water. Do not use harsh detergents, bleach, or abrasive cleaners, as these can damage the material and its waterproof coating.
- Rinse thoroughly with clean water.
- For the PVC roof material, a soft brush can be used for stubborn dirt.

Storage

- Ensure the tent is completely dry before packing it away. Storing a damp tent can lead to mildew and fabric degradation.
- Fold the tent neatly and place it back into its pack sack. Store poles and pegs separately if desired, or within the pack sack if space allows.
- Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Tent is unstable or sways in wind	Improper pegging or guy rope tension.	Ensure all pegs are fully inserted and guy ropes are taut and correctly angled. Re-tension if necessary.
Water leakage	Small punctures, seam issues, or condensation.	Check for visible damage and repair with a tent repair kit. Ensure proper ventilation to reduce condensation.
Zipper sticking	Dirt, fabric caught, or lack of lubrication.	Clean the zipper teeth. Gently pull fabric away from the zipper. Apply a silicone-based zipper lubricant.
Poles difficult to assemble/disassemble	Dirt in ferrules, bent sections.	Clean pole sections. Check for damage. Do not force assembly; inspect for alignment issues.

SPECIFICATIONS

Feature	Detail
Model Number	FRA070556
Manufacturer	BRUNNER
Product Dimensions (L x W x H)	150 x 200 x 215 cm
Weight	13.5 kg (29.76 lbs)
Material (Body)	Polyester
Material (Roof)	100% PVC

Feature	Detail
Water Resistance Level	Waterproof
Floor Area	30000 Square Centimeters
Occupancy	1 Person (as a utility/kitchen tent)
Closure Type	Zipper

WARRANTY AND SUPPORT

For warranty information or technical support regarding your BRUNNER Vida 1 NG Kitchen Tent, please refer to the documentation provided at the point of purchase or contact BRUNNER customer service directly. Contact details can typically be found on the manufacturer's official website or on the product packaging.