

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Notch](#) /
- › [Notch Chainsaw Scabbard Instruction Manual](#)

Notch 40575

Notch Chainsaw Scabbard Instruction Manual

Model: 40575 | Brand: Notch

1. INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your Notch Chainsaw Scabbard. Designed for utility and bucket trucks, this scabbard offers a secure and convenient storage solution for your chainsaw. Please read this manual thoroughly before use to ensure safe and effective operation.

1.1 Safety Information

Always prioritize safety when working with chainsaws and related equipment. Ensure the scabbard is securely mounted before placing a chainsaw inside. Keep hands and body clear of the chainsaw chain and bar. Refer to your chainsaw's instruction manual for specific safety guidelines related to its operation and handling.

2. PRODUCT OVERVIEW AND FEATURES

The Notch Chainsaw Scabbard (Model 40575) is engineered for durability and universal compatibility with utility and bucket truck setups. Its robust construction and thoughtful design enhance efficiency and safety on the job site.

- **Universal Fit:** Designed for buckets with or without a liner, providing versatile mounting options.
- **Durable Construction:** Manufactured from heavy-duty UHMPE plastic, ensuring resistance to water and UV exposure for prolonged outdoor use.
- **Efficient Drainage:** Features a bottom opening to allow for chip and water drainage, preventing accumulation and maintaining cleanliness.
- **Modular Design:** The front pocket is replaceable (ASIN: B07D5VBKG2, sold separately), allowing for maintenance or customization.
- **Mounting Flexibility:** An outside mount kit is available separately (ASIN: B07D5RFZRF) for alternative installation configurations.



Figure 2.1: Annotated view of the Notch Chainsaw Scabbard, illustrating its heavy-duty UHMPE plastic construction, replaceable front pocket, allowance for longer bar length, and open bottom for drainage.

3. SETUP AND INSTALLATION

The Notch Chainsaw Scabbard is designed for easy inside mounting on utility or bucket trucks. Follow these steps for

secure installation.

3.1 Inside Mount Installation

1. **Positioning:** Identify a suitable location inside the bucket that allows for easy access to the chainsaw while ensuring it does not obstruct movement or other equipment.
2. **Hook Placement:** Place the scabbard's integrated hooks over the rim of the bucket. Ensure the scabbard hangs vertically and is stable.
3. **Secure Attachment (if applicable):** While the scabbard is designed to hang securely, some users may opt for additional fastening points if available on their bucket. The scabbard features pre-drilled holes for optional bolt-through mounting if desired (hardware not included).
4. **Verify Stability:** Gently tug on the scabbard to confirm it is firmly seated and will not dislodge during truck movement or operation.



Figure 3.1: The Notch Chainsaw Scabbard securely mounted inside a utility bucket, demonstrating its universal fit.



Figure 3.2: Side view illustrating how the scabbard's hooks rest on the bucket rim for stable inside mounting.

3.2 Optional Accessories

Enhance the functionality of your scabbard with these separately sold accessories:

- **Replacement Front Pocket:** Available for purchase (ASIN: [B07D5VBKG2](#)) if the original needs replacement or for customization.
- **Outside Mount Kit:** For mounting the scabbard on the exterior of the bucket (ASIN: [B07D5RFZRF](#)).

4. OPERATION

Using the Notch Chainsaw Scabbard is straightforward, providing a secure and accessible location for your chainsaw during work.

1. **Inserting the Chainsaw:** With the scabbard securely mounted, carefully slide the chainsaw bar and chain into the scabbard's main compartment. Ensure the chain is not engaged and the saw is off.
2. **Securing the Chainsaw:** The scabbard is designed to hold the chainsaw firmly. Ensure the powerhead rests securely in the upper portion of the scabbard.
3. **Removing the Chainsaw:** When ready to use, carefully lift the chainsaw straight out of the scabbard.



Figure 4.1: A chainsaw properly seated within the Notch Scabbard, demonstrating secure storage inside a bucket.



Figure 4.2: An aerial view showing a chainsaw stored in the scabbard, providing a clear perspective of its placement within the bucket.

5. MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your Notch Chainsaw Scabbard.

- **Cleaning:** Periodically clean the scabbard to remove sawdust, wood chips, and debris. The open bottom design facilitates easy drainage and cleaning. Use water and a mild detergent if necessary.
- **Inspection:** Regularly inspect the scabbard for any signs of wear, cracks, or damage, especially around the mounting hooks and the chainsaw contact areas.
- **Drainage:** Ensure the bottom opening remains clear of obstructions to allow for proper chip and water drainage.

6. TROUBLESHOOTING

This section addresses common inquiries and minor issues you might encounter with your scabbard.

Problem	Possible Cause	Solution
Scabbard feels loose or unstable.	Improper hook placement; bucket rim not fully engaged.	Re-position the scabbard hooks to ensure they are fully seated over the bucket rim. Verify the scabbard hangs vertically and does not wobble.
Debris accumulation in the scabbard.	Drainage opening is blocked.	Clear any obstructions from the bottom drainage opening. Regularly clean the scabbard.
Difficulty with screw installation (if using optional mounting).	Incorrect screw type for plastic material.	If using optional screw-in mounting, ensure appropriate coarse-thread screws are used for plastic to prevent stripping. Consult a hardware professional if unsure.

7. SPECIFICATIONS

Detailed specifications for the Notch Chainsaw Scabbard (Model 40575).

Attribute	Value
Product Dimensions	30 x 10.8 x 3.7 inches (76.2 x 27.4 x 9.4 cm)
Item Weight	9.23 pounds (4.19 kg)
Manufacturer	Notch
Model Number	40575
Material	Heavy-Duty UHMPE Plastic
Resistance	Water and UV Resistant
UPC	852399007876

8. WARRANTY AND SUPPORT

Notch stands behind the quality of its products.

8.1 Warranty Information

The Notch Chainsaw Scabbard is backed by a **Limited Lifetime Warranty**. This warranty covers defects in materials and workmanship under normal use. For specific terms and conditions, please refer to the official Notch warranty policy available on their website.

8.2 Customer Support

For further assistance, product inquiries, or support, please visit the official Notch Store on Amazon or their corporate website:

[Notch Equipment Amazon Store](#)

