

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Panasonic](#) /

› Panasonic SA-XH60, SA-XH100, SA-XH160 DVD Home Theater Sound System Operating Instructions

Panasonic SA-XH60, SA-XH100, SA-XH160

Panasonic DVD Home Theater Sound System Operating Instructions

Models: SA-XH60, SA-XH100, SA-XH160

IMPORTANT SAFETY INFORMATION

Thank you for purchasing this Panasonic product. To ensure safe and optimal performance, please read these operating instructions carefully before using your DVD Home Theater Sound System. Retain this manual for future reference.

Note: The illustrations provided in this manual may differ slightly from your specific unit.

PRODUCT OVERVIEW

The Panasonic DVD Home Theater Sound System provides an immersive audio-visual experience. This system typically includes a main DVD player unit, multiple satellite speakers, and a subwoofer to deliver rich, dynamic sound.

Below is an illustration of the system components:

Panasonic®

Operating Instructions DVD Home Theater Sound System










Model No. SC-XH160
SC-XH100
SC-XH60



This illustration shows SC-XH100.

Thank you for purchasing this product.
Please read these instructions carefully before using this product, and save this manual for future use.

The illustrations shown may differ from your unit.

Region number		
The player plays DVD-Video marked with labels containing the region number or "ALL".		
Region	Number	Example
The Middle East and South Africa	2	  
Southeast Asia	3	  
India	5	  

GA GS GW

RQT9801-B

This image displays the complete Panasonic DVD Home Theater Sound System, featuring the main DVD player unit, five compact satellite speakers, a dedicated subwoofer for bass, and the system's remote control. The illustration specifically highlights the SC-XH100 model configuration.

REGION NUMBER INFORMATION

Your DVD player is designed to play DVD-Video discs marked with specific region numbers or the 'ALL' symbol. Please refer to the table below to understand compatible regions for your unit.

Region	Number	Example
The Middle East and South Africa	2	2 ALL 235
Southeast Asia	3	3 ALL 235
India	5	5 ALL 235

SETUP

1. Unpacking and Placement

- Carefully remove all components from the packaging.
- Place the main unit on a stable, level surface with adequate ventilation.
- Position the speakers for optimal sound distribution. The subwoofer should be placed on the floor.

2. Speaker Connections

1. Connect each satellite speaker to the corresponding speaker output terminals on the main unit. Ensure correct polarity (positive to positive, negative to negative).
2. Connect the subwoofer to the dedicated subwoofer output terminal.

3. Video and Audio Connections

- Connect the main unit to your television using an appropriate video cable (e.g., HDMI, composite video).
- For external audio sources, connect them to the auxiliary input terminals on the main unit.

4. Power Connection

Once all other connections are made, plug the power cord of the main unit into a wall outlet.

OPERATING INSTRUCTIONS

1. Basic Playback

1. Press the **POWER** button to turn on the system.
2. Open the disc tray, insert a DVD or CD, and close the tray.
3. Playback will usually start automatically. If not, press the **PLAY** button.
4. Use the **VOLUME +/-** buttons on the remote control or main unit to adjust the sound level.

2. Remote Control Functions

The remote control provides access to various functions:

- **MENU:** Access disc menus.
- **DIRECTION BUTTONS (▲ ▼ ◀ ▶):** Navigate menus and selections.
- **ENTER:** Confirm selections.

- **STOP (■)**: Stop playback.
- **PAUSE (■ ■)**: Pause playback.
- **SKIP (◀◀ / ▶▶)**: Skip tracks or chapters.
- **FUNCTION**: Switch between different input sources (e.g., DVD, AUX).

MAINTENANCE

Cleaning the Unit

- Always disconnect the power cord before cleaning.
- Wipe the exterior of the unit with a soft, dry cloth. For stubborn dirt, use a cloth lightly dampened with water and a mild detergent, then wipe dry.
- Do not use abrasive pads, scouring powder, or solvents such as alcohol or benzine, as these can damage the finish.

Disc Care

- Handle discs by their edges to avoid fingerprints.
- Clean discs with a soft, lint-free cloth, wiping from the center outwards.
- Do not use solvents or abrasive cleaners on discs.

TROUBLESHOOTING

Before contacting service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
No power	Power cord not connected securely.	Ensure the power cord is firmly plugged into the wall outlet and the unit.
No sound	Volume is too low or muted. Speakers not connected correctly.	Increase volume, check mute function. Verify all speaker connections are secure and correct.
Disc does not play	Disc is dirty, scratched, or inserted incorrectly. Incorrect region code.	Clean the disc. Insert the disc with the label side up. Ensure the disc's region code matches your player.
No picture	Video cable not connected properly. Incorrect input selected on TV.	Check video cable connections. Select the correct input source on your television.

SPECIFICATIONS

While specific specifications may vary slightly between models (SA-XH60, SA-XH100, SA-XH160), the general characteristics of the Panasonic DVD Home Theater Sound System include:

- **Disc Compatibility:** DVD-Video, CD, CD-R/RW, MP3, JPEG.
- **Audio Output:** Multi-channel surround sound.
- **Video Output:** Composite Video, Component Video, HDMI (model dependent).
- **Speaker System:** Satellite speakers and passive subwoofer.
- **Power Supply:** AC 120V, 60Hz (North America).
- **Power Consumption:** Refer to the label on the unit for specific power consumption details.

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Panasonic website for your region. In case of technical issues or if you require further assistance, please contact Panasonic customer support. Keep your purchase receipt and model number readily available when seeking support.