

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Panasonic](#) /

› Panasonic SC-UX100 Home Audio Mini System User Manual

Panasonic SC-UX100

Panasonic SC-UX100 Home Audio Mini System User Manual

Model: SC-UX100 (UX100E)

1. INTRODUCTION

Thank you for purchasing the Panasonic SC-UX100 Home Audio Mini System. This manual provides essential information for the safe and efficient operation of your new audio system. Please read this manual thoroughly before use and keep it for future reference.



This image displays the complete Panasonic SC-UX100 Home Audio Mini System. It features a sleek white central unit, equipped with a prominent blue-ringed volume knob, a digital display, and a disc tray. Flanking the central unit are two matching white speakers, each with a black speaker cone and a distinctive circular design.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.

- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.

3. SETUP AND CONNECTIONS

3.1 Unpacking

Carefully remove all components from the packaging. Ensure all items listed below are present:

- Main Unit (SC-UX100)
- Two Speaker Units
- Power Cord
- Remote Control (if included)
- User Manual (this document)

3.2 Speaker Connection

1. Connect the speaker cables from each speaker to the corresponding speaker terminals on the rear of the main unit. Ensure correct polarity (+ to + and - to -).
2. Place speakers equidistant from the main unit for optimal stereo sound.

3.3 Power Connection

1. Insert the power cord firmly into the AC IN terminal on the main unit.
2. Plug the other end of the power cord into a suitable wall outlet.

3.4 Bluetooth Pairing

The SC-UX100 supports Bluetooth connectivity for wireless audio streaming from compatible devices.

1. Turn on the main unit.
2. Press the **Bluetooth** button on the unit or remote control to enter Bluetooth pairing mode. The display will show "PAIRING".
3. On your smartphone, tablet, or PC, enable Bluetooth and search for available devices.
4. Select "SC-UX100" from the list of devices.
5. Once connected, the display will show "CONNECTED". You can now stream audio wirelessly.

3.5 USB Connection

The unit features one USB port for playing MP3 files from a USB storage device.

1. Insert your USB storage device into the USB port on the front of the main unit.
2. Select the USB input source using the **FUNCTION** button.
3. Use the playback controls to navigate and play your MP3 files.

4. OPERATING INSTRUCTIONS

4.1 Basic Operations

- **Power On/Off:** Press the **POWER** button.
- **Volume Control:** Rotate the large volume knob on the front panel or use the **VOL +/-** buttons on the remote.
- **Source Selection:** Press the **FUNCTION** button repeatedly to cycle through available sources (CD, USB, Bluetooth, FM/AM Radio, AUX).

4.2 CD Playback

1. Press the **OPEN/CLOSE** button to open the disc tray.
2. Place a CD with the label side up into the tray.
3. Press **OPEN/CLOSE** again to close the tray. Playback will start automatically.
4. Use **PLAY/PAUSE**, **STOP**, **SKIP** buttons for control.

4.3 Radio Operation (FM/AM)

1. Select FM or AM source using the **FUNCTION** button.
2. Press **TUNE +/-** to manually tune to a station.
3. Press and hold **TUNE +/-** for automatic scanning.
4. To preset a station, tune to the desired station, then press **MEMORY** followed by a preset number.

5. MAINTENANCE AND CARE

- **Cleaning the Unit:** Wipe the exterior of the unit and speakers with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- **Disc Tray Care:** Keep the disc tray clean. Avoid touching the lens inside the CD compartment.
- **Ventilation:** Ensure proper ventilation around the unit. Do not block the ventilation openings.
- **Storage:** If storing the unit for an extended period, unplug it from the power outlet and store it in a cool, dry place.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected securely.	Check power cord connection to unit and wall outlet.
No sound	Volume is too low or muted. Speaker cables not connected properly. Incorrect input source selected.	Increase volume. Check speaker cable connections. Select correct input source.
Bluetooth pairing fails	Device is out of range. Bluetooth on device is off. Unit is not in pairing mode.	Move device closer to the unit. Ensure Bluetooth is enabled on your device. Put the unit into Bluetooth pairing mode.
CD does not play	CD is dirty or scratched. CD inserted incorrectly.	Clean the CD with a soft cloth. Insert the CD with the label side facing up.

7. SPECIFICATIONS

Feature	Detail
Model Number	UX100E
Brand	Panasonic
Color	White
Connectivity	Bluetooth, USB (1 port)
Compatible Devices	MP3 Player, Personal Computer, Smartphone, Tablet
Power Output	300 W
Speaker Type	Mono (2-way speakers)
Dimensions (L x W x H)	24 x 69 x 2.5 cm
Power Source	Electric Cable
Supported Audio Formats	MP3

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Panasonic support website. Keep your proof of purchase for any warranty claims.

Note: Information regarding spare parts availability and software updates is not provided in the product specifications.
