

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lasko](#) /

› [Lasko XtraAir T48331 48-Inch Tower Fan User Manual](#)

Lasko T48331

Lasko XtraAir T48331 48-Inch Tower Fan User Manual

Model: T48331

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation and maintenance of your Lasko XtraAir T48331 48-inch Tower Fan. Please read all instructions carefully before use and retain this manual for future reference.

SETUP

The Lasko XtraAir T48331 tower fan is designed for easy assembly and placement. Follow these steps to set up your fan:

- 1. Unpacking:** Carefully remove all components from the packaging. Ensure all parts are present before proceeding.
- 2. Base Assembly:** Attach the fan base securely according to the instructions provided in the separate assembly guide (if applicable).
- 3. Placement:** Position the fan on a firm, level surface. The slim design allows for placement in various indoor spaces, such as bedrooms or offices. Utilize the integrated carry handle for convenient transport.
- 4. Power Connection:** Plug the fan into a standard 120 Volt NEMA 5-15 electrical outlet. Ensure the power cord is not obstructed or pinched.



PRODUCT SPECIFICATIONS



Modern Finish



Portable Design



ETL Listed



Figure 1: Lasko XtraAir T48331 Tower Fan highlighting its dimensions and ETL safety certification.

This image illustrates the fan's sleek design and key specifications, including its dimensions (13"D x 13"W x 47.5"H) and ETL safety certification. The integrated carry handle is visible at the top rear for easy portability.

OPERATING INSTRUCTIONS

Your Lasko XtraAir T48331 tower fan offers multiple settings for personalized comfort. Controls are accessible via the top panel or the included remote control.

Control Panel & Remote Functions:

- **Power Button (>):** Press to turn the fan ON or OFF.
- **Speed Settings:** The fan features 4 quiet speed options. Press the speed button to cycle through the available settings (1, 2, 3, 4).

- **Oscillation ()**: Activate widespread oscillation to distribute air throughout the room. Press the oscillation button to turn this feature ON or OFF.
- **Timer ()**: Set the electronic timer for automatic shut-off after 1, 2, 4, or 8 hours. Press the timer button to select the desired duration.
- **Ionizer (ION)**: Engage the fresh air ionizer to enhance air purification and filtration, improving indoor air quality. Press the ionizer button to activate or deactivate.



Figure 2: Detailed view of the Lasko XtraAir T48331 control panel, showing power, speed, oscillation, timer, and ionizer buttons.

This image displays the intuitive control panel located on the top of the fan, allowing direct access to all operational settings. The current speed and timer settings are indicated by illuminated LEDs.



Figure 3: The remote control for the Lasko XtraAir T48331 tower fan, mirroring the functions of the main control panel.

The compact remote control provides the convenience of adjusting fan settings from a distance. It includes buttons for power, speed, oscillation, timer, and ionizer functions. Please note that batteries for the remote control are not included.

MAINTENANCE

Regular cleaning is crucial for maintaining the performance, safety, and lifespan of your Lasko XtraAir T48331 tower

fan. It is recommended to clean your fan at least twice per month.

Cleaning Procedure:

- Disconnect Power:** Always unplug the fan from the electrical outlet before cleaning.
- Identify Vents:** Locate the intake vents (typically at the back) and exhaust vents (at the front) of the fan.
- Vacuum Cleaning:** Use a vacuum cleaner with a brush attachment to gently clean the outside of both the front exhaust grill and the rear intake vents. This helps remove accumulated dust and debris.
- Compressed Air (Optional):** If vacuuming does not completely remove all dust, use a can of compressed air to blow short bursts of air into the front exhaust vent. This can dislodge stubborn dust from internal components. After using compressed air, re-vacuum the rear intake vent to collect any dislodged dust.
- Exterior Wipe-Down:** Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners or allow water to drip into the interior of the fan.

Important: Your Lasko tower fan is designed not to be opened. Opening the unit can lead to safety concerns and will void the warranty.

Your browser does not support the video tag.

Video 1: How to Clean Your Lasko Tower Fan or Heater.

This video demonstrates the recommended cleaning procedure for Lasko tower fans, including identifying vents, using a vacuum with a brush attachment, and optionally using compressed air to remove dust from both intake and exhaust grilles. Regular cleaning helps maintain optimal performance and safety.

TROUBLESHOOTING

If you encounter issues with your Lasko XtraAir T48331 tower fan, refer to the common problem and solution below:

Problem	Possible Cause	Solution
Fan runs for a brief time, then unexpectedly shuts off.	Build-up of dust on the fan's internal components or vents.	Perform the regular cleaning steps outlined in the "Maintenance" section. Ensure all intake and exhaust vents are clear of dust and debris.

SPECIFICATIONS

- Model Name:** T48331
- Brand:** Lasko
- Product Dimensions:** 13"D x 13"W x 47.5"H
- Item Weight:** 13 Pounds
- Color:** Silver
- Power Source:** Corded Electric

- **Voltage:** 120 Volts
- **Wattage:** 60 watts
- **Number of Power Levels:** 4
- **Special Feature:** Oscillating, Air Ionizer, Remote Control, 8-Hour Timer
- **Control Method:** Remote
- **Indoor/Outdoor Usage:** Indoor
- **Specification Met:** ETL
- **UPC:** 046013461834

WARRANTY AND SUPPORT

For any additional questions or support regarding your Lasko XtraAir T48331 tower fan, please contact our customer service department.

Customer Service: 1-800-233-0268

Note: Opening your unit can lead to safety concerns and will void the warranty.